

User Guide



Moment™
with Google™

www.sprint.com

©2010 Sprint. SPRINT and the logo are trademarks of Sprint.
Other marks are the property of their respective owners.

5/20/10



Consejo: Para encontrar esta guía para usuarios en español, por favor visita a www.sprint.com y haz clic en **Support > Devices**.

To find this user guide in Spanish, please visit www.sprint.com and click **Support > Devices**.

Important Privacy Message – Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

Open Source Software – Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsungmobile.com/index.jsp>.


This device uses open source software. Press  > **MENU** and tap **Settings > About phone > Legal information** on the device for more details

Table of Contents

Tip: Looking for something? If you don't see it in the headings listed here, try the Index on page 201.

Introduction	i
Your Device's Menu	i
Section 1: Getting Started	1
1A. Setting Up Service	2
Setting Up Your Device	2
Activating Your Device	4
Setting Up Your Voicemail	5
Sprint Account Passwords	5
Getting Help	6
Section 2: Your Device	9
2A. Device Basics	10
Your Device	11
Viewing the Display Screen	14
Turning Your Device On and Off	17
Battery and Charger	18
Navigation and Customization	21

Displaying Your Phone Number	34
Making and Answering Calls	34
Entering Text with Onscreen Keyboard	41
Entering Text using the QWERTY Keyboard ..	44
Creating a Google Account	48
2B. Settings	50
Sound Settings	50
Display Settings	53
Language Settings	55
Location Settings	55
Messaging Settings	56
Call Settings	57
Airplane Mode	58
TTY Use With Sprint Service	59
Security Settings	60
2C. Call Log	66
Viewing Call Log	66
Call Log Options	67
Checking a Missed Call	69
Making a Call From Call Log	69
Saving a Number From Call Log	69

Altering a Number From Call Log	70
Erasing the Call Log	71
2D. Contacts	72
Adding a New Contacts Entry	72
Saving a Phone Number	73
Editing Sync Groups	74
Contacts Menu Options	75
Contacts Entry Options	76
Editing a Contacts Entry	77
Adding a Number to a Contacts Entry	77
Editing a Contacts Entry's Number	78
Assigning a Picture to an Entry	78
Deleting Entries	79
Adding Entries to Your Favorites	79
2E. Calendar & Tools	80
Before You Begin	80
Calendar	80
File Viewer	85
Alarm Clock	85
Calculator	87
Updating Your Device Firmware	87

Updating Your Android Operating System	93
Updating Your Profile	93
Updating Your PRL	93
2F. Voice Services	94
Automatic Speech Recognition (ASR)	94
Sending a Message	97
Looking Up a Contact	99
ASR Menus and Options	99
2G. microSD Card	102
Your Device's microSD Card and Adapter ...	102
Connecting Your Device to Your Computer ..	104
microSD Card Settings	105
Important Connection Information	106
2H. Camera	107
Taking Pictures	107
Recording Videos	111
2I. Bluetooth	114
Turning Bluetooth On and Off	114
Using the Bluetooth Settings Menu	115
Pairing Bluetooth Devices	117
Sending Contacts via Bluetooth	118

Disconnecting Bluetooth Connection During an Active Call	119
Section 3: Sprint Service	121
3A. Sprint Service: The Basics	122
Visual Voicemail	122
Text Messaging (SMS)	128
Multimedia Messaging (MMS)	130
Caller ID	134
Call Waiting	135
Making a 3-Way Call	135
Call Forwarding	136
Roaming	136
3B. Web and Data Services	141
Getting Started With Data Services	141
Navigating the Web	143
Wi-Fi	149
Email	151
Instant Messaging	163
Using the Android Market	164
Applications	165
NASCAR Sprint Cup Mobile	166
Sprint Football Live	168

Data Services FAQs	169
3C. Entertainment: TV and Music	170
TV	170
Music – Amazon MP3	171
Streaming Music	173
YouTube	173
3D. GPS Navigation	175
GPS Services	175
Google Maps	175
Sprint Navigation	177
Getting Driving Directions	178
Section 4: Safety and Warranty Information	183
4A. Important Safety Information	184
General Precautions	184
Maintaining Safe Use of and Access to Your Phone	185
Using Your Phone With a Hearing Aid Device	186
Caring for the Battery	188
Radio Frequency (RF) Energy	189
Owner's Record	191

User Guide Proprietary Notice	191
4B. Manufacturer's Warranty	192
Manufacturer's Warranty	192
Index.....	201

Introduction

This **User Guide** introduces you to Sprint® service and all the features of your new device. It's divided into four sections:

- ◆ Section 1: Getting Started
- ◆ Section 2: Your Device
- ◆ Section 3: Sprint Service Features
- ◆ Section 4: Safety and Warranty Information


Note: Because of updates in phone software, this printed guide may not be the most current version for your phone. Visit www.sprint.com and sign on to **My Sprint** to access the most recent version of the user guide.


WARNING: Please refer to the **Important Safety Information** section on page 184 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death or property damage.

Your Device's Menu

The following table outlines your device's main menu structure. For more information about using your device's menus, see "Navigation and Customization" on page 21.

From the Home screen, press **MENU** to open the menu:

- Add ()
- Wallpaper ()
- Search ()
- Notifications ()
- Settings ()

Device menus with additional options ("sub-options") appear with  adjacent to the list entry.

Tap this onscreen button to reveal these additional options and features.

MENU > Add
1: Shortcuts
1: Applications 2: Bookmark 3: Contact 4: Direct dial 5: Direct message 6: Directions & Navigation 7: Gmail label 8: Music playlist 9: Settings
2: Widgets
1: Analog clock 2: Calendar 3: Music 4: Picture frame 5: Power Control 6: Search 7: Sprint Football Live 8: SprintTV 9: Voicemail 10: WxWidget (large) 11. WxWidget (small) 12. YouTube
3: Folders
1: New folder 2: All contacts 3: Built in Exchange Contacts 4. Contacts with phone numbers 5: Google Contacts 6: Starred contacts 7: Work Contacts
4: Wallpapers
1: Pictures 2: Wallpaper gallery
MENU > Wallpaper
1: Pictures

2: Wallpaper gallery
MENU > Search
MENU > Notifications
MENU > Settings > Wireless & networks
1: Airplane mode (On/Off)
2: Wi-Fi (On/Off)
3: Wi-Fi settings
1: Wi-Fi 2: Network notification (On/Off) 3: Add Wi-Fi network
4: Bluetooth (On/Off)
5: Bluetooth settings
1: Bluetooth 2: Device name 3: Discoverable (On/Off) 4: Scan for devices
6: VPN settings
7: Mobile networks
1: Data roaming (On/Off) 2: Call Guard (On/Off) 3: Data Roaming Guard (Default/Always ask/Never ask) 4: System select (Home only/Automatic)
8: Dial Up Networking (On/Off)

MENU > Settings > Call settings

1: North american dialing

2: International dialing

3: TTY

1: TTY Off

2: TTY HCO

3: TTY VCO

4: TTY Full

MENU > Settings > Sound & display**Sound settings:**

1: Silent mode (On/Off)

2: Ringer volume

1: Use Incoming call volume for notifications

3: Media volume

4: Phone ringtone

1: Animato Tone

2: Beat Plucker

3: Bell Phone

4: Bentley Dubs

5: Carribean Ice

6: Ether Shake

7: Friendly Ghost

8: Growl

9: Insert Coin

10: Love Flute

11: Medieval Jaunt

12: Romancing The Tone

13: Samsung Tune

14: Sitar Versus Sitar

15: Twirl Away

16: Very Alarmed

5: Phone vibrate (On/Off)

6: Notification ringtone

1: Silent

2: Beat Box Android

3: Caffeinated Rattlesnake

4: Captain's Log

5: Dear Deer

6: Don't Panic

7: Heaven

8: Highwire

9: Kzurb Sonar

10: Look At Me

11: Missed It

12: On The Hunt

13: Ta Da

14: Tinkerbell

15: Voila

7: Audible touch tones (On/Off)

8: Audible selection (On/Off)

9: Haptic feedback (On/Off)

10: SD card notifications (On/Off)

Display settings:

1: Orientation (On/Off)

2: Animation

1: No animations

2: Some animations

3: All animations

3: Auto Brightness (On/Off)

4: Brightness

5: Screen timeout	
1: 8 seconds	2: 15 seconds
3: 30 seconds	4: 1 minute
5: 2 minutes	6: 10 minutes
7: 30 minutes	
6: Keyboard timeout	
1: 3 seconds	2: 6 seconds
3: 20 seconds	4: 1 minute
MENU > Settings > Location & security	
My Location:	
1: Use wireless networks (On/Off)	
2: Use GPS satellites (On/Off)	
Screen unlock pattern:	
1: Set unlock pattern	
2: Require pattern (On/Off)	
3: Use visible pattern (On/Off)	
4: Use tactile feedback (On/Off)	
Passwords:	
1: Visible passwords (On/Off)	

Credential storage:	
1: Use secure credentials (On/Off)	
2: Install from SD card	
3: Set password	
4: Clear storage	
MENU > Settings > Applications	
1: Unknown sources (On/Off)	
2: Quick launch	
3: Manage applications	
4: Running services	
5: Development	
1: USB debugging (On/Off)	
2: Stay awake (On/Off)	
3: Allow mock locations (On/Off)	
MENU > Settings > Accounts & sync	
General sync settings:	
1: Background data (On/Off)	
2: Auto-sync (On/Off)	

Manage accounts:

MENU > **Settings** > **WorkMail & sync**

MENU > **Settings** > **Privacy**

Location:

1: Use My Location (On/Off)

Settings:

1: Back up my settings (On/Off)

Personal data:

1: Factory data reset

MENU > **Settings** > **SD card & phone storage**

SD card:

1: Total space

2: Available space

3: Unmount SD card

4: Format SD card

Internal phone storage:

1: Available space

MENU > **Settings** > **Search**

Web search:

1: Google search settings

1: Show web suggestions

2: Search history

3: Manage search history

Quick Search Box:

1: Searchable items

1: Browser (On/Off)

2: Contacts (On/Off)

3: Apps (On/Off)

4: Music (On/Off)

5: Voicemail (On/Off)

6: YouTube (On/Off)

2: Clear search shortcuts

MENU > **Settings** > **Language & keyboard**

1: Select locale

1: English

2: Español

Text settings:

1: Android keyboard (On/Off)

2: Android keyboard
1: Vibrate on keypress (On/Off) 2: Sound on keypress (On/Off) 3: Auto-capitalization (On/Off) 4: Voice input (On/Off) 5: Quick fixes (On/Off) 6: Show suggestions (On/Off) 7: Auto-complete (On/Off)
3: Device keyboard
1: Auto-replace (On/Off) 2: Auto-cap (On/Off) 3: Auto-punctuate (On/Off)
4: User dictionary
MENU > Settings > Accessibility
1: Accessibility (On/Off)
Accessibility services:
1: KickBack (On/Off)
2: SoundBack (On/Off)
3: TalkBack (On/Off)
MENU > Settings > Text-to-speech
1: Listen to an example
2: Install voice data

3: Always use my settings (On/Off)
4: Speak incoming caller ID (On/Off)
Default settings:
1: Speech rate
1: Very slow 2: Slow 3: Normal 4: Fast 5: Very fast
2: Language
1: American English 2: Spanish
MENU > Settings > Date & time
1: Automatic (On/Off)
2: Set date
3: Select time zone
4: Set time
5: Use 24-hour format (On/Off)
6: Select date format
1: Normal (MM/DD/YYYY) 2: MM/DD/YYYY 3: DD/MM/YYYY 4: YYYY/MM/DD

MENU > <i>Settings</i> > <i>About phone</i>	
1: System Updates	
1: Update Firmware 3: Update PRL	2: Update Profile 4: Update Android
2: Status	
1: Battery status 3: MIN 5: MEID 7: Signal strength 9: Service state 11: Mobile network state 13: Bluetooth address	2: Phone number 4: PRL Version 6: Network 8: Mobile network type 10: Roaming 12: Wi-Fi MAC address 14: Up time
3: Battery use	
4: Legal information	
1: Open source licenses 2: Google legal 3: Privacy Alert from Sprint	
5: System tutorial	
6: Model number	
7: Firmware version	
8: Baseband version	
9: Kernel version	

10: Build number
11: Hardware version
<i>In Use Menu</i>
While in an active call, press MENU to display the following options:
1: Show/Hide dialpad 2: Add call 3: End call 4: Mute/Unmute 5: Speaker (On/Off) 6: Bluetooth (On/Off)

WARNING: If your device has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. See “Manufacturer’s Warranty” on page 192.

Section 1
Getting Started



1A. Setting Up Service


- ◆ Setting Up Your Device (page 2)
- ◆ Activating Your Device (page 4)
- ◆ Setting Up Your Voicemail (page 5)
- ◆ Sprint Account Passwords (page 5)
- ◆ Getting Help (page 6)

Setting Up Your Device

1. Install the battery.

- Remove the battery from its packaging.
- Insert the battery into the opening in the back of the device, making sure the connectors align. Gently press down to secure the battery.
- Position the battery cover over the battery compartment and press down until you hear a click.





2. Press  to turn the device on.

- If your device is activated, it will turn on, search for Sprint service and enter standby mode.



3. Make your first call.

- From the Home screen, touch  to access the onscreen dialer.
 - If your device is locked, touch and drag the lock icon to the right.
- Use the onscreen dialpad to enter a phone number. (The phone number appears.)
- Tap .

WARNING: If your device has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. See “Manufacturer’s Warranty” on page 192.

Note: Your device’s battery should have enough charge for your device to turn on and find a signal, set up your voicemail and make a call. You should fully charge your battery as soon as possible.



Note: To unlock your phone from this screen, touch and drag the lock icon to the right.



Activating Your Device

- If you purchased your device at a **Sprint Store**, it is probably activated and ready to use.
- If you received your device in the mail and it is for a **new Sprint account or a new line of service**, it is designed to activate automatically. To confirm your activation, make a phone call.
- If you received your device in the mail and you are **activating a new device for an existing number on your account**, you will need to go online to activate your new device.
 - From your computer's Web browser, go to www.sprint.com/activate and complete the onscreen instructions to activate your device.

When you have finished, make a device call to confirm your activation. If your device is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.

Tip: Do not press  while the device is being activated. Pressing  cancels the activation process.

Note: If you are having difficulty with activation, contact Sprint Customer Service by dialing **1-888-211-4727** from any other phone.

Setting Up Your Voicemail

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your device is activated. Always use a password to protect against unauthorized access.

1. From the phone standby mode, touch and hold **1**.
2. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Note: Voicemail Password

Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

For more information about using your Visual Voicemail, see “Visual Voicemail” on page 122.

Sprint Account Passwords

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account and your data services account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

Account Username and Password

If you are the account owner, you will create an account username and password when you sign on to www.sprint.com. (Click **Need to register for access?** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at www.sprint.com.

Voicemail Password

You'll create your voicemail password (or passcode) when you set up your voicemail. See "Setting Up Your Voicemail" on page 5 for more information on your voicemail password.

Data Services Password

With your Sprint device, you may elect to set up an optional data services password to control access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to www.sprint.com or call Sprint Customer Service at **1-888-211-4727**.

Getting Help













Managing Your Account

Online: www.sprint.com

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).

- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other products like Sprint Picture Mail, games, ringers, screen savers and more.

From Your Sprint Phone

- Tap    to check minute usage and account balance.
- Tap    to make a payment.
- Tap    to add a new line of service, upgrade your device, purchase accessories or access other account services.
- Tap    to access a summary of your Sprint service plan or get answers to other questions.

From Any Other Phone

- Sprint Customer Service: **1-888-211-4727**.
- Business Customer Service: **1-800-927-2199**.

Sprint 411

Sprint 411 gives you access to a variety of services and information, including residential, business and government listings, movie listings or showtimes, driving directions, restaurant reservations and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

▶ Tap **4** GHI **1** **1** .

Sprint Operator Services

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

▶ Tap **0** **+** .


For more information or to see the latest in products and services, visit us online at www.sprint.com.

Section 2
Your Device



2A. Device Basics

- ◆ Your Device (page 11)
- ◆ Viewing the Display Screen (page 14)
- ◆ Turning Your Device On and Off (page 17)
- ◆ Battery and Charger (page 18)
- ◆ Navigation and Customization (page 21)
- ◆ Displaying Your Phone Number (page 34)
- ◆ Making and Answering Calls (page 34)
- ◆ Entering Text with Onscreen Keyboard (page 41)
- ◆ Entering Text using the QWERTY Keyboard (page 44)
- ◆ Creating a Google Account (page 48)

Tip: Device Software Upgrades – Updates to your device's software may become available from time to time. Sprint will automatically upload critical updates to your device. You can also use the menu to check for and download updates. Press  > **MENU** and tap **Settings** > **About phone** > **System Updates** > **Update Firmware** to search for and download available updates.

Device software can also be updated via the Samsung PC Update tool. See "Updating Your Device Firmware" on page 87.


Your Device



Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Status Bar Icons** provide information about your device's status and options, such as signal strength, roaming, ringer setting, messaging and battery charge.
3. **Display Screen** displays all the information needed to operate your device, such as the call status, the Contacts list, the date and time and the signal and battery strength.
4. **MENU Key** allows you to access your device's main functions menu: Add, Wallpaper, Search, Notifications and Settings. While in a menu, press to open a list of actions available from the current screen or onscreen option.
 - During an active call, press to open additional call options such as: Show dialpad, Add call (3-way call), End call, Mute/Unmute, Speaker On/Off or Activate/deactivate Bluetooth.


5. **HOME Key** returns you to the Home screen. Press and hold to open the recently-used applications window.
6. **TALK Key** allows you to place or receive calls, answer Call Waiting, use 3-Way Calling or activate Voice Dial.
 - While a Contacts entry or phone number is highlighted, tap to call that contact or phone number.
7. **Optical Joystick** lets you highlight and select (tap) onscreen items.
8. **External Speaker** lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing the volume button. The speaker also lets you hear the caller's voice in speakerphone mode.
9. **Mirror**, as part of the built-in camera, lets you see yourself when taking a self-portrait picture.
10. **Camera Lens**, as part of the built-in camera, this 3.2 megapixel camera lets you take pictures and videos.
11. **Flash**, as part of the built-in camera, provides an additional light source for pictures during low-light conditions.
12. **Microphone** allows other callers to hear you clearly when you are speaking to them.
13. **END/POWER Key** lets you turn the device on or off, end a call or turn off the LCD.
 - When the screen is turned off, press once to return to Screen lock mode.
 - While the device is unlocked and not on an active call, press and hold to display the Phone options menu (Silent mode, Airplane mode, Power off).
14. **BACK Key** deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu, closes a dialog box or exits an onscreen menu/option.
15. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
CAUTION! Inserting an accessory into the incorrect jack may damage the device.

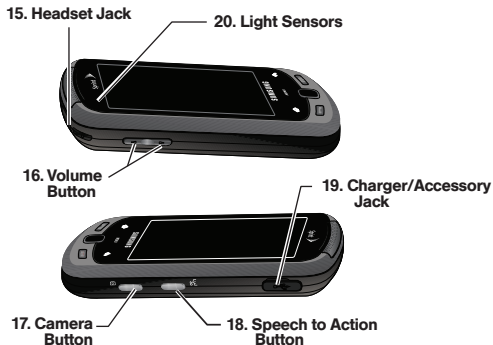

16. **Volume Button** allows you to adjust the ringer volume in standby mode or adjust the voice volume during a call.
17. **Camera Button** lets you activate the camera and camcorder and take pictures and videos.

18. **Speech to Action Button** activates the Speech to Action (Voice Control) function that lets you dial phone numbers, launch applications and launch other actions by speaking a name, command or a phone number.
19. **Charger/Accessory Jack** allows you to connect the phone charger or a USB cable (included).
CAUTION! Inserting an accessory into the incorrect jack may damage the device.
20. **Light sensors** let you use the ambient light level to adjust the screen brightness/contrast.
- In a bright light condition (outdoors), the sensors cause the device to increase the brightness and contrast for better viewing.
 - In a dim light condition (while talking on the phone) the sensors detect talk activity and lock the keypad to prevent accidental key presses.

Landscape Phone Features

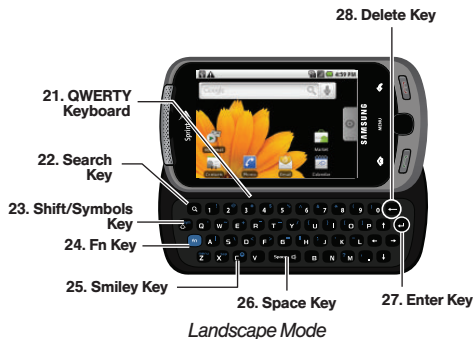












21. **QWERTY Keyboard** provides an alphanumeric character keyboard layout. Lets you enter numbers, letters and characters, as well as navigate within menus.
22. **Search Key** returns you to the Home screen and activates the Google™ search field.





23. **Shift/Symbols Key** lets you toggle alphabet characters between mixed case, uppercase and lowercase. Character case remains as selected until the Shift key is pressed again. In combination with the **fn**, lets you access symbol characters.
24. **fn Key** (Function) key, toggle to access the numbers/symbols atop each key on the QWERTY keyboard.
25. **Smiley Key** (when used with the **fn** key) lets you access Smiley icons (Emoticons).
26. **Space Key** lets you add spaces between words and characters.
27. **Enter Key** lets you enter additional lines of text.
28. **Delete Key** deletes characters from the display in text entry mode.










Viewing the Display Screen








Your device's display screen provides information about your device's status and options. This list identifies the symbols you'll see on your device's display screen:

Status Bar – Service Icons	
	Activation Not Completed – Your automatic device activation process failed, please retry.
	Signal Strength – Shows your current signal strength. (More bars = stronger signal.)
	No Service – Your device cannot find a usable signal.
	Airplane Mode On – Your device will not make or receive calls or provide data access. Local applications are still available.
	Roaming – Your device is “roaming” off the Nationwide Sprint Network.
	3G Available – Sprint 1xRTT data service is active.
	3G Communicating – Sprint 1xRTT data service is active and communicating. When active, the icon is animated.
	3G Dormant – Sprint 1xRTT data service is currently dormant.
	Data Service Available – Sprint mobile broadband data service (EVDO) is available.







Status Bar – Service Icons	
	Data Service Communicating – Sprint EVDO data service is active and communicating (see page 142.)
	Data Service Unavailable – Data service is currently unavailable.

Status Bar – Status Icons	
	Call in Progress – A voice call is in progress. Audio is routed through either the earpiece or external speaker.
	Bluetooth Call in Progress – A voice call is being routed through a Bluetooth headset.
	Missed Call – You have missed an incoming call.
	Call Muted – The device microphone has been muted.




Status Bar – Status Icons	
	Speaker – Speakerphone feature is enabled.
	Battery Strength – Shows your current battery charge level. (Icon shown is fully charged.)
	Battery Charging – Shows your current battery charge level and indicates it is charging.
	Battery Low – Shows your current battery charge level is very low.
	Battery Critical – Shows your current battery charge level requires attention and your device will soon shut off.
	Device Power Critical – Shows your current battery only has three percent power remaining and will immediately shutdown.
	Bluetooth Active – Bluetooth technology is active and enabled.
	Bluetooth Connected – Bluetooth technology is active and communicating with an external device.
	GPS Location On – Device location feature is on and available for location-based services such as GPS Navigation (see page 175).

Status Bar – Status Icons	
	GPS Communicating – Device location feature is on and communicating.
	Wi-Fi Connected – Wi-Fi is connected, active and communicating with a Wireless Access Point (WAP).
	Wi-Fi Connection Issue – Wi-Fi is active but there is a communication issue with the target Wireless Access Point (WAP).
	MicroSD Unmounted – The internal microSD card has been disconnected from the device and is now ready for either removal or formatting.
	USB Connection – The device has detected an active USB connection.
	Sign-in/Sync Error – There has been an issue with your connection to the Google server or you were not properly signed into your account. In order to use Google application or sync features, you must set up and sign into an active Google account.
	Alarm Event – Shows you have an upcoming alarm event.



Status Bar – Status Icons

	Silence All – All incoming sounds are turned off.
	Vibrate Only – The ringer is set to vibrate only.
	Media Playback – A media file is currently being played back on the device.
	Data Synchronization – Application sync is active and synchronization is in progress for Gmail, Calendar and Contacts.
	Download Successful – A recent software download was successfully downloaded.
	Calendar Reminder – Shows you have a reminder of an upcoming Calendar event.

Status Bar – Messaging Icons


	Text Message – You have new text messages.
	MMS Message – You have new multimedia messages.
	Voicemail Message – You have new voicemail messages.

Status Bar – Messaging Icons

	Internet Email message – Shows you have received a new Internet email message.
	Moxier Outlook Email message – Shows you have received a new Outlook email message via the Work Email application.

Turning Your Device On and Off

Turning Your Device On

- Press and hold .



Once your device is on, it may display “Searching for Service.” When your device finds a signal, it enters standby mode – the device’s idle state. At this point, you are ready to begin making and receiving calls.

If your device is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your device automatically returns to standby mode.

In Power Save mode, your device searches for a signal periodically without your intervention. You can also initiate a search for Sprint service by pressing any key (when your device is turned on).

Tip: The Power Save feature conserves your battery power when you are in an area where there is no signal.

Turning Your Device Off

1. Press and hold  for two seconds until you see the powering-down animation on the display screen.
2. Touch  to power Off the device.

Your screen remains blank while your device is off (unless the battery is charging).


Battery and Charger

WARNING: Use only Sprint-approved or Samsung-approved batteries and chargers with your device. The failure to use a Sprint-approved or Samsung-approved battery and charger may increase the risk that your device will overheat, catch fire or explode, resulting in serious bodily injury, death or property damage.

Sprint-approved or Samsung-approved batteries and accessories can be found at Sprint Stores or through Samsung; or call 1-866-866-7509 to order. They're also available at www.sprint.com.

Battery Capacity

Your device is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 5 hours of continuous digital talk time.

At 10% of charge capacity, the battery icon blinks. At 3% of charge capacity, there are only a few minutes of talk time left, the device sounds an audible alert, displays a critical charge icon () , then turns off.

Note: Long backlight settings, searching for service, vibrate mode, browser use and other variables may reduce the battery's talk and standby times.

Tip: Watch your device's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

- See "Setting Up Your Device" on page 2.

Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Press the battery cover and slide it away from camera lens.
3. Carefully remove the battery from the device.

WARNING: Do not handle a damaged or leaking Li-Ion battery as you can be burned.



Charging the Battery

Keeping track of your battery's charge is important. If your battery level becomes too low, your device automatically turns off and you will lose any information you were just working on.

Always use a Sprint-approved or Samsung-approved desktop charger, travel charger or vehicle power adapter to charge your battery.

- ▶ Plug the flat end of the charger into the device's charger jack and the other end into an electrical outlet. The device turns on in with the screen locked and indicates both its charge state and percent of charge.

With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

Extending Your Battery Life

Active applications, light levels, Bluetooth usage and GPS functionality all act to drain your battery. The following is a list of helpful tips that can help conserve your battery power:

- Reduce your backlight on time. See "Changing the Backlight Time Length" on page 53.
- Turn Bluetooth off when not in use. See "Turning Bluetooth On and Off" on page 114.
- Turn Wi-Fi off when not in use. See "Turning Wi-Fi On and Off" on page 149.
- Deactivate the GPS when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery. See "Activating Location Mode" on page 175.
- Delete the Weather Widget from your Desktop. This Widget updates information every 30 minutes; each update drains your battery. See "Adding and Removing Widgets" on page 28.
- When taking pictures, do not use a flash unless you have to. See "Camera Settings" on page 108.
- Do not wait until your battery is completely depleted before charging your device. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.


Navigation and Customization

The Samsung Moment™ by Google™ is a touch-sensitive device which allows you to not only select an onscreen option with a single tap, but also scroll through long menu lists. Simply slide up and down through the display with your fingertip.

Note: The Optical Joystick on your device lets you scroll through onscreen items. Many menus feature a scroll bar on the right to help you keep track of your position in the menu.

Tip: Some menu options are also accessed by pressing and holding an onscreen item, such as a Contact entry from the Contacts tab.


Home Screen Overview

The Home screen is the starting point for many applications and functions, and it allows you to add items like application icons, shortcuts, folders or Google widgets to give you instant access to information and applications. This is the default page and accessible from any menu by pressing .




- **Status bar:** located at the top of the screen, displays both Notification and Status icons.

■ **Notification area** displays icons associated with end-user notifications such as: email messages, calls (missed, call in progress), new voicemail, upcoming event, USB connection and Text/MMS messages. See “Using the Notifications Panel” on page 33.

- These notifications appear at the top-left of the screen (within the Status bar) and display important user information.
- This information can be accessed by either swiping down from the Status bar (page 33) or by accessing the Notifications panel ( > **MENU** > **Notifications**).

■ **Status area** displays icons associated with the status of the device such as communication, coverage, Bluetooth and Wi-Fi communication, battery levels, GPS, etc.


- **Main Home Screen** is a customizable screen that provides information about notifications and device status, allows access to application Widgets.


- **Extended Home Screens:** (page 22) the Home screen extends beyond the visible screen width to provide more space for adding icons, widgets and more. Press  to access the main Home screen (1) which appears as the default “page” on the device and then slide your finger horizontally across the screen to go to the left or right side of the extended Home screen (2). There are two “additional” screens apart from the main Home screen.

- Think of it as having a desktop so wide that your screen can only display a portion at a time.

Tip: The Status bar is visible across all Home Screens.

A total of three screens are available. You cannot add any additional screens.

Tip: While on an extended Home screen, press  to return to the main Home screen.

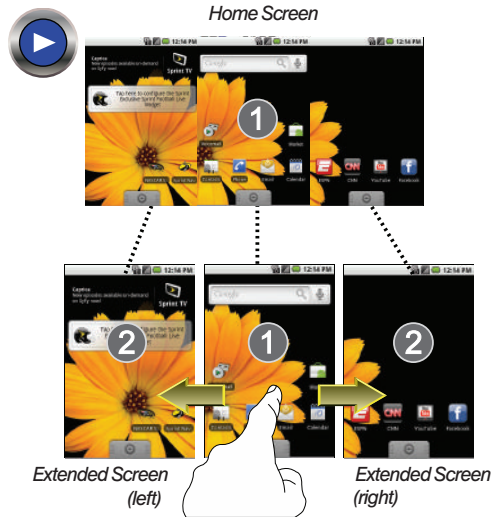

- **Google search** is an onscreen Internet search engine powered by Google™.

- **Widgets** are self-contained onscreen applications (not shortcuts). These can be placed onto any of the available screens (Home or Extended). See “Adding and Removing Widgets” on page 28.
- **Shortcuts** are shortcut icons that launch available device applications such as Voicemail, Contacts, Dialer, Email, Alarm Clock, etc. Although some are already found on each of the three Extended Home Screens, the majority can be found within the Applications tab. Shortcuts can be pulled out from this tab or pulled into it (removed from an Extended Home screen). See “Creating Shortcuts” on page 27.
- **Applications tab** houses all of your available applications. Some of these applications also exist as Widgets that can be actively placed onto an available screen. See “Using the Applications Tab” on page 24.

Using the Applications Tab

All of your device's applications are located within the Applications tab. This tab houses shortcuts to your currently available applications.










Note: This tab houses all default and downloaded applications (installed from Android Market or from the Web).








1. Press  and tap  to open the tab.
 - To close the Applications tab, tap  again or press .
2. Scroll through the list and tap an icon to launch the associated application.
 - The tab contains device applications such as Alarm Clock, Browser, Calculator, Camera, Market, NASCAR Sprint Cup Mobile, Sprint Football Live, Sprint Navigation, SprintTV, YouTube, The Weather Channel and much more.



















Applications




The following is a listing of the current applications available on both the Home screens and via the Applications tab.

<i>Application Icons</i>	
	Alarm Clock – Accesses the Alarm Clock application (page 85).
	Bejeweled Demo – Launches the demonstration version of the Bejeweled game.
	Browser – Launches the Sprint Powerdeck browser (page 141).
	Calculator – Launches the onscreen calculator application (page 87).
	Calendar – Launches the Calendar applications that syncs itself to either your Google or Outlook® Work calendar (page 80).
	Camera – Launches the built-in camera (page 107).
	Contacts – Displays the Contacts tab listing current contacts, synced from either your Google or Outlook account (page 72).

<i>Application Icons</i>	
	Device Self Service – Launches a built-in servicing application that can assist you with either activating your new device, updating software (over the air) or connecting to ecare.
	Phone – Launches the phone dialer (page 34).
	Email – Provides access to your Internet email accounts (such as Google, Yahoo, etc). (page 151).
	File Viewer – Launches a file browser that allows you to view only supported image files and text files (page 85).
	Gallery – Displays a Gallery of camera images and video stored in the microSD card (page 109).
	Gmail – Provides access to your Gmail account (page 152).
	Instant Messaging – Provides access to popular Instant Message applications (page 163).

<i>Application Icons</i>	
	Maps – Launches a Web-based dynamic map that helps you find local businesses, locate friends, view maps and get driving directions (page 175).
	Market – Browse and search for applications on Android Market (page 164).
	Messaging – Provides access to your text messaging application (SMS) (page 128).
	MP3 Store – Launches the Amazon MP3 music download service.
	Music – Launches the built-in Music Player (page 172).
	NASCAR Sprint Cup Mobile – Launches the Web-based NASCAR application (page 165).
	Photo & Video Place – Manages your various social networking spaces or places.
	Settings – Access the device's built-in Settings menu (page 50).
	Sprint Football Live – Launches the Web-based Sprint Football Live application.

<i>Application Icons</i>	
	Sprint Navigation – Launches a built-in GPS functionality, giving you access to a number of location-based services (page 177).
	Sprint TV – Allows you to listen to audio clips and to view video clips right from your device's display (page 170).
	Talk – Launches a Web-based application that lets you chat with family and friends over the Internet for free.
	The Weather Channel – Launches a Weather Channel application, you can also update this from the Market (page 164).
	Voice Search – Launches your device's built-in automatic speech recognition (ASR) software, called Voice Control, to initiate a Google search according to your voice instructions.
	Voice Control – Launches your device's built-in automatic speech recognition (ASR) software, called Voice Control, to dial a phone number in your Contacts or to launch phone functions (page 94).
	Voicemail – Launches Visual Voicemail (page 122).

<i>Application Icons</i>	
	Work Email – Provides access to your Outlook email account (page 157).
	Work Tasks – Provides access to your Outlook tasks.
	YouTube – Launches the YouTube webpage via the browser (page 143).

Note: The Work Email shortcut only provides access to your Outlook email account. The Email shortcut provides access to POP3 and other Internet email clients (such as Gmail™, Yahoo™, etc.)

Customizing Your Home Screen

You can customize your Home screen by doing the following:

- **Creating Shortcuts**
- **Adding and Removing Widgets on the Home Screen**
- **Repositioning Widgets**
- **Creating Folders**
- **Changing the Background (Wallpaper)**

Creating Shortcuts

Shortcuts are different than the current Home screen Widgets that only launch an application. Shortcuts activate a feature, action or launch an application.


Note: To move a shortcut from one screen to another, it must first be deleted from its current screen. Activate the new screen, then add the shortcut.


To add a shortcut from the Applications tab:

1. Press  to activate the Home screen.
2. Tap the Applications tab () to reveal all your current applications.
3. Scroll down through the list and locate your desired application.
4. Touch and hold the onscreen icon. This creates an immediate shortcut of the selected icon and closes the Applications tab. The new shortcut then appears to hover over the Home screen.
5. While still holding the onscreen icon, position it on the current page. Once complete, release the screen to lock the new shortcut into its new position on the current screen.





To add a shortcut via the Add to Home screen:

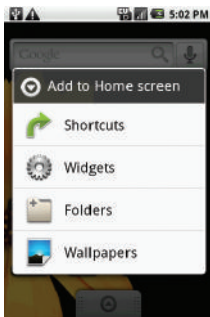1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to Home screen** window tap **Shortcuts**.
4. Tap a selection from the available list:
 - Applications
 - Bookmark
 - Contact
 - Direct dial
 - Direct message
 - Directions & Navigation
 - Gmail label
 - Music playlist
 - Settings
5. Follow the onscreen instructions to add the new shortcut to your current Home screen.



To delete a shortcut:

1. Press  to activate the Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the icon over the Delete tab () and release it.




Delete (Shortcut or Widget)

Adding and Removing Widgets


Widgets are self-contained applications that reside in either your Applications tab or on the main or extended Home screens. Unlike a shortcut, this Widget appears as an onscreen application.

Note: To move a Widget from one screen to another, it must first be deleted from its current screen. Activate the new screen, then add the Widget.

To add a Widget:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to Home screen** window tap **Widgets**.
4. Tap an available Widget to place it on your current screen.
 - Choices include: **Analog clock, Calendar, Music, Picture frame, Power Control, Search, Sprint Football Live, SprintTV, Voicemail, WxWidget (large), WxWidget (small) and YouTube.**

To remove a Widget:

1. Touch and hold a Widget until you can move it around on the screen.
2. In a single motion, drag it over the Applications tab, which then converts into a Trash icon ().
 - As you place the Widget into the Trash, both items turn red.
 - This action **does not** delete the Widget, just removes it from the current screen.

To place a Widget onto a different screen:

1. Follow the steps to remove the Widget from the current screen (page 29).


Note: A Widget cannot be dragged from a current screen to an adjacent screen. It must first be removed from its current location, then added back to a new current screen.

2. Touch and drag across your screen to view another available screen (there are three available screens: 1 Home and 2 Extended screens), see page 22.
3. Follow the steps to add a Widget to the current screen (page 29).

Creating and Managing Folders

Folders are located on any of the three available screens and can contain both files (such as data and images) and Contact information or entries.


To create a folder onscreen:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to Home screen** window tap **Folders**.
4. Tap an available folder type to place it on your current screen.
 - Choices include **New folder**, **All contacts**, **Built in Exchange Contacts**, **Contacts with phone numbers**, **Google Contacts**, **Starred contacts** or **Work Contacts**.

Note: Starred contacts are those Contact entries tagged as very important.

Accessing Recently-Used Applications


Your device keeps a running list of your six most recently used applications.

1. Press and hold  to open the recently-used applications window.
2. Tap an icon to open the related application.

Menu Navigation

There are three ways to navigate through a menu:

- Using your finger
- Using the Optical Joystick
- Using the built-in arrow keys

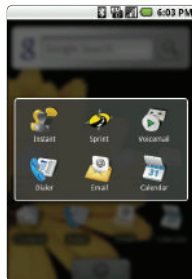


Selecting Menu Items Using your Fingers

As you navigate through the menu, you activate menu options by tapping the onscreen entry. Select any option by tapping it.

1. Tap an onscreen icon to launch a menu or feature.
2. Scroll your finger across the screen to navigate through a menu list (bottom up or top down).
3. Tap a menu item to make a selection or activate a field.

For example, to launch the Dialer:

- ▶ Tap  from the Home screen.

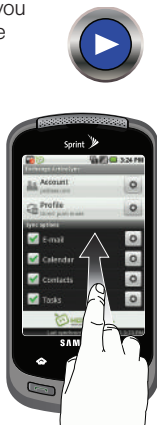

Changing the Screen Orientation



The Samsung Moment™ is capable of automatically changing the orientation of some onscreen content. The device's built-in accelerometer senses movement and changes its angle/orientation.

This allows the device to change the onscreen content (images, video, Web pages) to properly display based on the current angle (some screens may not automatically change).



Although most screens will change orientation once the QWERTY keyboard is opened, this feature can be manually enabled to change the orientation for all applicable screens when rotation is detected.

To activate the auto-rotate feature:


1. Press  > **MENU** and tap  > **Sound & display**.
2. Tap **Orientation**. A checkmark indicates the feature is enabled. See “Changing the Screen Orientation” on page 53.
 - Clear the **Orientation** checkmark to disable this automatic orientation adjustment.


Selecting Menu Items Using your Optical Joystick

The Optical Joystick works much like any standard mouse. Scroll your finger across the surface of the Optical Joystick to move around the screen or navigate up or down a list.

The direction of your onscreen movements while using the Optical Joystick is determined by the current orientation of your device.



- When your QWERTY keyboard is visible, your device is placed into Landscape mode.
- When the keyboard is hidden, your device is placed into Portrait mode.

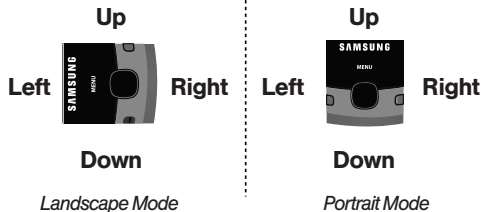As you navigate through the menu by scrolling across your Optical Joystick, menu options are highlighted. Select any option by highlighting it and pressing .




- Scroll over the Optical Joystick to move around the screen.
- Press the Optical Joystick to select an onscreen option or entry.

For example, to launch the Dialer:



1. From the Home screen, use your finger to scroll over the Optical Joystick.
2. Highlight . Scrolling over the Optical Joystick highlights the Dialer icon on the screen.
3. Press .

Selecting Menu Items Using your Keyboard

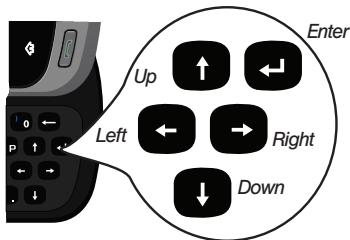Access the QWERTY keyboard and locate the navigation buttons, located at the right of the keyboard.



For example, to use the Keyboard:

1. Slide open the device and access the QWERTY keyboard.
2. From the Home screen, press the arrow keys to highlight the different Widgets.
3. Highlight  and then press .

Backing Up Within a Menu

To go to the previous menu:

- Press .

To return to Home screen:

- Press .

Using the Notifications Panel



 



The Notification area indicates new message events (data sync status, new messages, calendar events, call status, etc). You can expand this area to provide more detailed information about the current onscreen notification icons.

1. Touch and hold the Status bar, then slide your finger down the screen.
2. Tap a notification entry to open the associated application.


Note: The Notifications panel can also be opened on the Home screen by pressing **MENU** and tapping **Notifications**.

Making and Answering Calls


Making Calls

1. Press  and then tap .
2. Enter a phone number using the onscreen dialpad. (If you make a mistake while dialing, tap  to erase the numbers.)
3. Tap . (To make a call when you are roaming and Call Guard is enabled, select **Roam Call** and tap . See “Call Guard” on page 138.)
4. Press  when you are finished.



Tip: To redial your last outgoing call, press  twice.

To redial other recent numbers, press , tap a number from the Call log list and press  again.

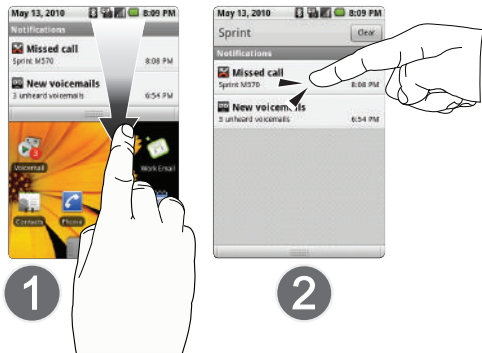When making calls off the Nationwide Sprint Network, always dial using 11 digits (1 + area code + phone number).



Displaying Your Phone Number

- ▶ Press  > **MENU** and tap  > **About phone** > **Status**. (Your phone number and other information about your device and account is displayed.)


You can also place calls from your device by speed dialing numbers from your Contacts (page 40) and using your History listings (page 69).

Dialing Options


When you enter numbers within the Dialer, you will see three onscreen options.

To initiate an option, tap the onscreen button.

- **Mute:** To mute the microphone.
- **Speaker:** To route the device's audio through the speaker (On) or through the earpiece (Off).
- **Dialpad:** To enter dial tones using the onscreen dialpad.

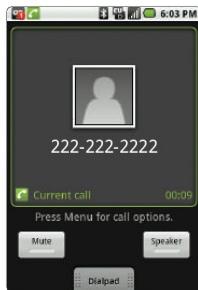

Answering Calls


1. Make sure your device is on. (If your device is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call.

Your device notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. You may also see the caller's phone number, if available.

To select an option, use the corresponding action.

- **Volume Down button** to mute the ringer.
-  to send the call to your voicemail box.


Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide Sprint Network. Please see "Roaming" on page 136 for more information.


- Select **OK** to answer the call. (See “Call Guard” on page 138 for additional information.)

Note: When your device is off, calls go directly to voicemail.


Ending a Call


- Press .

Missed Call Notification


When you do not answer an incoming call, the Status bar indicates .

To display a Missed Call entry from the Home screen:


1. Touch and hold the Status bar, then slide your finger down the screen.
2. Tap the Missed Calls entry () . This opens the Call log screen.
3. Tap an entry and select **Return call**.
– or –

Highlight an entry using the Optical Joystick and press  to return the call.

Calling Emergency Numbers


You can place calls to 911 (dial , even if your device is locked or your account is restricted.

Note: When you place an emergency call, your device automatically enters Emergency mode.

During an emergency call, press  to display your options. Select an option.

- **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option is displayed as **Speaker Off** to deactivate.)
- **Hide dialpad** to hide the onscreen dialpad.
- **End call** to end the current call.

To exit Emergency mode:

1. Press  to end a 911 call.
2. Tap **Exit** on the Emergency Call Back mode.

Note: When you end the 911 call, you are returned to the Emergency Call Back mode.

Within the Emergency Call Back mode, tap **OK** or press the **Home** key to use another menu.

Enhanced 911 (E911) Information

This device features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your device seeks information to calculate your approximate location.

Note: Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important: **Always report your location to the 911 operator when placing an emergency call.** Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your device.

In-Call Options


Touch and drag up on the **Dialpad** tab (bottom of the active call screen) to use the onscreen dialpad to enter additional numbers, for example, an extension or access code.

- For example: When you call your bank's 800 number, use your dialpad to enter your account number and PIN.

Pressing **MENU** during a call displays a list of available in-call features. To select an option, tap the corresponding option.

- **Show/Hide dialpad** to toggle the appearance of the onscreen dialpad.
- **Add call** press and hold to initiate a 3-way call (page 135).
- **Join** to join two currently active calls (conference).

Call routed through Bluetooth headset

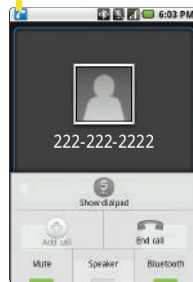



- **End call** to end the current call.
- **Mute** to mute the microphone during an active call. Tap again to unmute the microphone.

Note: If Mute is activated, the speaker mode is deactivated.

- **Speaker** to route the device's audio through the speaker (**On**) or through the earpiece (**Off**).
 - ▶ Activate **Speaker** to route the device's audio through the speaker. (You can adjust the speaker volume using the volume keys.)
 - ▶ Deactivate **Speaker** to use the device's earpiece.

WARNING: Because of higher volume levels, do not place the device near your ear during speakerphone use.

- **Bluetooth** to route the device's audio through the connected Bluetooth headset (**On**) or through the speaker (**Off**).
 - When the call is routed to a Bluetooth headset, the current call area is surrounded by a blue box and shows the **Bluetooth** call icon ().

- When turned off, the call is routed through either the earpiece or speaker, the call area is surrounded by a green box and shows ().



End-of-Call Options

After you receive a call from or make a call to a phone number that is not in your Contacts, the device displays the phone number and the duration of the call within the Call log screen.

From the Call log tab, tap an entry from the list:

- **<Call type>** to view the category of the selected call: **Incoming call**, **Outgoing call** or **Missed call**.
- **Call back**, **Call again** or **Return call** to redial the selected number and call back the recipient.
- **Send text message** to send the selected number an SMS (text) message.



- **Add to contacts** to add the new number to your Contacts. (See “Saving a Phone Number” on page 39.)
- **View contact** to view the Contacts listing for the number. After you receive a call from or make a call to a device number that is already in your Contacts, the device displays the entry name, phone number and the duration of the call.

Note: The End-of-Call options are not displayed for calls identified as No ID, Restricted or Unknown.

Saving a Phone Number




The number of Contacts entries you can store in your device is limited only by available memory space. Your device automatically sorts the Contacts entries alphabetically. Each entry's name can contain an unlimited number of characters. Your device automatically sorts the Contacts entries alphabetically. (For more information, see “2D. Contacts” on page 72.)

To save a number from the Home screen:

1. Tap  and enter a number into the onscreen dialer.
2. Press **MENU** and tap **Add to contacts > Create new contact**.
3. Tap either **Google** or **Work > OK** to synchronize the new contact to either your Gmail account or Outlook contact list.
4. Touch the **Given name** and **Family name** fields and use the onscreen or QWERTY keyboard to enter the new contact name.
5. Press **MENU** and tap  to save the new entry.

Finding a Phone Number


You can search Contacts for entries by name.


1. Press  and tap .
– or –
From the Dialer screen, tap .
2. Press **MENU** and tap **Search**.

3. Enter the first letter or letters of an entry. (The more letters you enter, the more specific the search.)
4. To display contact details, tap an entry from the list.

Dialing From the Contacts List

1. Press  and tap .



Shortcut: From Dialer screen, tap **Contacts** () to list entries.

2. Scroll through the list and tap the entry you want to call. Tap the number you want to dial for that entry.
– or –
Press  to dial the entry's default phone number.

Speed Dialing from Favorites

You can quickly dial contacts you call frequently by adding them to your Favorites list. Although not assigned to a speed dial number, this is a quick and easy way to dial your favorite Contacts. See “Adding Entries to Your Favorites” on page 79.



To speed dial a contact from Favorites:

1. Press  and tap  > **Favorites**.
2. Scroll through the list and tap the contact.
3. Tap to place a call or send a text to the contact.

Dialing a number from the **Favorites** tab is similar to dialing one from the **Contacts** tab. See “Dialing From the Contacts List” on page 40.

North american dialing

When placing international calls, North american dialing automatically enters the international access code for your location (for example, 011 for international calls made from the U.S.). See “Activating North american dialing” on page 57.

1. From the onscreen dialpad, touch and hold  until you see a “+” on the display screen.
2. Dial the country code and phone number, then tap . (The device automatically prepends the access code for international dialing, followed by the country code and phone number.)

Entering Text with Onscreen Keyboard

When you activate a field where you can enter text, numbers, symbols, etc., you can either use the onscreen keyboard or QWERTY keyboard.

Onscreen keyboard entry can be done in either Portrait or Landscape orientations. The Landscape orientation provides more space and results in slightly bigger onscreen keys. If you find that you prefer to enter text via the onscreen keyboard and need bigger keys, use this orientation.

Activating the Landscape Keyboard

Although the device will automatically rotate its screen orientation to Landscape once the QWERTY keyboard slides out, the Samsung Moment™ can also be set to automatically change its orientation. To use the onscreen keyboard in Landscape mode, this feature must first be enabled.

See “Changing the Screen Orientation” on page 53.

Selecting a Text Input Mode

Your device provides convenient ways to enter letters, numbers and symbols whenever you are prompted to enter text (for example, when adding a Contacts entry or when using email and text messaging).


In this section, we'll cover the steps necessary to enter text using the onscreen keyboard, where the touch screen is the primary method of both text and character entry.

Note: Some characters and types, such as some symbols and emoticons, are not accessible from the onscreen keyboard.

 

1. From a screen where you can enter text, tap the input field to reveal the onscreen keyboard.
2. Select one of the following Text mode options:
 - **ABC** to use alphabetic characters from the onscreen keyboard. See page 43.
 - **?123** to enter numbers by pressing the numbers on the onscreen keyboard. See page 44.

Tip: When entering text, tap  to change letter capitalization.

Onscreen Keyboard Overview

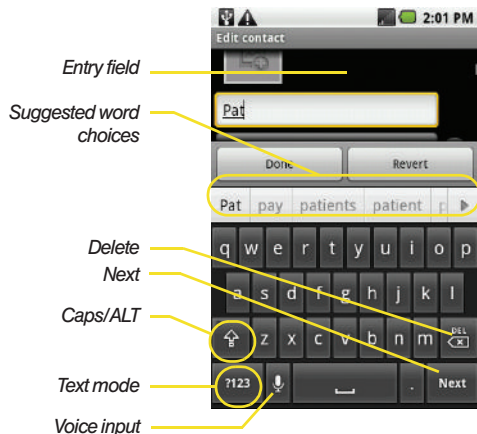




- **Entry field:** a field where text, number or other characters can be entered.
- **Suggested Word choices:** a row of selectable word choices based on the current set of entered text. Tap an onscreen choice to insert the selection into your current entry field. Tap the left and right arrows on this field to reveal additional word choices.
- **Delete:** deletes characters from the entry field.
- **Next:** moves the cursor to the next entry field.
- **CAPS/ALT:** When in **ABC** mode, this key changes the capitalization of the subsequent entered characters. When in **?123** mode, this key can show additional symbol characters.
 - Capitalization in **Abc** mode can be altered by using the Caps button. See “ABC Mode” on page 43.
 - Symbol use in **?123** mode can be enhanced by accessing additional symbol characters. See “Entering Numbers and Symbols” on page 44.

- **Text mode:** There are two available modes: **ABC** and **?123**.
 - **ABC** mode contains only characters. Text mode button indicates .
 - **?123** mode contains only symbols. Text mode button indicates .
- **Voice input:** Launches your device's feature using Google's networked speech recognition. To turn off voice input, go to keyboard settings.


Suggested Word Selection




Suggested Word selection, also known as predictive text, is activated by default and uses an intuitive word database to analyze the letters you enter and create a suitable word. (The word may change as you type.) This feature is enabled by default and can provide quicker word selection by entering the first few letters.

- Tap onscreen alphabetic characters to begin your word entry. (If you make a mistake, tap  to erase a single character. Touch and hold  to erase an entire word.)



If the word you want is not displayed after you have entered all the letters, tap  to scroll through additional word selections. To accept a word and insert a space, touch it.

ABC Mode

In **ABC** mode, you can enter only alphabetic characters from the onscreen keyboard. The text mode shows .


1. Select the **ABC** mode. (See “Selecting a Text Input Mode” on page 41.)
 - Capitalization in **ABC** mode can be altered by using the Caps button.
 -  next character is lowercase.
 -  only the next character is uppercase.
 -  all subsequent characters are uppercase.

Note: A green circle on the shift key above indicates the keyboard is set to “Shift-Lock” where all characters are entered in uppercase.

2. Tap the corresponding onscreen keys to begin typing your word.
 - As you type, if the desired word already appears in the Suggested word choices bar, tap it to enter the selection into your text entry field.
 - If you make a mistake, tap  to erase a single character. Touch and hold  to erase an entire word.

By default, the first letter of an entry is capitalized and the following letters are lower case. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Entering Numbers and Symbols

By using the onscreen keyboard in Portrait mode, some symbols are not available (such as Emoticons or Smileys). In **?123** mode, you can only enter symbols characters from the onscreen keyboard. The text mode shows .

To enter numbers:

1. Tap  to enter the **?123** mode.



2. Tap the appropriate numeric key. (See “Selecting a Text Input Mode” on page 41.)

To enter symbols:

1. Tap  to enter the **?123** mode.

2. Tap the appropriate numeric key.

– or –

Tap  to select from additional symbol characters. The key shows  when the additional character set is active.

Entering Text using the QWERTY Keyboard

Accessing the QWERTY Keyboard

The Samsung Moment™ has a built-in, keyboard-style keypad, referred to as a full QWERTY keyboard. The keyboard is located beneath the display screen and is accessed by sliding it open. This orients the device's display to Landscape (widescreen) mode.

Using the QWERTY keyboard, you can type letters, numbers, punctuation and other special characters into text entry fields or other applications simpler and faster than using the onscreen keyboard.

To open the device and access the keyboard:





1. Rotate the device 90 degrees counter-clockwise.
2. Slide the top section of the device up to open, as shown in the illustration. When you slide the device open, the display rotates from a vertical viewing mode (Portrait) to a horizontal viewing mode (Landscape).





Using the Keyboard

In this section, we cover the steps necessary to enter text using the QWERTY keyboard. Using your device's QWERTY keyboard is just like using any standard computer keyboard.


The following keys perform special functions when entering text:

	FN: Allows you to use blue characters displayed at the top of the QWERTY keys. Examples: \$, @, #, !
	Shift: Changes the text input mode among Upper/Lower/Mixed case mode. Sym: Launches the Symbols page. When used with the fn key, choose from an extensive list of symbols and other character sets.
	Smiley: When used with fn , launches the Smileys page. Choose from an extensive list of emoticons.
	Space: Inserts an empty space.

	OK/Enter: Moves the insertion point to the next line in a message.
	Delete: Deletes the previous character, similar to the backspace key on a computer keyboard.


From a text entry screen, use the keyboard to enter different character types. Select one of the following character types:

- **Letters** to enter the alphabetic characters associated with each key. (See page 46.)
- **Numbers** to enter numbers by pressing the numbers on the keyboard. (See page 47.)
- **Symbols** to enter symbols. (See page 47.)
- **Smileys** to enter smileys or “emoticons.” (See page 47.)






Tip: When entering text, press  to change letter capitalization (ABC > Abc > abc).

The keyboard provides dual-use keys labeled with alphabetic characters on the lower half and numbers and symbols on the upper half. Press the key corresponding to the blue character you want to enter.

Entering Characters


The entered character (of a field or new sentence) is always an initial uppercase letter. By default, text is entered in lowercase characters unless altered by pressing .

To enter uppercase and lowercase characters:

1. Press  to make the next character uppercase. Characters revert back to lowercase after the next character is typed.
– or –
Press  twice to make all subsequent characters uppercase (all new characters are in uppercase).
 - Pressing  cycles through the capitalization modes (all lowercase, initial uppercase and all uppercase).
2. Press the corresponding keys:
 - For example, to enter the word “Bill” within a text field, type the keypad sequence below.
 - If you make a mistake, press  to erase a single character. Press and hold  to erase all previously entered text.



Bill

- To enter all uppercase characters, quickly press  twice.





BILL

Entering Numbers

The keyboard can be used to enter numbers, letters and symbols. The number keys are located along the top on the QWERTY keyboard.


1. Press the numeric key corresponding to your desired number choice.


- If you make a mistake, press  to erase a single character. Press and hold  to erase all previously entered text.
- For example, to enter “9:30,” you would use the keyboard sequence shown below.



9:30


Symbols and Smileys

Symbols are accessed by combining the  key with the correct number key. These symbols appear in blue above the keyboard keys.

Smileys (emoticons) are accessed by pressing  and then selecting an image from the Smileys page that is then inserted at your current cursor position.

To enter symbols:

1. Position the cursor where you want the symbol to appear within your message.
2. Press **fn** and then press the blue key corresponding to the symbol you want to insert.
 - For example, to enter “I’m #1,” you would use the keyboard sequence shown below.

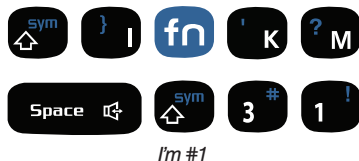

To enter “smileys” (emoticons):

1. Position the cursor where you want the symbol to appear within your message.
2. Press **fn** and the smiley key to open the onscreen smiley page.
3. Scroll through the list and select a smiley by touching the onscreen icon.

Creating a Google Account

You will need a Google account to access several device features such as Gmail, Google Maps, Google Talk and the Android Market. Before you are able to access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

1. From a computer, launch your preferred Web browser and navigate to www.google.com.
2. On the main page, click **Sign-in > Create an account now**.
3. Follow the onscreen prompts to create your free account.
4. Log into your provided email address, locate the email from Google and respond to the new email to both confirm and activate your new account.

Signing Into Your Google Account

1. Launch the application that requires a Google account (such as Android Market).
2. Click **Next > Sign in**.

Note: If you do not already have a Google account, touch **Create** and follow the onscreen prompts to create your new account.

3. Touch the **Username** and **Password** fields and enter your information. See “Entering Text using the QWERTY Keyboard” on page 44.
4. Click **Sign in**. Your device then communicates with the Google servers to confirm your information.
5. Create a new Gmail username by entering a prefix for your **@gmail.com** email address.

2B. Settings

- ◆ Sound Settings (page 50)
- ◆ Display Settings (page 53)
- ◆ Language Settings (page 55)
- ◆ Location Settings (page 55)
- ◆ Messaging Settings (page 56)
- ◆ Airplane Mode (page 58)
- ◆ TTY Use With Sprint Service (page 59)
- ◆ Security Settings (page 60)



Sound Settings

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls and types of messages.



Selecting Ringer Types for Voice Calls

Your device provides a variety of ringer options that allow you to customize your ring and volume settings.

1. Press  > **MENU** and tap  > **Sound & display** > **Phone ringtone**.
2. Tap a ringtone from the available list. The ringtone briefly plays when selected.
3. Tap **OK** to assign a ringer.



Selecting Audible Touch Tones

Your device provides the ability to play a sound when you are both using the dialpad and tapping the screen.

1. Press  > **MENU** and tap  > **Sound & display**.
2. Tap **Audible touch tones** (to place a checkmark on the option).

Selecting Ringer Types for Notifications

The notification area displays icons associated with user notifications such as: email messages, calls missed, new voicemail, upcoming event, USB connection, Text/MMS messages. You can select the ringtone that plays when your device receives new notifications.

1. Press  > **MENU** and tap  > **Sound & display**.
2. Tap **Notification ringtone**.
3. Tap a notification ringtone from the available list. The ringtone then briefly plays when selected.
4. Tap **OK** to assign a ringer.

Activation of Feature Sounds



When tapping onscreen items, using the dialpad or SD card notifications, you can enable whether an audible sound plays for those features.

1. Press  > **MENU** and tap  > **Sound & display**.

2. Tap **Audible touch tones**, **Audible selection**, **SD card notifications** to activate the feature.
 - **Audible touch tones** plays a tone while using the dialpad.
 - **Audible selection** plays a sound when making any onscreen selection.
 - **SD card notifications** plays a sound when an SD card notification event occurs.

Adjusting the Volume Settings


Adjust the volume settings of both the device and Media playback to suit your needs and your environment.

1. Press  > **MENU** and tap  > **Sound & display**.
2. Tap either **Ringer volume** or **Media volume**.
3. Touch and drag the onscreen slider, adjust the volume level and tap **OK**.
 - Within Ringer Volume, tap the **Use incoming call volume for notifications** field to assign the current volume setting to the Notification ringtone.



Tip: You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume button on the left side of your device.

Vibrate



To set your device to vibrate for incoming calls and silent for notifications:

- ▶ Press the volume button down in standby mode until you see  on the screen.

To set your device to always vibrate for incoming calls:

1. Press  > **MENU** and tap  > **Sound & display**.
2. Tap **Phone vibrate**. (If you have already checked the option, tapping it again deselects the option.)

To set your device to vibrate when pressing soft keys and on certain UI interactions:

1. Press  > **MENU** and tap  > **Sound & display**.
2. Tap **Haptic feedback**. (If you have already checked the option, tapping it again deselects the option.)

Silence All

The Silence All option allows you to mute all sounds without turning your device off (except for Media volume).



To activate Silence All:

- ▶ Press and hold the volume button down in standby mode until you see  on the screen.

To deactivate Silence All:

- ▶ Press the volume button up repeatedly to select a volume level.



To set your device to silent mode:

1. Press  > **MENU** and tap  > **Sound & display**.
2. Tap **Silent mode**. This option silences all audio on the device except for media and alarms. (If you have already checked the option, tapping it again deselects the option.)

Display Settings



Changing the Screen Orientation

Although most screens will change orientation once the QWERTY keyboard is opened, this feature can be manually enabled to change the orientation for all screens when rotation is detected. See “Changing the Screen Orientation” on page 31.

1. Press  > **MENU** and tap  > **Sound & display**.
2. Tap **Orientation** (enabled by default). A checkmark indicates the feature is enabled.
 - Clear the **Orientation** checkmark to disable this automatic orientation adjustment.



Window Animation

This feature provides the use of animation when onscreen windows are opened and closed. If deactivated, windows pop on and off and no transitions are applied.

1. Press  > **MENU** and tap  > **Sound & display**.
2. Tap **Animation** and select an available option: **No animations**, **Some animations** or **All animations**.

Changing the Backlight Time Length

Select how long the display screen remains lit after you press any key. This is the delay time before the screen automatically turns off.

1. Press  > **MENU** and tap  > **Sound & display** > **Screen timeout**.
2. Tap a time setting.

Note: Long backlight settings reduce the battery's talk and standby times.

Changing the Brightness

Adjust your screen's brightness to suit your surroundings.



1. Press  > **MENU** and tap  > **Sound & display**.
2. Scroll down and tap **Brightness**.

3. Touch and drag **Brightness** slider left or right to adjust the screen contrast and tap **OK**.

Note: Not available when the Auto Brightness is enabled.

Changing the Automatic Brightness

Automatically adjusts your screen's brightness to provide the best display within the current lighting condition.

1. Press  > **MENU** and tap  > **Sound & display**.
2. Tap **Auto Brightness**. A checkmark indicates the feature is enabled.
 - Enabling this feature disables the manual **Brightness** option.

Changing the Display Screen

Choose what you see on the Home screen (behind your shortcuts and Widgets) while powering on or off the device and when in standby mode.

1. Press  > **MENU** and tap .
2. Tap either **Pictures** or **Wallpaper Gallery**.




 
- **Pictures** taken using the built-in camera or copied to your device as a wallpaper. You can crop the picture before setting it as a wallpaper. See "Assigning a Picture to an Entry" on page 78 to learn how to crop the picture.



- **Wallpaper Gallery** provides a selection of built-in wallpaper images.

3. Scroll through available images and tap a selection to preview it.
4. Tap **Set wallpaper** to assign an image.

Adjusting the Date and Time


Your device obtains its time and date information by using the network-provided date, time and time zone. These values can be manually altered.

1. Press  > **MENU** and tap  > **Date & time**.
2. Tap **Automatic** to disable the feature.
3. Tap **Set date**. Adjust the date, month and year by tapping  or . Tap **Set** when finished.

4. Tap **Select time zone**, then select a time zone from the onscreen list. Scroll down the list to view additional time zones.
5. Tap **Set time**. Adjust the hour and minute by tapping  or . Tap the **AM** or **PM** icon to change the value. Tap **Set** when finished.
6. Tap **Use 24-hour format** to toggle between using a 12-hour or a 24-hour format.
7. Tap **Select date format** to select how the date information is displayed on your device. The selected date format is also applied to the date displayed within the device's Alarm Clock.

Language Settings

To assign the default language used by the Android operating system.

1. Press  > **MENU** and tap  > **Language & keyboard** > **Set locale**.
2. Tap either **English** or **Español**. All menus are then updated to the new language.

Note: When the Language & keyboard settings are set to Español, these menus are displayed in English: Device Self Service, Instant Messaging, NASCAR Sprint Cup Mobile, Sprint Football Live, Sprint Navigation, SprintTV, The Weather Channel and Voicemail.



Location Settings

Your device is equipped with a Location feature for use in connection with location-based services.



The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your device's GPS Location feature:

1. Press  > **MENU** and tap  > **Location & security**.
2. Tap **Use GPS satellites**. A checkmark indicates the GPS location feature is enabled.

To enable Location via wireless networks:

1. Press  > **MENU** and tap  > **Location & security**.
2. Tap **Use wireless networks**. A checkmark indicates the feature is enabled.
 - This service uses available wireless networks to pinpoint your location within certain applications such as Google Maps (page 175).
3. Tap **Agree**. Enabling this feature allows Google to collect anonymous location data regardless if any location application or other related feature is active or in use.
 - Tap **Use wireless networks > disagree** to disable the collection of data. Enabling this feature can utilize more resources and slow performance.

Messaging Settings

Your device's advanced messaging capabilities let you send and receive many different kinds of text messages without placing a voice call. For more information, see "Text Messaging (SMS)" on page 128.

Messaging settings allow you to decide how you would like to be notified of new messages, create a signature with each sent message and create your own preset messages.

Viewing Notifications of Received Messages



When you receive a message, your device notifies you by displaying an icon within the Notification area at the top left of your Home screen.

-  indicates a new text message was received.

1. Press  > **MENU** and tap .
 - or –

Touch and hold the Status bar, then slide your finger down the screen. See "Using the Notifications Panel" on page 33.




2. Tap a message entry to open the Messaging application.

Tip: To access the Messaging menu, you can also press   > **Messaging**.

Deleting Old Text Messages

Delete messages you have read whenever you like or have your device delete them automatically for you. A thread is a series of text conversations between two parties. A single thread occurs between two parties; selecting all threads chooses your stored text conversations with all past contacts.

To delete a specific message thread:

1. Press  and tap  and tap **Messaging**.
2. Use the Optical Joystick to highlight a single message thread and press  to view the contents of that thread.
3. Press **MENU** and tap **Delete thread**.


To delete all stored messages:


1. Press  and tap  and tap **Messaging**.
2. Press **MENU** and tap **Delete threads**.

Call Settings

Your device allows you to configure call settings such as North american dialing usage, International Dialing options and TTY configuration.




Activating North american dialing

North american dialing allows you to have the phone automatically dial the international access code for your location once you press and hold . See “North american dialing” on page 40.

1. Press  > **MENU** and tap  > **Call settings**.
2. Tap **North american dialing** to activate the feature (a checkmark appears in the adjacent field).


Changing the International Dialing Code

By default, the international dialing prefix (code) is set to 011. This code cannot be changed until the feature is temporarily disabled. Once disabled, the field becomes accessible and can be altered.

1. Press  > **MENU** and tap  >
Call settings.
2. Tap **North american dialing** to deactivate the feature.
This enables the **International dialing** field.
3. Tap **International dialing.**
4. Tap the entry field and press  from the onscreen keyboard to delete the previous value.
5. Enter a new value and tap **OK.**
6. Tap **North american dialing** to reactivate the feature.
This disables the **International dialing** field.

Airplane Mode


Airplane Mode allows you to use many of your device's features, such as Games, Notepad and Voice Memos, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your device to Airplane Mode, it cannot send or receive any calls or access online information.

1. Press and hold  to reveal the Phone options.





2. Tap * (**Airplane Mode is OFF**).
– or –

1. Press  > **MENU** and tap  >
Wireless & networks.

2. Tap **Airplane mode** to place a checkmark in the adjacent field.

While in Airplane Mode, your device's Status area will display ().

To deactivate Airplane Mode:



1. Press and hold  to reveal the Phone options.
2. Tap  (**Airplane Mode is ON**).
– or –
3. Press  > **MENU** and tap  >
Wireless & networks.
4. Tap **Airplane mode** to remove the checkmark.

TTY Use With Sprint Service

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing or who have speech or language disabilities, to communicate by telephone.

Your device is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it is compatible with digital cell phones. Your device and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

To turn TTY Mode on or off:

1. Press  > **MENU** and tap  > **Call settings** > **TTY**. (You will see an informational message.)
2. Read the onscreen disclaimer and tap **Yes**.

3. Touch **TTY Off** to turn TTY mode off.

– or –

Touch any of the following to enable the feature:

- **TTY HCO**, **TTY VCO** or **TTY Full**.

To access the state Telecommunications Relay Service (TRS) for assistance with TTY calls:

- Dial **7**^{PQRS} **1** **1**  and press **1** to reach an operator.

For additional information about Sprint Relay Services and TTY compatibility, call Sprint Relay Customer Service at **800-676-3777** or visit www.sprintrelay.com.

For additional technical support you may call **1-888-987-4357**, or access the following website: www.samsung.com/us/consumer/learningresources/mobile/accessibility/pop_accessibility.html.

Note: In TTY Mode, your device will display the TTY access icon.

If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

WARNING: 911 Emergency Calling

Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to software used by PSAPs. This matter has been brought to the attention of the FCC and the wireless industry and the PSAP community are currently working to resolve this.

Security Settings

Accessing the Security Menu


All of your device's security settings are available through the Security menu. You can secure your data and limit phone access by requiring a screen unlock pattern every time your device is turned on or every time it wakes up from sleep mode (screen where the screen turns off).

- Press  > **MENU** and tap  > **Location & security**.


Your Device's Lock Feature

Locking Your Device

When your device is locked, you can only receive incoming calls or make calls to 911.

- Press . Locking the screen prevents accidental screen touches from activating phone functions.



Unlocking Your Device


1. Press  to awaken the device.
2. Touch and drag the lock icon to the right.

Your Device's Unlock Pattern Feature

You can increase your device's security by creating a screen unlock pattern (disabled by default). When enabled, you must draw the correct unlock pattern on the screen to unlock and regain access to the device.

Creating an Unlock Pattern

1. Press  > **MENU** and tap  > **Location & security**.
2. Scroll down to the menu list and tap **Set unlock pattern**.
3. Read the information on the screen, then tap **Next**.
4. Review the onscreen tutorial on pattern creation, then tap **Next**.

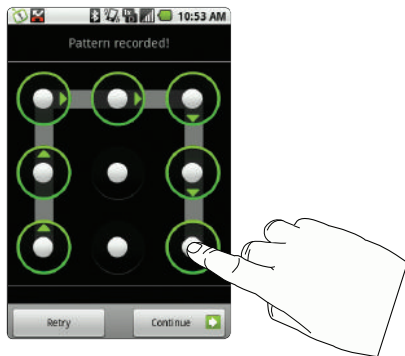

5. Draw your pattern by touching your first onscreen point, then, without removing your finger from the screen, drag your finger over adjacent points until the grey trace line overlaps each point and they are highlighted with a green circle.


Important: You must slide your finger on the screen to create the pattern and not touch individual dots. If you make a mistake or a point is not properly selected, a red circle will appear.

6. When you have connected at least four dots in a vertical, horizontal or diagonal direction, lift your finger from the screen when finished.
7. Tap **Continue** to record the pattern.
8. Confirm the new pattern by redrawing it and then tapping **Confirm**.



Once the feature is enabled, additional unlock pattern options are then enabled from within the **Location & security** menu list.

Configuring the Unlock Pattern Settings

To require the pattern for access:

1. Press  > **MENU** and tap  > **Location & security**.
2. Place a checkmark adjacent to the **Require pattern** field.

To remove the unlock pattern from the Lock screen:

1. Press  > **MENU** and tap  > **Location & security**.
2. Remove the checkmark adjacent to the **Use visible pattern** field.
 - Removing this checkmark prevents the unlock pattern from displaying on the unlock screen.

What to do if you have forgotten your pattern:

If you fail to draw the correct unlock pattern on the screen after five attempts, you are prompted to wait for 30 seconds before you can try again.

- If you have forgotten your screen unlock pattern, tap **Forgot pattern**.

- Sign in using your Google Account name and password, then create a new screen unlock pattern before regaining access to the Home screen.

Changing the Unlock Pattern

1. Press  > **MENU** and tap  > **Location & security** > **Change unlock pattern**.
2. Draw the current pattern on the screen.
3. Draw a new pattern. See “Creating an Unlock Pattern” on page 61.

Calling in Lock Mode

When your device is locked, you can only receive incoming calls or make calls to 911 or Sprint Customer Service.

1. Press  to reveal the lock screen.



Note: The Unlock Pattern applies if the **Require Pattern** setting is enabled.

2. Tap **Emergency call** to reveal the Emergency Dialer to place your emergency call.
 - Draw your unlock pattern to regain access to the full dialer and unlock the device.



Managing Your Available Memory

You can manage the information and configuration related to both your microSD card and built-in device storage memory.

To view your device's total available memory:

1. Press  > **MENU** and tap  > **SD card & phone storage**.
2. Review the **Available space** fields for the two memory sections for available space:
 - **SD card** displays the memory information specific to an internally installed microSD card. This amount of space can be altered by replacing the current microSD card.
 - **Internal phone storage** displays the memory information specific to the built-in device memory. This memory amount can not be altered because it is part of the device hardware.

To view your microSD card storage information:

1. Press  > **MENU** and tap  > **SD card & phone storage**.
2. Locate the **SD card** section.
3. Review both the **Total space** and **Available space** fields:
 - **Total space** indicates the total size of the currently inserted microSD card. This includes both available and used space information.
 - To determine the currently amount of used memory on the card, take the Total space and subtract the remaining available space.



Note: Not all of the microSD card is registered in the available space as a small percentage of the storage is unread. A 2GB microSD card will show approximately 1.89GB available.

- **Available space** indicates only the amount of remaining free memory space available on the microSD card.
- **Unmount SD card** allows for safe removal of the SD card.
- **Format SD card** erases the SD card.

Erasing Device Content

Use the Manage applications menu to quickly erase selected content and uninstall third-party applications stored in your device.

To clear an application's cache:

1. Press  > **MENU** and tap  > **Applications** > **Manage applications**.
2. Press **MENU** and tap **Sort by size**. This option sorts the current **Manage applications** listing to display those applications by amount of memory or cache usage. Tap **Filter** to sort your list based on: **All**, **Running** or **Downloaded** applications.

Note: Those applications with the largest usage appear at the top of the sorted list.

3. Tap the application whose cache you wish to delete.
4. From the Application info screen, tap **Clear data** and/or **Clear cache**.

To uninstall third-party applications:

1. Press  > **MENU** and tap  > **Applications** > **Manage applications**.

Important: Only third-party applications can be uninstalled. Applications preinstalled on the device can not be removed.

2. Tap the third-party application and from the **Application info** screen, tap **Uninstall**.

Resetting Your Device

Resetting the device restores all the factory defaults, including the ringer types and display settings. All data, including downloaded applications, are deleted.

Important: Back up your important data before you perform a factory reset of the device.

1. Press  > **MENU** and tap  > **SD card & phone storage** > **Factory data reset**. (You will see a disclaimer.)
2. Read the disclaimer and tap **Reset phone**.

3. If required, draw your unlock pattern to confirm the reset process.
4. If you are certain that you would like to restore all factory settings, tap **Erase everything**.

2C. Call Log

- ◆ Viewing Call Log (page 66)
- ◆ Call Log Options (page 67)
- ◆ Checking a Missed Call (page 69)
- ◆ Making a Call From Call Log (page 69)
- ◆ Saving a Number From Call Log (page 69)
- ◆ Altering a Number From Call Log (page 70)
- ◆ Erasing the Call Log (page 71)

Viewing Call Log


Call Log (History) is a list of the phone numbers (or Contacts entries) for calls you placed, accepted or missed. Call Log makes redialing a number fast and easy. It is continually updated as your device automatically adds new numbers to the beginning of the list and removes the oldest entries from the bottom of the list.

To access these call notifications:


- Touch and hold the Status bar, then slide your finger down the screen.

– or –

Press  > **MENU** and tap .

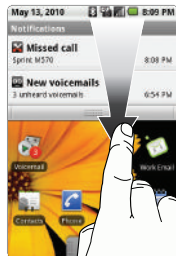

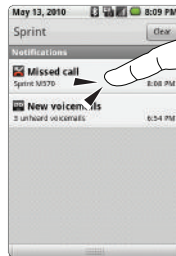

1






2



The Notification area of the Home screen (upper-left) displays phone notifications, status or alerts such as:

	Call in progress: Indicates there is a call currently active and in progress.
	Missed Call: Indicates an incoming call was missed.

From within the Call log screen, each entry contains the phone number (if it is available) and Contacts entry name (if the number is in your Contacts).

	Dialed: Indicates all outgoing calls made from your device.
	Received: Indicates any received calls that were answered.
	Missed: Indicates any missed calls. These are routed to your voicemail.

To access the Call log:


1. Press  and tap  > **Call log**.
2. Tap an entry to view available options.


Shortcut: You can also press  from the Home screen to display your recent calls.


Note: History records only calls that occur while the device is turned on. If a call is received while your device is turned off, it will not be included in history.

Call Log Options

This list provides easy access to redial an entry or you can also choose to access two types of history entry lists depending on how they are touched.

- Tap  to quickly redial the selected entry. See “Making a Call From Call Log” on page 69.

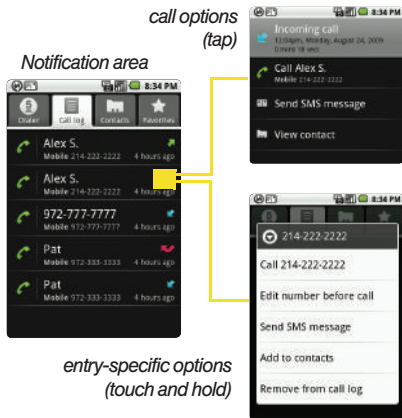


- Highlight a contact entry name or number and press  (or tap) to reveal the following **call options**:
 - **Call information** (Incoming/Outgoing call) provides the time and date of the call and its duration.




- **Call [Name or Number] again** allows you to redial the entry by name or number.
- **Send text message** allows you to create a new text message to the selected entry.
- **View contact** provides information about the entry if it already exists in your Contacts list. Press **MENU** to gain access to other options such as: **Edit contact**, **Copy to other account**, **Move to other account** and **Delete Contact**.
- **Add to contacts** to save the number if it is not already in your Contacts. (See “Saving a Number From Call Log” on page 69.)
- Touch and hold an entry to display the following **entry-specific options**:
 - **Call [Number]** to redial the current phone number. (See “Saving a Number From Call Log” on page 69.)
 - **Edit number before call** to make alterations to the current phone number prior to redial. Altering a Number From Call Log (page 70).
 - **Send text message** allows you to create a new text message to the selected entry.

- **Add to contacts** to save the number if it is not already in your Contacts. (See “Saving a Number From Call Log” on page 69.)
- **Remove from call log** to delete the entry from the Call log list.

Checking a Missed Call

1. Locate  from the Notifications area of the Status bar.
2. Touch and hold the Status bar, then slide your finger down the screen.
3. Tap the Missed call entry to open the Call log screen.
4. Tap an entry. See “Using the Notifications Panel” on page 33.

Making a Call From Call Log

1. Press  and tap  > **Call log**.
2. Tap  adjacent to a desired entry.
– or –

Tap an entry name/number from the list, then tap **Call [Name or Number]**.

Note: You cannot make calls from History to entries identified as **Unknown**, **No ID**, **Restricted** or **Private Number**.

Saving a Number From Call Log

The number of Contacts entries you can store in your device is limited only by available memory space. Your device automatically sorts the Contacts entries alphabetically. Each entry's name can contain an unlimited number of characters.

1. Tap a Call log entry > **Add to contacts**.
– or –
Touch and hold an entry > **Add to contacts**.





2. From the Contacts screen, tap **Create new contact** or tap an existing Contact entry name to save the number to an existing entry.
3. Tap either **Google** or **Work** to synchronize the new contact to either your Gmail account or Outlook contact list.
4. Tap the **Given name** and **Family name** fields to create a new Contacts entry.
5. Use either the onscreen keypad or slide out the keyboard to type in the new entry name.

After you have saved the number, your device displays the new Contacts entry in place of the previous number. (See “Contacts Entry Options” on page 76.)

Note: You cannot save phone numbers already in your Contacts or from calls identified as **Unknown**, **No ID**, **Restricted** or **Private Number**.

Altering a Number From Call Log



If you need to make a call from History and you need to alter the number prior to dialing, you can add the appropriate prefix by prepending the number.

1. Press  and tap  > **Call log**.
2. Touch and hold an entry to access the entry-specific options menu.
3. Tap **Edit number before call**.
4. Edit the number using the onscreen dialpad or delete digits by pressing  to erase the numbers.
5. Tap  once the number has been changed.
 - Press **MENU** and tap **Add to contacts** to save the new number as an additional contact or an additional number to an existing entry.




Erasing the Call Log

You can delete either an individual call log entry or all current entries from the Call Log list.

To clear a single entry from the Call Log list:

1. Press  and tap  > **Call log**.
2. Touch and hold an entry to access the entry-specific options menu.
3. Tap **Remove from call log**.

To clear all entries from the Call Log list:

1. Press  and tap  > **Call log**.
2. Press  and tap **Clear call log**.

2D. Contacts

- ◆ Adding a New Contacts Entry (page 72)
- ◆ Saving a Phone Number (page 73)
- ◆ Editing Sync Groups (page 74)
- ◆ Contacts Menu Options (page 75)
- ◆ Contacts Entry Options (page 76)
- ◆ Editing a Contacts Entry (page 77)
- ◆ Adding a Number to a Contacts Entry (page 77)
- ◆ Editing a Contacts Entry's Number (page 78)
- ◆ Assigning a Picture to an Entry (page 78)
- ◆ Deleting Entries (page 79)
- ◆ Adding Entries to Your Favorites (page 79)


Adding a New Contacts Entry

Your device automatically sorts the Contacts entries alphabetically. Each entry's name can contain an unlimited number of characters. You can create a **Google, Work Mail or Corporate** contact.

- **Google** contacts are shared with your existing Google account and can also be imported to your device after you have created a Google Mail account.
- **Work Mail** contacts are those contacts that are intended to be shared with either an Exchange Server or from within Microsoft® Outlook®.
- **Corporate** (Exchange Account) contacts.

To create a new Google contact:




1. Press  and tap .
– or –
Press  and tap  > **Contacts**.
2. Press  and tap **New contact**.

Shortcut: Enter the phone number from the Dialer and press  > **Add to contacts**. Proceed with steps 4–5.

3. Select **Google** and tap **OK**.

4. Tap the **Given name** and **Family name** fields and enter a name for the new entry. (See “Entering Text with Onscreen Keyboard” on page 41.)

Note: Use the predictive text row to shortcut a name selection by tapping the word.

5. Tap the **Phone number** field and enter a phone number using the onscreen dialpad.
 - Tap  to enter additional phone numbers for the new Contacts entry.
 - Tap  to remove a previously entered phone number.
6. Tap the label button (to the left of the **Phone number** field) to select from additional categories such as: **Home**, **Mobile**, **Work**, **Work Fax**, **Home Fax** and many more, or tap **Custom** to create your own unique category type.
7. Enter additional information into these categories: **Email**, **IM**, **Postal address**, **Organization**, **Notes**, **Nickname** and **Website**.
 - Use your finger to slide the page up or down to see additional fields and categories.
 - Tap  to enter additional categories.

- Tap  to remove a previously entered category.

8. Tap **Done** to complete and store the new entry.



After saving the number, your device displays the new entry within the Contact list. (See “Contacts Entry Options” on page 76.)

Tip: **ICE – In Case of Emergency**

To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under “ICE” in your device’s Contacts list. For example, if your mother is your primary emergency contact, list her as “ICE–Mom” in your Contacts. To list more than one emergency contact, use “ICE1–___,” “ICE2–___,” etc.

Saving a Phone Number

To save a number from the Dialer:

1. Press  and tap .
2. Enter a phone number and press **MENU**.
3. Tap **Add to contacts** > **Create new contact**.

4. If prompted, tap either **Google**, **Work Mail** or **Corporate** to synchronize the new contact to either your Gmail account or Outlook contact list.
5. Tap the **Given name** and **Family name** fields and enter a name for the new entry. (See “Entering Text with Onscreen Keyboard” on page 41.)
6. Make any necessary changes.
7. Tap **Done** to complete and store the new entry.

Editing Sync Groups

This feature allows you to add a new or existing contact from your online Google account to your device. Prior to syncing, you must first have an active Google account with current Contacts entries and be signed into your account via the device.

With syncing, any Contacts entries (with phone numbers, email addresses, pictures, etc.) are updated and synced with your Samsung Moment™.

1. Press  and tap .




2. Press **MENU** and tap **Edit sync groups**.
 - If not already signed in, tap **Next > Sign in**.
 - Enter your Google **Username** and **Password** and tap **Sign in**.
3. Verify **Sync all contacts** is selected and tap **OK**.

Note: Any change on either side (Phone or Gmail Contacts), is reflected on the other side after a sync process.

The process of updating your Contacts tab can take several minutes. If after 10-20 minutes, your list has not updated with updates from your Gmail Contacts page, repeat step 3.

4. Your **Contacts** tab then reflects any updated Contact information.
 - This update process works both ways. Any changes on the device are updated to your Gmail Contacts list after sync.

Contacts tab

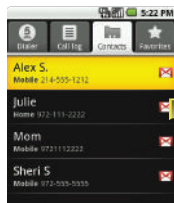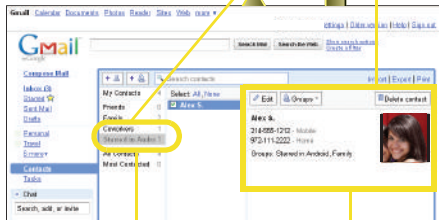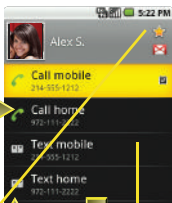

Contact entry's
Overview page

Contact Group

Contact Details



Note: Syncing of contacts requires you are logged into your Gmail account via the device.


Contacts Menu Options

1. Press  > .
2. Tap an entry to display the Contact entry's overview page. This page contains **Name**, **Contact type**, **Call [number]** and **Text [number]** options.
3. Press **MENU** and select from the available options:
 - **Edit contact** to edit the currently selected Contacts entry. See "Editing a Contacts Entry" on page 77.
 - **Copy to another account** to copy the details for the current Contacts entry into another available account, such as **Work**. The original entry is copied into its new location.
 - **Move to another account** to cut and paste the details for the current Contacts entry it into another available account as a new entry, such as **Work**. The original entry is deleted from its current location.
 - **Delete contact** to erase the currently selected Contacts entry. See "Deleting Entries" on page 79.

Contacts Entry Options

To display a Contacts entry:

1. Press  and tap .
2. Touch and hold a Contact entry from the Contacts tab list to reveal the options menu specific to this entry.
3. Tap an available option:
 - **View contact** to display the Contact's overview page.
 - **Call <default label>** to dial the main phone number used by the entry. The category corresponds to the first phone number listed for the Contacts entry.
 - **Text contact** to begin the creation of new text (SMS) or multimedia message (MMS) that is sent to this entry.
 - **Send Voicemail** to send a voicemail message.

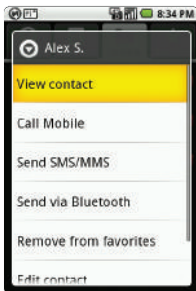

- **Send via Bluetooth** to send the current Contact's information to an external recipient via Bluetooth. See "Sending Contacts via Bluetooth" on page 118.

Note: Prior to using this feature, Bluetooth must first be enabled and the recipient's device must be visible.

Only a Contact's information can be sent via Bluetooth. No other file type (video, image or audio) can be sent using Bluetooth.


- **Add to favorites** to copy the current Contacts entry to the list within the Favorites tab (page 79).
- **Remove from favorites** to remove the current Contacts entry from the list within the Favorites tab.
- **Edit contact** to access the details page for the entry and begin editing its information.
- **Delete contact** to delete the current Contacts entry from your device (page 79).

Editing a Contacts Entry

1. From the Contact's overview page, press **MENU** and tap **Edit contact**. Tap an option to begin editing.

- **[image icon]** to assign a picture to the entry. See "Assigning a Picture to an Entry" on page 78.
- **Given name** to edit the current given name.
- **Family name** to edit the current family name.
- **Phone** to add or delete a phone number to the entry. (See "Adding a Number to a Contacts Entry" on page 77.)
- **Email** to add or delete an email address.

label button

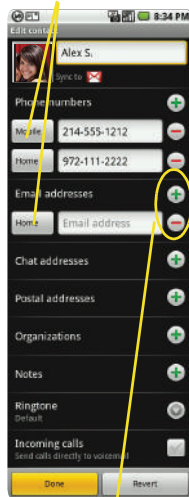


Add/Delete


- **IM** to assign an existing IM client contact name. Tap **+ > label button** to access **AIM**, **Windows Live** or **Yahoo**. **Google talk** is the default.
 - **Postal address** to enter a physical street address.
 - **Organization** to enter business information such as company name and position.
 - **More** to add notes, nicknames and websites in the fields provided.
2. Tap **Done** to store your changes.

Adding a Number to a Contacts Entry


1. From the Contact's overview page, press **MENU** and tap **Edit contact**.
2. From the Phone numbers area, tap **+** to create a new empty **Phone number** field.
3. Tap the field's adjacent label button and select from an onscreen category such as: **Home**, **Mobile** [default], **Work**, **Work Fax**, **Home Fax**, **Pager**, **Other**, or tap **Custom** to create your own unique category type.


- If you have chosen **Custom**, enter your new label and tap **OK**.
- 4. Tap the **Phone number** field and use the onscreen dialpad to enter the new number
- 5. Scroll to the bottom of the page and tap **Done** or press  and tap **Done**.


Editing a Contacts Entry's Number

1. From the Contact's overview page, press  and tap **Edit contact**.
2. Tap an existing phone number field.

Note: Touch and hold the **Phone number** field to activate the Edit text menu. You can choose several editing options such as: **Select all**, **Select text**, **Cut all**, **Copy all**, **Paste** or **Input Method**.

3. Tap  to clear one digit at a time.
4. Re-enter or edit the number using the onscreen dialpad.



Note: To hide an onscreen keypad, dialpad or keyboard, press .

5. Scroll to the bottom of the page and tap **Done** or press  and tap **Done**.

Assigning a Picture to an Entry

Assign a picture to display each time a certain contact calls you.


Assigning a picture via the device:

1. From the Contact's overview page, press  and tap **Edit contact**.
2. Tap a contact image (upper-left).
 - Tap an onscreen image to prepare it for use.
 - or –
 - Press the camera key to use the camera to take a new picture and assign it to this entry. (See “2H. Camera” on page 107 for details.)
 - Press  to return to the Select picture page where you can now select the new image.
3. Tap the image and begin cropping the desired area, then tap **Save** to assign selected picture.

Applying a picture from within your online Gmail:



1. Log into your Gmail account and go to your Contacts page.
2. Select your Contacts entry (with a checkmark) and click the image area (**Change Picture**).
3. Click **Browse** to locate a local copy of your image.
 - You can also choose an image from other sources such as Picasa® Web.
4. Crop the visible area of your selected picture and click **Apply Changes**.
5. Sync your new contact from your online Gmail to your device. See “Editing Sync Groups” on page 74.

Deleting Entries

1. From the Contact's overview page, press  and tap **Delete Contact**.
2. Tap **OK** to confirm the deletion.

Adding Entries to Your Favorites

The Favorites tab is a listing that can help you quickly access your most used or preferred Contacts entries.

1. Press  and tap .
2. Touch and hold the entry name from the Contacts tab listing.
3. From the Contacts Entry options page, tap **Add to favorites**.

2E. Calendar & Tools

- ◆ Before You Begin (page 80)
- ◆ Calendar (page 80)
- ◆ File Viewer (page 85)
- ◆ Alarm Clock (page 85)
- ◆ Calculator (page 87)
- ◆ Updating Your Device Firmware (page 87)
- ◆ Updating Your Android Operating System (page 93)
- ◆ Updating Your Profile (page 93)
- ◆ Updating Your PRL (page 93)

Before You Begin

Prior to using Google applications such as calendar, you will need to have an active Google account (page 48). Google Calendar is an application that synchronizes new and existing entries between your device and your online Google account.


Calendar

Adding an Event to the Calendar






Your Calendar helps organize your time and reminds you of important events.

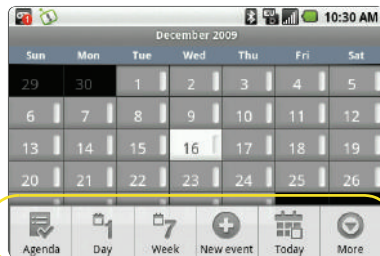1. Press  and tap .

Note: If you have not already signed into your Google account via your device, you may be asked to do so prior to gaining access to the Google Calendar.



Calendar Menu Options



2. Tap a day to which you would like to add an event and press **MENU** and tap **New event**.
 - Tapping a day activates the **Agenda** view.
 - The default view for the Calendar is the **Month** view.
 - To change the view, press **MENU** to select from **Agenda**, **Day**, **Week** and **Today**.
 - Press  to hide the menu options.
3. Select a calendar category: **Google** or **Work** and tap **OK**. For this example we are choosing Google.
 - **Google** calendar entries are synchronized between your device and your online Google account.
 - **Work** calendar entries are synchronized between your device and either an Exchange Server or available from within Microsoft® Outlook®.
4. Tap the **Event name** field and enter a title for the event. (See “Entering Text with Onscreen Keyboard” on page 41.)
5. Select a **From/To** date for the event by tapping the corresponding fields and adjusting the month, day and year by tapping  or .
 - Tap **Set** when finished.
6. Select a time for the event by tapping the time field and then adjusting the hour and minute by tapping  or .
 - Tap the **AM** or **PM** button to change the value.
 - Tap **Set** when finished.
7. Tap the **All day** field to assign this as an all day event. If assigned as an all day event, the time fields are removed as options.
8. Enter a location for the event in the **Where** field.
9. Enter a description for the event in the **Description** field.
10. Tap the **Calendar** field to synchronize this Calendar event with an alternate Gmail account.
11. Tap the **Guests** field to enter email addresses for Guests.

12. Select a recurrence cycle for the event by tapping the **Repetition** field:

- Select **One-time event**, **Daily**, **Every weekday (Mon-Fri)**, **Weekly (every [day])**, **Monthly (every [Number Day])**, **Monthly (on day [Number])** and **Yearly (on [Month Day])**.

Note: Press **MENU** and tap **Show extra options** to set option to **Show me as** Busy or Available or to set **Privacy** options. Press **MENU** and tap **Hide extra options** to hide.

13. Select an alarm time by tapping the **Reminders** field.


- Select **5 minutes**, **10 minutes**, **15 minutes**, **20 minutes**, **25 minutes**, **30 minutes**, **45 minutes**, **1 hour**, **2 hours**, **3 hours**, **12 hours**, **24 hours**, **2 days** or **1 week**.
- Each time you set a reminder, an additional field is made available.
- Tap  to remove any extra Reminder fields.
- Tap  to enter additional Reminder fields.

Note: A maximum of five **Reminder** fields can be added.


14. Tap **Done** to save the event.

Event Reminders

When your device is turned on and you have an event alarm scheduled, there are several ways your device alerts you to scheduled events:

- By playing a short beep.
- By illuminating the backlight.
- By indicating a  icon within the Status bar.


To view additional options, press the appropriate softkey:


1. Tap the Status bar, then slide your finger down the screen to open the Notifications panel.
2. Tap the upcoming event name from the onscreen list to display the event within the Calendar notification screen.
3. Tap one of the following options:
 - **Snooze all** to snooze all event reminders for five minutes.
 - **Dismiss all** to dismiss all event reminders.
 - Press  to keep these reminders in place and close the Notifications panel.

To configure event reminder settings:


 
1. Press  and tap .
2. Press **MENU** and tap **More > Settings**.
3. Configure the following fields:

- Tap **Hide declined events** to remove any declined events from reappearing in the Notifications panel.
- **Appointment sync range** indicates the date range for which events are being synchronized with your Exchange server or Google Calendar.
- Tap **Set alerts & notifications** to configure how you are reminded of upcoming events. You must have a reminder assigned to an event for this to be active. Options include: **Alert** (audio), **Status bar notification** (Status bar icon) or **Off** (no notification).

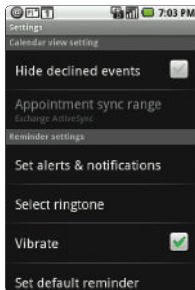

- Tap **Select ringtone** to select an audio ringtone that will sound once the event's reminder criteria is met (ex: 10 minutes before an event).
 - Tap a ringtone to hear an audio sample.
 - Tap **OK** to accept the ringtone assignment.
 - Tap **Vibrate** to add a vibration feature to the reminder. This is useful if your device is muted or you are in a loud environment.
 - Tap **Default reminder time** to assign a default time for every new event reminder. This becomes the default reminder time.
4. Press  to return to the calendar.

Viewing Events



1. Press  and tap . Once an event has been created, entries are shown in the Agenda view where all upcoming calendar events in chronological order.
2. To view a Calendar event farther out, press **MENU** and tap **Week** or **Month**.

3. Tap the day for which you would like to view events. (Your device lists events in chronological order.)
4. To display an event's details, tap it from the Agenda view.

Going to the Current Day's Calendar Menu

1. Press  and tap .
2. Press **MENU** and tap **Today**.

Editing an Existing Event

1. Press  and tap .
2. Tap the event to reveal the event details.
3. Press **MENU** and tap **Edit event**.
4. Make your modifications (name, location, repetition, reminders, etc).
5. Make other field modifications by accessing additional options. Press **MENU** and tap **Show extra options**. Additional fields are **Presence** and **Privacy**.

- Tap **Presence** and select **Busy** or **Available**.
 - Tap **Privacy** and select **Default**, **Private** or **Public**.
6. Scroll to the bottom of the event details page and tap **Done**.

Erasing a Day's Events

1. Press  and tap .
2. Tap the event to reveal the event details.

Tip: In the Month view, days with events scheduled are shown with a green bar.

3. Press **MENU** and tap **Delete event**. (You will see an alert notifying you of the deletion.)
4. Tap **OK**.

Note: If the day for which you are erasing events contains a repeating event, you will receive the following options: **Only this event**, **This & future events** or **All events**. Select **Only this event** to erase a single occurrence, **This & future events** to erase this event going forward, **All events** to erase all occurrences of the event (past/present/future) or **Cancel** to cancel the deletion of the repeating event.


File Viewer

File viewer allows you to view supported image files and text files.


Note: The following files can be viewed on the Samsung Moment™: image (JPG, BMP, GIF) and text (PDF, XLA, TXT, DOC).

Playable music files include: WAV, MP3 and WMA.

Accessing File Viewer



- From the Home screen, tap  > **File Viewer**. Navigation in this viewer works on a hierarchy structure with folders, subfolders, etc.

Opening Files in File Viewer

1. From the Home screen, tap  > **File Viewer**.
2. Tap a folder and scroll down or up until you locate your selected file.
3. Once you have located your file, tap the file name to launch the associated application.


Alarm Clock



Your device comes with a built-in alarm clock that has multiple alarm capabilities. There is no limit to the number of alarm events you can create.

1. Press  and tap  > .


Note: Upon your first launch of the Alarm Clock application, three alarms are set up by default and ready for you to customize. These alarms are turned off by default.

2. Tap the time field of a default alarm event.

Note: A new alarm can also be created from the Alarm page by pressing  > **Add alarm**.




3. Tap the **Time** field to begin adjustment of the alarm time.
 - Adjust the hour and minute by tapping  or .
 - Tap the **AM** or **PM** button to change the value.
 - Tap **Set** when finished.

Note: The number of hours and minutes left before the alarm goes off is briefly displayed onscreen after you set the new alarm time.




4. Tap **Ringtone** to select an audio ringtone that will sound with the alarm.
 - Tap a ringtone to hear an audio sample.
 - Tap **OK** to accept the ringtone assignment.
5. Tap **Vibrate** to add a vibration feature to the alarm.
6. Tap the **Repeat** field to select a repeating status for the alarm.
 - Place a checkmark adjacent to the desired repetition days **Monday, Tuesday, Wednesday, Thursday, Friday, Saturday** or **Sunday** and tap **OK**.
7. Select a unique name for this alarm event by tapping the **Label** field, entering a new label and tapping **Done**.
8. Press  to return to Alarm screen where the new alarm event is shown with a checkmark.

Note: To allow the alarm to sound even while the device is in silent mode, press **MENU** and tap **Settings** and activate the **Alarm in silent mode** field.




To delete an Alarm event:

1. Press  and tap  > .
2. Tap the time field for the desired alarm event.
3. Press **MENU** and tap **Delete alarm**.

To customize the onscreen clock:





1. Press  and tap  > .
2. Tap the onscreen alarm clock.
3. Scroll your finger across the bottom field to temporarily view each selection.
4. Tap the desired image to activate the new clock face.

To hide the onscreen clock:


1. Press  and tap  > .
2. Press **MENU** and tap **Hide clock**.

Calculator

Your device comes with a built-in calculator.

1. Press  and tap  > .
2. Enter numbers using your keyboard or by tapping an onscreen key.
 - In Portrait mode, touch and hold **CLEAR** to clear all numbers.
 - In Landscape mode, press  to clear all numbers.

Note: Tapping **CLEAR** only deletes one number at a time.




- Press  and tap **Advanced panel** to access more advanced features such as **sin** (Sine), **cos** (Cosine), **tan** (Tangent) etc.

Updating Your Device Firmware

You can update your device's software using either the **Update Firmware** options or the **SPH-M900 Software Upgrade Tool**, which is available on either the Sprint or Samsung.com websites.




Updating Your Device Firmware OTA

Over the Air (OTA) applies to those software updates that can be downloaded and installed wirelessly over the network directly to your device.

1. Press  >  and tap  > **About phone** > **System Updates**.
2. Tap **Update Firmware**. (Your device automatically downloads and installs any available updates. You may be required to power your device off and back on to complete the software upgrade.)

WARNING: You will be unable to use the Moment during the upgrade process. This upgrade is only intended for use on the Sprint SPH-M900 handset. It is incompatible with all other device models.

Confirm Your Current Device Firmware

1. Press  >  and tap  > **About phone**.
2. Scroll to the bottom of the page and locate the **Baseband version** read-only field. The firmware version will be in the format of S:M900.X.OS.XXXX.

Updating Your Device Firmware via Local Software

Some software updates cannot be updated wirelessly and require a direct computer connection which utilizes an upgrade tool. For these kinds of updates, your device will provide an onscreen message notifying you of the available update; it will direct you to an online website where you can obtain the necessary files. These local software updates require a computer, USB cable and the upgrade software.

Important: Any previous version of the Samsung Drivers must first be uninstalled, prior to installing the new M900 Software Update tool.

Note: Before initiating this update, it is recommended that you backup your information.

For further detailed instructions on usage of the tool and the update process, visit:

www.sprint.com/support

– or –

[Samsung M900 Support](#)

Before Using the Firmware Upgrade Tool



Confirm you meet all of the following requirements:

- A desktop/laptop computer running:
 - Microsoft Windows 2000 with Service Pack 4
 - Microsoft Windows XP with Service Pack 2 (Home or Professional)
 - Windows Vista (Home, Premium, Business or Ultimate)
 - Windows 7
- 200MB open hard disk space on the computer.
- All Firewall & Anti-Virus Programs should be temporarily disabled until the update process is completed.
- Administrative privileges are required to download & install software.
- Available USB Port on the connected computer.
- Direct connection of the USB cable to the computer's USB port is strongly advised. The use of a USB hub or docking station is NOT recommended.

- Make sure your device is fully charged
- Use the approved USB data cable. (Included in the retail box - P/N: APCBU10BBE.)

WARNING: You will be unable to use the Moment during the upgrade process. This upgrade is only intended for use on the Sprint SPH-M900 handset. It is incompatible with all other device models.

Confirm Your Current Device Firmware

1. Press  > **MENU** and tap  > **About phone**.
2. Scroll to the bottom of the page and locate the **Baseband version** read-only field. The firmware version will be in the format of S:M900.X.OS.XXXX.



Backup your Data Prior to Update

The firmware upgrade process will Erase ALL User Data from your device.



Please ensure that all critical information has been backed up before applying this upgrade.

As an added precaution, to preserve any data on your microSD card, please remove it from your device prior to starting the update process. See “Removing the microSD Card” on page 102.




To backup your Gmail information:

1. Press  > **MENU** and tap  > **Accounts & sync**. See “Google Mail (Gmail)” on page 152.
2. Tap the **Auto-sync** option to enable the feature (checkmark). See “Configuring Data Synchronization Settings” on page 163.
 - If the **Auto-sync** option is on, Gmail, Calendar and Contacts automatically synchronize whenever a change is made.
 - If the **Auto-sync** option is off, simply tap the Gmail, Calendar and Contacts list item to perform a one-time sync.

To backup your Exchange Mail information:




1. Press  > **MENU** and tap  > **Accounts & sync**. See “Work Email (Outlook)” on page 157.
2. Ensure all fields are enabled (checkmark present): **E-mail, Calendar, Contacts** and **Tasks**.

To backup stored text messages:

1. Press  and tap  > .
2. Select the text message from the list to view the message thread.
3. Touch and hold on the screen until the **Message Options** appear.
4. Tap **Forward** and enter a recipient's phone number.

To backup your Google applications:

Your Google™ application purchases are reloaded remotely and can be re-installed after the update is applied. See “Using the Android Market” on page 164.

1. Log into your Google account via the device.
2. Press  and tap  >  > **My downloads**.
3. Scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
4. Follow the onscreen instructions.

Remove PCStudio and Samsung Drivers

Previously installed Samsung New PC Studio and Samsung Drivers may interfere with the M900 Software Upgrade Tool. It is recommended that you remove these components prior to installation of the tool. The upgrade tool installs all of the latest drivers necessary for a successful installation.

- ▶ Click on the following link for detailed removal procedures: [Removing Samsung Drivers](#).
 - Go to **Start > Settings > Control Panel > Add or Remove Programs**.
 - Scroll down and look for Samsung Mobile USB Driver.
 - If a **Samsung Mobile USB Driver** is installed it will need to be removed by clicking on it and selecting the **Change/Remove** button
 - If the out-of-date drivers are present, click **Change/Remove**.
 - You will see a window showing you to reinstall or remove the drivers. Select **Remove USB Drivers** and click **OK** to completely remove these drivers.

- Once it is finished, click **Next**, select to restart your computer for the changes to take affect and click **Finish**.

Installation of the Software Upgrade Tool

1. Download the application exe from:
www.sprint.com/support
– or –
[Samsung Moment Firmware Update Process](#)
– or –
www.samsung.com/us/m900/softwareupdate

WARNING: Samsung Drivers must be removed prior to installation and use of this executable.

2. Confirm the executable is called **SamsungMoment_Update.exe**.
 - Depending on your source, the file might also be called: **sprint_m900_DE03_setup.exe**.
3. Save the file to your desktop.

4. Once downloaded, double-click the executable file to begin the installation process.
5. From within the SamsungSimpleDL, click **Next > Install**. Once completed, click **Finish**.
6. When prompted, select **Yes, I want to restart my computer now** and click **Finish**.


Upgrading the Device using the Upgrade Tool

1. After reboot of your computer, locate the new M900 Software Upgrade Tool shortcut.



2. Double-click the **SWUpgrade** shortcut to launch the application.
3. After reading the End User License Agreement, check the **"I accept the terms..."** button and click **Next**.



4. Follow the onscreen instructions.

- These procedures walk you through the process of connecting your device and updating the firmware. See “Connecting Your Device to Your Computer” on page 104.
- You will now see a warning screen that data not synchronized will be deleted. It is important to back up your data before moving forward. See “Backup your Data Prior to Update” on page 89.
- When you are instructed to simultaneously press and hold the **Volume Down**, **Camera** and **End** keys (download mode), it is important that you press the  button **LAST**, as this makes sure the phone does not turn on before the other two buttons are pressed. If you see the Samsung logo when you do this, you will need to remove and replace the battery and try it again.

5. Once the Flash Programming is complete, click **OK**. Your Moment will reboot and start hands-free activation.



Confirm the New Device Firmware

1. Press  > **MENU** and tap  > **About phone**.
2. Scroll to the bottom of the page and locate the **Baseband version** read-only field.
3. Confirm the version is now updated.

For additional FAQs on the Moment, visit:

www.sprint.com/support

– or –

www.samsung.com/us/m900/softwareupdate

Updating Your Android Operating System



This option allows you to update the Android Operating System (OS) on your device via an over-the-air connection. There are two components to the Moment: Sprint User-Interface (UI) firmware and device Google OS.

Note: To update the device's firmware, see "Updating Your Device Firmware" on page 87.

1. Press  > **MENU** and tap  > **About phone > System Updates > Update Android.**
2. Follow the onscreen instructions.



Updating Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your device.

1. Press  > **MENU** and tap  > **About phone > System Updates > Update Profile.**
2. Follow the onscreen instructions.

Updating Your PRL

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. Press  > **MENU** and tap  > **About phone > System Updates > Update PRL.**
2. Follow the onscreen instructions.

2F. Voice Services


- ◆ Automatic Speech Recognition (ASR) (page 94)
- ◆ Sending a Message (page 97)
- ◆ Looking Up a Contact (page 99)
- ◆ ASR Menus and Options (page 99)

Important: The **Voice Control** (Speech to Action) feature will not launch if you are currently in an active menu.

Automatic Speech Recognition (ASR)

You can use your device's built-in automatic speech recognition (ASR) software, called **Voice Control**, to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone and ASR will recognize your voice and complete tasks by itself.

Activating ASR

- ▶ Press and hold . You then hear a prompt.
 - or –
- Press  and tap  > .

The screen displays “Say a command” and the phone prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts or touch an onscreen option.

Available ASR commands include:

 
- **Call** <Name or #> to call an entry in your Contacts list or a spoken phone number. (See “Making a Voice Call With ASR” on page 95.)
- **Send Text** <Name or #> to send a new text message to an entry in your Contacts list or a spoken phone number (page 97).
- **Send Picture** <Name or #> to send a new picture message to an entry in your Contacts list or a spoken phone number (page 97).

- **Send Video** <Name or #> to send a new video message to an entry in your Contacts list or a spoken phone number (page 98).
- **Send Email** <Name> to send a new email to an entry in your Contacts list (page 98).
- **Lookup** <Name> to call an entry in your Contacts list or a spoken phone number (page 99).
- **Go To** <Menu> to jump directly to menu items or applications. (See “Opening Menus With ASR” on page 99.)
- **Play** <Playlist> to select from a list of current music playlists and then initiate the Music player.
- **Check** <item> to check your phone’s status. (See “Checking Phone Status Using ASR” on page 100.)

Tip: Use ASR in a quiet environment so it can accurately recognize your commands.

During ASR operation, press **Menu** and tap **Tutorial** to get instructions for using the software.

Making a Voice Call With ASR

1. Press and hold . You then hear a prompt.
2. When you hear “Say a command,” say “**Call**” followed by the name and the label for the phone number you wish to call. For example, say “**Call John Smith Mobile.**” The device dials the number stored for the contact “**John Smith**” with the label “**Mobile.**”
 - You can also touch the onscreen **Call <Name or #>** field to activate the function.
 - If the location is not recognized or the name does not have a phone number stored in Contacts, your phone will play the message “**No match found**” and then return you to the previous screen.
3. When you hear “**Say the name or number,**” say a name or a phone number.

Note: The “Say the name or number” prompt only occurs after saying “Call”.

- If a name has only a single number, or if you know the name but are not sure which number to call, say “**Call**” followed by the name only. For example, say “**Call John.**” If the name is recognized and there is only one phone number for the name, your device immediately places the call.

4. When you hear “**Which location?**,” say a number type (for example, “**Mobile**”).

Note: The device uses the term “location” to describe the multiple number categories for a Contact such as Mobile, Work, etc.


- If there are multiple numbers stored for the contact, the phone prompts you with “**Which Number?**” and displays a list of options. You can select an option by saying it or by touching the corresponding phone number onscreen.

Tip: You can skip steps 3 and 4 by saying a name and location after “Call” without pausing (for example, “**Call John Jones mobile**”).

Note: If ASR does not recognize the name or number, it will find the most likely matches and display a list of up to three names or numbers. You will hear “Did you say...” followed by the name or number. You can confirm by saying or tapping “**Yes.**” Say or tap “**No**” to change the selection.

Note: If the phone does not hear a command within approximately eight seconds, it deactivates Speech to Action without taking any action.

Calling a Phone Number With ASR


1. Press and hold . You then hear a prompt.
2. When you hear “Say a command,” say “**Call**” followed immediately by a valid string of digits to be dialed, for example, say “**Call 555 555 5555.**”
3. If the correct number is repeated, say “**Yes**” to dial the number.
 - If the number is not recognized, the phone will play the message “**Did you say call?**”
 - If the announced number is not correct, either say “**No,**” or “**Cancel.**” When the correct number is announced, say or touch “**Yes**” to dial the number.

Speak naturally and clearly and remember to speak one digit at a time—1-800 should be pronounced “One Eight Zero Zero.”

Sending a Message


Use a single voice command to launch messaging on your device and specify a recipient for the message.

To send a text message:



1. Press and hold . You then hear a prompt.
2. When you hear “Say a command,” say “**Send Text**” followed by the name or phone number of the recipient. For example, say “**John Smith**” or “**9725551212**.” The entry information for the specified contact is displayed.

Note: If a name contains multiple numbers and you do not specify the number type (work, mobile, etc.), your device chooses the mobile number by default.

3. If the device did not properly recognize the command, it prompts you with “**Did you say, send text to?**”

 
4. Respond by saying one of the following: **Yes**, **No**, **Repeat** or **Cancel**.
5. Press  and tap **Add subject** and tap the **Subject** field to enter a subject text.
6. Tap the **Type to compose** field to enter text.
7. Tap **Send** to complete the process.

To send a picture message:

1. Press and hold . You then hear a prompt.
2. When you hear “Say a command,” say “**Send Picture**” followed by the name or phone number of the recipient. For example, say “**John Smith**” or “**9725551212**.” The entry information for the specified contact is displayed.
3. If the device did not properly recognize the command, it prompts you with “**Did you say, send text to?**”
4. Respond by saying one of the following: **Yes**, **No**, **Repeat** or **Cancel**.
5. Press  and tap **Attach**.

6. Tap either **Pictures** or **Capture picture**. Once attached, you can **View**, **Replace** or **Remove** the attached image.
 - **Pictures**: Opens the Gallery application. Use the onscreen navigation to locate the picture you wish to send with the outgoing Picture Mail message.
 - **Capture picture**: Follow the onscreen prompts to take a new picture and then attach it to the new message.
7. Press **MENU** and tap **Add subject** and tap the **Subject** field to enter a subject text.
8. Tap the **Type to compose** field to enter text.
9. Tap **Send** to complete the process.

To send a video message:

1. Press and hold , you will then hear a prompt.
2. When you hear "Say a command," say "**Send Video**" followed by the name or phone number of the recipient. For example, say "**John Smith**" or "**9725551212**." The entry information for the specified contact is displayed.

3. If the device did not properly recognize the command, it prompts you with "**Did you say, send video to?**"
4. Respond by saying one of the following: **Yes**, **No**, **Repeat** or **Cancel**.
5. Press **MENU** and tap **Attach**.
6. Tap either **Videos** or **Capture video**. Once attached, you can **View**, **Replace** or **Remove** the attached video.
 - **Videos**: Opens the Gallery application. Use the onscreen navigation to locate the video you wish to send with the outgoing Video Mail message.
 - **Capture video**: Follow the onscreen prompts to shoot a new video and then attach it to the new message.
7. Press **MENU** and tap **Add subject** and tap the **Subject** field to enter a subject text.
8. Tap the **Type to compose** field to enter text.
9. Tap **Send** to complete the process.

To send an email message:

1. Press and hold . You then hear a prompt.

2. When you hear “Say a command,” say “**Send Email**” followed by the name of the recipient. For example, say “**John Smith**”. The entry information for the specified contact is displayed.

Note: If a name contains multiple email addresses and you do not specify the account (Gmail, work, etc.), your device chooses the first email account by default.


3. Tap an email account to use for the new outgoing email message: **Compose** (Gmail) or **Work Email**.
 - Tap **Use by default for this action** to assign the selection as your new default choice for outgoing email messages via the ASR.
4. Tap the **Subject** field to enter subject text.
5. Tap the **Compose Mail** field to enter the email text.
6. Press **MENU** to select from the following options:
 - **Send:** to deliver the current email message.
 - **Add Cc/Bcc:** to add more recipients to your outgoing email message.
 - **Attach:** to attach a current picture or take a new one (**MENU** > **Capture picture**).

- **Edit subject:** to alter the current subject text field.
- **Discard:** to delete the current email message.

7. Tap **Send** to complete the process.

Looking Up a Contact

Use a single voice command to lookup an existing contact and view their information.

1. Press and hold . You then hear a prompt.
2. When you hear “Say a command,” say “**Lookup**” followed by the name.

ASR Menus and Options

Opening Menus With ASR

You can jump directly to many menu items or applications by saying “**Go to**” followed by a menu option.

1. Press and hold . You then hear a prompt.

2. When you hear **“Say a command,”** say **“Go To.”** A list of valid destinations is displayed and you are prompted with **“Which shortcut?”**
 - The phone opens the selected menu.
 - If the list is too long to fit on one screen, you can say the name of a destination.
 - Examples can include: Alarm Clock, Amazon MP3, Bejeweled Demo, Browser, Calculator, Calendar, Camcorder, Camera, etc.
3. Say the name of the application you want the device to activate.


Tip: Tap and scroll through the onscreen list to reveal more options.

Checking Phone Status Using ASR

You can use ASR to obtain information about your phone:

- **Status**
- **Voicemail**
- **Messages**
- **Missed Calls**

 
- **Time**
- **Signal Strength**
- **Network**
- **Battery**
- **My Phone Number**
- **Volume**

1. Press and hold . You then hear a prompt.
2. When you hear “Say a command,” say **“Check.”**
3. If you hear **“Which status item?”**, say an item.

Tip: Touch and scroll through the onscreen list to reveal more options.


ASR Options

To change ASR confirmation:

1. Press and hold . You then hear a prompt.
2. Press **MENU** and tap **Settings > Confirmation** and select an option.
 - **Automatic** to ask for confirmation only when the system is not sure what you said.

- **Always Confirm** to always ask for confirmation.
- **Never Confirm** to never ask for confirmation.


To adapt the system to your voice:

1. Press and hold . You then hear a prompt.
2. Press **MENU** and tap **Settings > Adaptation > Adapt Voice**.
3. Press the onscreen **Start** and repeat each word, phrase or telephone number you hear.

To reset the adaptation:

1. Press and hold .
2. Press **MENU** and tap **Settings > Adaptation > ResetVoice > Yes**.

To change the ASR mode:

1. Press and hold .
2. Press **MENU** and tap **Settings > Audio Modes** and select an option.
 - **Expert Mode** to sound a beep only.

- **Prompt Mode** to prompt for required information.
- **Readout Mode** to prompt for required information and to read aloud the content displayed on the main screen.

2G. microSD Card

- ◆ Your Device's microSD Card and Adapter (page 102)
- ◆ Connecting Your Device to Your Computer (page 104)
- ◆ microSD Card Settings (page 105)
- ◆ Important Connection Information (page 106)

Your Device's microSD Card and Adapter

The microSD Card


Your device is equipped with a preinstalled 2GB microSD™ (Secure Digital) memory card. It allows you to store images, videos, music and voice data in your device.

Important: Camera, Camcorder and Music playback features are dependant on having a microSD memory card installed. Although the Samsung Moment™ comes with a 2GB card (pre-installed), it can support SDHC (Secure Digital High Capacity) cards of up to 16GB.

Removing the microSD Card

1. Remove the cover.
 - Press down on the battery cover.
 - While applying pressure, slide the cover away from the camera lens.
2. Remove the battery.
3. Locate the memory slot between the lens and battery compartment.

Note: You can easily damage the microSD card and its adapter by improper operation. Please be careful when inserting, removing or handling it.

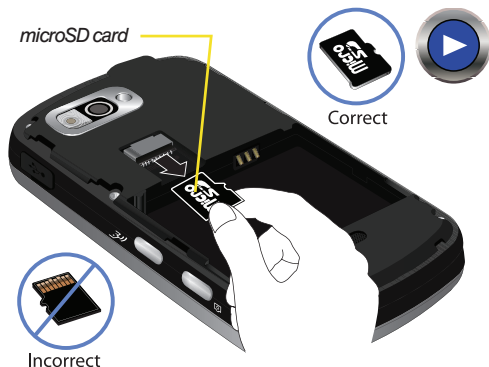

4. Make sure the microSD card's gold contacts are facing down.
5. Place your fingernail along the curved edge of the microSD card (closest to the battery compartment) and gently pull it out of the slot.

WARNING: Do not over-insert the card as this can damage the contact pins.

6. Place the battery back into its compartment.
7. Replace the battery cover and firmly slide it in until you hear a click.


Note: Be sure to use only recommended microSDHC (Secure Digital High Capacity) cards ($\leq 16\text{GB}$). Using non-recommended microSD cards could cause data loss and damage your device.

WARNING: The microSD card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing or handling it.

Re-inserting the microSD Card

Refer to the procedures in the previous section. The battery must be removed prior to installation of a microSD card.

microSD Icon Indicators

You will only see a microSD-related icon if the card has been unmounted (released from use) from the device ().



WARNING: **DO NOT** remove a microSD card while the device is accessing or transferring files. Doing so will result in loss or damage of data. Make sure your battery is fully charged before using the microSD card. Your data may become damaged or lost if the battery runs out while you are using the microSD card.

microSD Adapter

The supplied microSD adapter allows you to use microSD cards in other SD-compatible devices, like computers, cameras and printers. Before using the microSD card with an SD-compatible device, you will need to insert the microSD card into the microSD adapter.

To insert the microSD card into the microSD adapter:

- ▶ With the label side of the microSD card facing up, insert the card into the supplied microSD adapter and gently slide the card until it is fully inserted.

To remove the microSD card from the microSD adapter:

- ▶ Hold the front edge of the microSD card and gently pull it out to remove it from the adapter.

Write Protection

The microSD adapter has a built-in Write Protection lock to prevent accidental overwriting or removal of your data when the microSD card and adapter are inserted in another device.


- ▶ Slide the Write Protection lock tab down into the “Lock” position to prevent overwriting of data. To allow data to be added or removed from the microSD card, slide the Write Protection lock tab up into the normal position.

Connecting Your Device to Your Computer

Before using your device’s mass storage capabilities, you need to prepare your device’s data services to synchronize with your desktop or laptop computer. Once you have connected the device to the computer, you can transfer your data to or from the microSD card.

Before You Begin

Here is what you will need to have before you can successfully establish a connection between your Samsung Moment™ and PC.

- microSD card (internally installed prior to start)
 - compatible USB cable (included)
1. With the microSD card installed, connect your device to your computer using a compatible USB cable. (Wait for the connection to be completed. When connected, the host computer will automatically detect your device.)
 2. The USB icon () now appears in the top left Notifications area on your device.
 3. Touch and drag down the Status screen to reveal the Notifications page (or from the Home screen press **MENU** and tap **Notifications**).
 4. Tap **USB connected > Mount** to copy files between your computer and your device's microSD card.
 5. Locate the newly created Drive letter on your computer. You can now begin to use the microSD card as a storage device.




To remove the connection:

- ▶ When you have finished transferring data, click the USB device icon on your computer's taskbar and follow the onscreen instructions to safely unplug the USB cable.

microSD Card Settings

Viewing Memory in the microSD Card

The Samsung Moment™ allows you to review the memory allocation of both your device's internal storage and that of the microSD card.

1. Press  > **MENU** and tap  > **SD card & phone storage**.
2. Review the available information.
 - The storage capacity page is divided into two sections: **SD card** and **Internal phone storage**.
3. Press  to return to the previous page.

Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. Press  > **MENU** and tap  > **SD card & phone storage**.
2. Touch **Unmount SD card** to release the microSD card from its use by the device. The  icon appears within the Notifications area to indicate an unmounted internal microSD card.
3. Once released, tap **Format SD card > Format SD card > Erase everything**.
 - Once completely formatted, the card is automatically re-mounted (reconnected for use by the device).

Important: The formatting procedure erases all the data on the microSD card, after which the files **CANNOT** be retrieved. To prevent the loss of important data, please check the contents before you format the card.

Important Connection Information

- To avoid loss of data, DO NOT remove the USB cable, the microSD card or the battery while accessing or transferring files.
- DO NOT use your computer to change or edit folder or file names on the microSD card and do not attempt to transfer large amounts of data from the computer to the microSD card. Doing so may cause the microSD card to fail.
- DO NOT turn off or restart your computer or put it into standby mode, while using a mass storage device. Doing so will result in loss or damage of data.
- The internal microSD card can only be mounted for use by either the device or a connected computer. Prior to accessing the card via a different method, it must first be unmounted from its current device (phone or computer-USB).

Important: The internal microSD card can only share a connection with one device at a time, either your device or your computer (via its USB connection), not both. You cannot browse the contents of the card via your device if they are currently being browsed via your PC.

2H. Camera

- ◆ Taking Pictures (page 107)
- ◆ Recording Videos (page 111)


Note: The storage card that comes installed on your device allows you to use the camera and camcorder features. All pictures and videos are stored on the internal 2GB microSD card. The Samsung Moment™ supports cards of up to 16GB.

Taking Pictures




Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the lens and pressing a button.





To take a picture:

1. Press and hold the camera key () located on the side of the device.

– or –

Press  and tap  >  to activate camera mode. (Additional camera options are available through the camera settings page.)

See “Camera Settings” on page 108 for more information.)


2. Using the device’s display screen as a viewfinder, aim the camera lens at your subject.
3. Press  or  until the shutter sounds. (Your device automatically saves the picture to the **DCIM** folder on the microSD card.)

Camera Settings

1. From camera mode, press **MENU** and adjust any of the following options:


- **Gallery** to access the Gallery of stored camera images.
 - Tapping **Gallery** while in the Camera mode opens the **Camera pictures** gallery.
 - Tapping Gallery and pressing **MENU** reveals gallery-specific options such as **Capture picture**, **Capture video**, **Slideshow**, **Multiselect** or **Settings**.

- Tap an image to open it and press **MENU** for options such as **Share**, **Rotate**, **Delete**, **Crop**, **Set as** and **More**.

- Press  to return to the previous screen.


■ **Settings** to access camera hardware settings:

- **Flash mode** to activate the built-in flash and provide an additional light source for new pictures taken with the Samsung Moment™. Set to **On**, **Off** or **Auto**.
- **White balance** to select from effects: **Incandescent**, **Daylight**, **Fluorescent**, **Cloudy** or **Auto**.
- **Color effect** to select from: **Mono**, **Sepia**, **Negative**, **Aqua**, **Whiteboard** or **None**.
- **Store location** to activate the on-board GPS hardware and attach current location information to any new pictures.
- **Picture size** to select from: **1M**, **2M** or **3M Pixels**.
- **Picture quality** to select from: **Normal**, **Fine** or **Super fine**.
- **Focus mode** to select from: **Auto** or **Macro**.





2. Press  to return to the previous screen.

Camera Gallery Options


When the device is in camera mode, accessing the gallery provides access to pictures on your device.

1. Press **MENU** and tap **Gallery** to display the gallery of images taken on your device and stored on the microSD card.
 2. Press **MENU** to reveal gallery-specific options:
 - **Capture picture** to return to the camera mode and take another picture.
 - **Capture video** to switch to the camcorder mode and shoot a new video.
 - **Settings** to adjust general settings and make modifications to the slideshow parameters.
 - **Display size** to change the size of the image or video preview images on the gallery page. Options include: **Large** (default) or **Small**.
 - **Sort order** to change the order in which the images or videos are displayed on the Camera pictures gallery page. Options include: **Newest first** (default) or **Newest last**.
 3. Press  to return to the previous screen.
- **Confirm deletions** to require an additional onscreen notification prior to completing the deletion of an image or video.
 - **Slideshow interval** to change the length of time each slide appears onscreen during the slideshow. Options include: **2 seconds**, **3 seconds** (default) or **4 seconds**.
 - **Slideshow transition** to change the transition used between each image displayed onscreen during the slideshow. Options include: **Fade in & out** (default), **Slide left - right**, **Slide up - down** or **Random selection**.
 - **Repeat slideshow** to enable the repetition of the slideshow. Once the last image in the current gallery is displayed, the slideshow begins again with the first image in the list.
 - **Shuffle slides** to display the slideshow images in a random fashion and not by the order in which they appear in the gallery.

Camera Image Settings

1. Press  and tap  >  to activate camera mode.
2. Press  and tap **Gallery**.
3. From **Camera pictures** gallery, tap an image icon to open the image.

Note: **Picture options** can also be accessed by touching and holding the image from the gallery. These options include: **View, Share, Rotate, Delete, Crop, Set as, Details, Show on Maps** and **Slideshow**.

4. Press  to display the following image menu options:
 - **Share** to activate the picture share menu from which you can choose to share the current image via one of many options:
 - **Gmail** to attach your image to a new Gmail email message.
 - **Messaging** to insert your image into a new outgoing MMS message (multimedia text message).

- **Photo & Video Places** to upload your current image to a selected target Web community location. Options include: My PC/Email, My Space, YouTube, Photobucket and Facebook.
- **Picasa** to upload your current image to your Picasa account. Tap **Upload** to complete the process.
- **Work Email** to insert your image into a new outgoing Work Email.
- **Rotate** to rotate the current image. Options include: **Rotate left** or **Rotate right**.
- **Delete** to delete the current image.
- **Crop** to crop the current image. Crop the image and tap **Save** to a new version of the original.
- **Set as** to assign the current image to either a current Contact's display image or as the Home screen background wallpaper (page 111).
- **More** to access additional image options such as:
 - **Details** to display image details such as file name, file size, resolution and date taken.

- **Settings** to adjust general settings for the picture gallery and make modifications to the slideshow parameters. See “Camera Gallery Options” on page 109.

Assigning Pictures







After taking a picture, assign it as a picture ID for a Contacts entry or as the Home screen background image (wallpaper).


 
1. Take a picture. (See “Taking Pictures” on page 107.)
2. Press **MENU** and tap **Gallery**.
3. From **Camera pictures** gallery, tap an image icon to open the image.
4. With the picture displayed, press **MENU** and tap **Set as** and select an option.
 - **Contact icon** to assign the picture to a Contacts entry as a picture ID. Tap an entry from the Contacts tab, crop the image and tap **Save** to assign the picture.

- **Wallpaper** to assign the picture as a background image, crop the image and tap **Save** to assign the picture.


Recording Videos

In addition to taking pictures, you can record, view and send videos with your device's built-in video camera.

1. Press and hold the camera key () located on the side of the device.
– or –
Press  and tap  >  to activate camera mode. (Additional camera options are available through the camera settings page. See “Camera Settings” on page 108 for more information.)
2. Touch and drag the selector from camera mode to video mode.
3. Using the device's display screen as a viewfinder, aim the camera lens at your subject.
4. Press  or  to begin recording.

5. Press  or  to stop recording. (Your device automatically saves the video within the DCIM folder on the microSD card.)

Camcorder Settings

1. From camcorder mode, press **MENU** and adjust any of the following options:
 - **Gallery** to access the Gallery of stored videos.
 - Tapping **Gallery** while in Camcorder mode opens the **Camcorder videos** gallery from which you can play, share, delete or view details for stored videos.
 - From the Camera videos gallery, press and hold a video icon to display video menu options such as **Play**, **Share**, **Delete** and **Details**.
 - Press  to return to the previous screen.
 - **Settings** to access camera/camcorder hardware settings:
 - **Flash mode** to activate the built-in flash and provide an additional light source for new pictures taken with the Samsung Moment™.

- **Video quality** to adjust the video quality. Options include **Low (for MMS messages)** and **High (for SD card)**.
- **Video duration** to select **60 seconds (for MMS)**, **10 minutes** or **30 minutes**.
- **White balance** to select from effects: **Incandescent**, **Daylight**, **Fluorescent**, **Cloudy** or **Automatic**.
- **Color effect** to select from: **Mono**, **Sepia**, **Negative**, **Aqua**, **Whiteboard** or **None**.


2. Press  to return to the previous screen.

Camcorder Gallery Options





When the device is in camcorder mode, accessing the gallery provides access to videos on your device.

1. Press **MENU** and tap **Gallery** to display the gallery of videos taken on your device and stored on the microSD card.
2. Press **MENU** to reveal gallery-specific options for the Camera videos: : **Capture picture**, **Capture video**, **Multiselect** and **Settings**.

- **Capture picture** to return to the camera mode and take another picture
- **Capture video** to switch to the camcorder mode and shoot a new video.
- **Settings** to adjust general settings and make modifications to the slideshow parameters. See “Camera Gallery Options” on page 109.

3. Press  to return to the previous screen.

Video Settings

1. Press and hold the camera key () located on the side of the device.
– or –
Press  and tap  >  to activate camera mode.
2. Touch and drag the selector from camera mode to video mode.
3. Press **MENU** and tap **Gallery**.
4. From **Camera videos** gallery, press and hold the video icon to display the following video menu options:

- **Play** to begin playback of the current video file.
- **Share** to activate the **Share video via** menu from which you can choose to share the current video via one of many options:
 - **Gmail** to attach your video to a new Gmail email message.
 - **Messaging** to attach your video to a new MMS message.
 - **Photo & Video Places** to upload your current video file to a selected target Web community location. Options include: My PC/Email, Photobucket, Facebook and My Space.
 - **Work Email** to insert your video file into a new outgoing Work Email message.
 - **YouTube** to upload your current video file to a YouTube page. Tap **Upload** to complete the process.
- **Delete** to delete the current video.
- **Details** to display image details such as File name, File size, Resolution, Duration, Frame rate, Bit rate, Format and Date taken.



2I. Bluetooth

- ♦ Turning Bluetooth On and Off (page 114)
- ♦ Using the Bluetooth Settings Menu (page 115)
- ♦ Pairing Bluetooth Devices (page 117)
- ♦ Sending Contacts via Bluetooth (page 118)
- ♦ Disconnecting Bluetooth Connection During an Active Call (page 119)

About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits and Bluetooth-enabled handhelds, computers, printers and wireless devices. The Bluetooth communication range is usually up to approximately 30 feet.

Note: If the Speak incoming caller ID feature is turned on (**Settings > Text-to-speech > Speak incoming caller ID**) while using a Bluetooth stereo headset when receiving a call, a ringer functions as a normal ringer, not a Caller ID.




Turning Bluetooth On and Off

By default, your device's Bluetooth feature is set to **Off**. Turning Bluetooth on activates the internal Bluetooth antenna.



Note: Activating Bluetooth can drain your battery faster and reduce your available usage times. It is recommended that if you do not need it active, turn it off.

It is also recommended to turn off your Bluetooth within locations that prohibit its use.

To turn Bluetooth on:

1. Press  > **MENU** and tap  > **Wireless & networks**.
2. Tap the **Bluetooth** field to activate the feature (checkmark indicates active). When active,  appears within the Status area.

To turn Bluetooth off:

- ▶ Press  > **MENU** and tap  > **Wireless & networks > Bluetooth**.
 - Tap to remove the green checkmark and deactivate Bluetooth.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



– Bluetooth is active



– Bluetooth is connected (paired) and communicating



[no icon] – Bluetooth is disabled (default status)


Using the Bluetooth Settings Menu

The **Bluetooth settings** menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

- Entering or changing the name your device uses for Bluetooth communication and description.
- Setting your device's visibility (or "discoverability") for other Bluetooth devices.
- Displaying your device's Bluetooth address.

To access the Bluetooth Settings menu:

1. Press  > **MENU** and tap  > **Wireless & networks > Bluetooth settings**.
2. Set your Bluetooth options: **Device name**, **Discoverable** and **Scan for devices**.

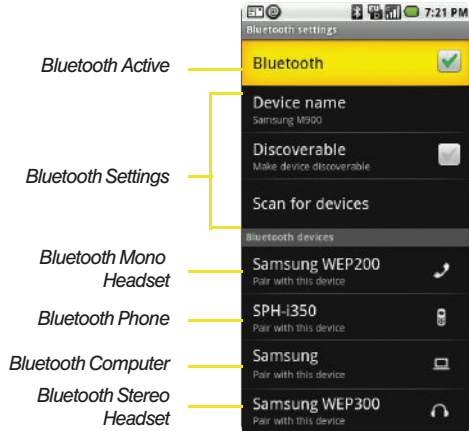

To change your Bluetooth name:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Device name**.
3. Tap the **Device name** field, enter a new name.
4. Tap **OK** (or **Done**) to complete the rename process.

To make your device visible:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Discoverable**.
 - Making your device discoverable allows it to be detected by other devices for pairing and communication.

Note: Your device is visible for up to 120 seconds (2 minutes). This value appears as a countdown within this field.

To scan for Bluetooth devices:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Scan for devices** to search for visible external Bluetooth-compatible devices such as Headsets, devices, printers and computers.

Pairing Bluetooth Devices


Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your device with another Bluetooth device:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Discoverable**. Your device must be visible to successfully pair with an external device.
3. Tap **Scan for devices**. (Your device will display a list of discovered in-range Bluetooth devices, page 115.)
4. Tap a device from the list to initiate pairing.
5. Enter the passkey or PIN code and tap **Done > OK**.

6. The external device will then have to also accept the connection and enter your device's PIN code.

- Once successfully paired to an external device,  appears within the Status area.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Note: Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode again.

To disconnect a paired device:

Disconnecting a paired device breaks the connection between the device and your Samsung Moment™, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. Verify your Bluetooth is active.

2. From the Bluetooth settings page, touch the previously paired device (from the bottom of the page).
3. Tap **OK** to confirm disconnection.
– or –

From the Bluetooth settings page, touch and hold the name of the previously paired device and select **Disconnect**.


Note: Disconnections are manually done but often occur automatically if the paired device goes out of range of your Samsung Moment™ or it is powered off.

To delete a paired device (unpair):

Deleting a device from your list removes its “connection record” and upon reconnection would require that you re-enter all the previous pairing information.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, touch and hold the name of the previously paired device (from the bottom of the page). This opens the connected device’s menu options.
3. Tap **Disconnect & unpair** to confirm deletion.

To access a paired device’s settings:



1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, **touch and hold** the name of the previously paired device.
3. Tap **Options...** and configure the desired options.
4. Press  to return to the previous page.


Sending Contacts via Bluetooth

Depending on your paired devices’ settings and capabilities, you may be able to send pictures, Contacts information or other items using a Bluetooth connection.

Note: Prior to using this feature, Bluetooth must first be enabled and the recipient’s device must be visible.


Only Contacts can be sent via Bluetooth. No other file type (video, image or audio) can be sent using Bluetooth.

1. Press  and tap .
2. Touch and hold a Contact entry from the Contacts tab list to reveal the options menu specific to this entry.
3. Tap **Send via Bluetooth**. If your Bluetooth is currently off, tap **Yes** to reactivate it for this process to continue.
4. Tap a paired device. The recipient will be asked to accept the incoming Contacts entry data.

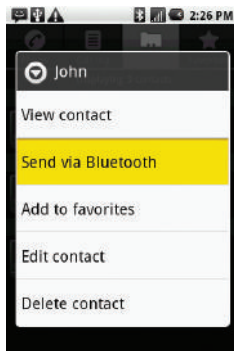



Disconnecting Bluetooth Connection During an Active Call


1. During an active call, where the audio is being routed through a connected Bluetooth device (headset or hands-free connection), tap **Bluetooth** to route the device's audio through the connected Bluetooth headset (On) or through the speaker (Off).

- When the call is routed to a Bluetooth headset, the current call area is surrounded by a blue box, the **Bluetooth** button indicates it's on and shows the **Bluetooth** call icon ().

Call routed through Bluetooth headset

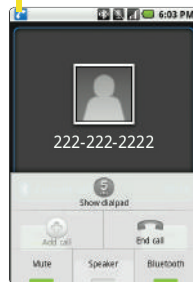

- When turned off, the call is routed through either the earpiece or speaker, the call area is surrounded by a green box, the **Bluetooth** button indicates its off and shows ().

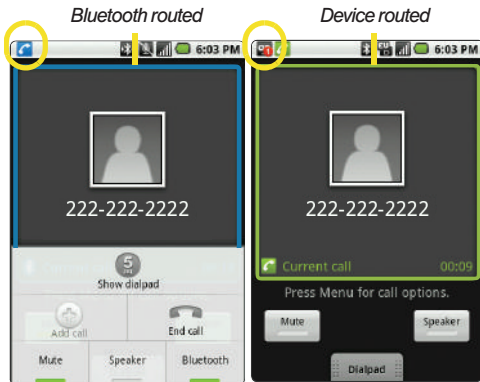

Section 3
Sprint Service



3A. Sprint Service: *The Basics*

- ◆ Visual Voicemail (page 122)
- ◆ Text Messaging (SMS) (page 128)
- ◆ Multimedia Messaging (MMS) (page 130)
- ◆ Caller ID (page 134)
- ◆ Call Waiting (page 135)
- ◆ Making a 3-Way Call (page 135)
- ◆ Call Forwarding (page 136)
- ◆ Roaming (page 136)



Visual Voicemail

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first.

This new feature periodically goes out to your voicemail and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message. Always use a password to protect against unauthorized access.

Setting Up Your Visual Voicemail

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your device is activated.

1. Press  and tap .
2. Tap **Personalize now** and follow the system prompts to:
 - Create a password
 - Record your name announcement.
 - Record your greeting.

3. When prompted to enter information, press **MENU** and tap **Show dialpad** to bring up the onscreen dialpad that can be used to input your numeric responses.

– or –

Tap **Dialpad** from the bottom of the active call window.



Note: Voicemail Password

Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

4. Once you have completed the setup process, return to the Voicemail page (see step 1).
5. Tap the **Welcome to Voicemail** message on the screen to play a brief explanation of the Voicemail services.

The following is a description of the features available while reviewing a Voicemail message.





- **Timeline** provides a visual timeline for the current message. Touch and drag this bar to scrub through the message to different points. Tap  to pause the playback, tap  to resume.
- **Dial** allows you to callback the sender of the current voicemail.
- **Reply** allows you to reply back to the sender with your own new voicemail message.

- **Speaker Off/On** to either turn the speakerphone on or off during playback. If the speakerphone feature was enabled within the Voicemail Settings menu, the speakerphone will always be automatically enabled during voicemail playback (page 125).
- **Delete** to delete the current voicemail message. Tap **OK** to confirm the deletion process.



Configuring Voicemail Options

To access the Voicemail menu options:




1. Press  and tap .
2. Press **MENU** and select from the following:
 - **Compose** to compose a new voicemail message.
 - **Play all new** to playback all new (unheard) voicemail messages.
 - **Undelivered** to display a list of currently undelivered outgoing voicemail messages.
 - **Delete** to delete selected messages from your current list of available voicemail messages.

- **Search** to search through your currently available voicemail message based on a matching text string.
- **Settings** to configure your Voicemail application settings.





To access a Voicemail message's options:

1. Press  and tap .
2. Tap an onscreen voicemail message and press **MENU** and select from the following:
 - **Lock/Unlock** to prevent deletion of the selected voicemail message.
 - **Text message** to create and deliver a new text message to the current sender's phone number.
 - **Reply** to reply to current voicemail. You can then reply to the sender or forward it to anyone with either an email or phone number. This allows you to send this voicemail message to several recipients at the same time.
 - **Forward** to forward the current voicemail to another recipient.
 - **Add to contacts** to add the caller in the current voicemail to your contacts.

Configuring Voicemail Settings



1. Press  and tap .
2. Press  and tap **Settings**. From the Settings menu, you can:
 - Tap **Notifications** to configure how you are notified.
 - Tap **Pictures** to always show or always hide pictures from contacts.
 - Tap **Speakerphone** to automatically activate when you review your Visual Voicemail (page 125).
 - Tap **Change greeting** to adjust your voicemail greeting (page 126).
 - Tap **From name** to enter a name or number that is attached to your outgoing voicemails as part of an identification string (page 127).
 - Tap **Check for upgrade** to search for an upgrade to your Visual message software.
 - Tap **About Voicemail** to view build information about the current visual voicemail application.

Configuring Voicemail Notifications

- You can configure your device to notify you of a new voicemail by displaying  within the Notifications area of the Status bar. When the notifications option is turned on, you can also elect to hear an assigned ringtone and to activate a vibrate notification.
1. Press  and tap .
 2. Press  and tap **Settings > Notifications** to make your alterations.
 - Tap **Notifications** field (placing a checkmark adjacent to the option) to activate the feature.
 - With the display message notifications feature turned on, you can also select a ringtone and turn on or off the vibrate notification.
 - Tap **Notifications** field again to deactivate the notifications feature.

Configuring Voicemail Pictures

You can configure the device to always show or to always hide pictures from contacts.

1. Press  and tap .
2. Press **MENU** and tap **Settings > Pictures** to make your selection.
 - Tap **Pictures** field (placing a checkmark adjacent to the option) to show pictures from contacts.
 - Tap **Pictures** field again to hide pictures from contacts

Automatically Enabling the Speakerphone

Every time you access a selected message from your Visual Voicemail list, you can configure the device to automatically launch the built-in speakerphone so that you can clearly hear the message.



1. Press  and tap .

2. Press **MENU** and tap **Settings** to make your alterations.

- Tap **Speakerphone** field (placing a checkmark adjacent to the option) to activate the feature.
- Tap **Speakerphone** field again to deactivate the speakerphone.



Changing your Main Greeting via the Voicemail Menu

Your main greeting can be changed directly via the device menu system. This direct access saves you from having to navigate within the voicemail menu.

1. Press  and tap .
2. Press **MENU** and tap **Settings > Change greeting**.
3. Tap **OK** and follow the prompts to change your current greeting.


Editing the From Name via the Voicemail Menu

From your device menu, you can quickly change the name or number attached to your voice messages.

1. Press  and tap .
2. Press **MENU** and tap **Settings > From name**.
3. Tap the existing identification field and enter a new identifying name or number (used to identify you to recipients of your voice messages).
4. Tap **OK** to save your information.

Voicemail Notification

There are several ways your device alerts you to a new message:

- By sounding the assigned ringer type.
- By displaying  within the Notifications area of the Status bar.



New Voicemail Message Alerts


When you receive a new voice message, your device alerts you and prompts you to check your voicemail.

To access your voicemail:

1. Press  and tap .
2. Press and hold **1**.

To display your Missed Log:

- Press  and tap  > **Call log**.



Note: When you are roaming off the Nationwide Sprint Network, you may not receive notification of new voicemail messages. Sprint recommends that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, tap  and enter your password. Roaming rates apply when you access voicemail while roaming off the Nationwide Sprint Network.

Your device accepts messages even when it is turned off. However, your device notifies you of new messages only when it is turned on and you are in a Sprint service area.

Retrieving Your Voicemail Messages


You can review your messages directly from your wireless device or from any other touch-tone phone. To dial from your wireless device, either speed dial your voicemail or use the menu keys.

Using the Voicemail Menu to Access Your Messages



1. Press  and tap .
2. Tap an onscreen entry to listen to your selected message.
– or –
Touch and hold a voicemail entry and select **Play**.

Note: You are charged for airtime minutes when you are accessing your voicemail from your wireless device.

Using Another Phone to Access Messages


1. Dial your wireless phone number.
2. When your voicemail answers, tap .
3. Enter your password.

Using the Voicemail Menu to Delete Your Messages

1. Press  and tap .
2. Touch and hold a voicemail entry and select **Delete this message > OK**.




Text Messaging (SMS)

With text messaging (SMS), you can send and receive instant text messages between your wireless device and another messaging-ready phone. When you receive a new message, it will automatically display on your device's screen.

Messaging is available via the Messaging application () in your Applications tab.




Note: See your service plan for applicable charges for text messaging and SMS voice messaging.

Composing Text Messages

1. Press  and tap  > .
2. Press **MENU** and tap **Compose**.

Note: From the Messages screen, you can also touch **New message** to begin creating a new outgoing message.

3. Tap the **To:** field and enter the recipient's phone number or email information using either the onscreen or QWERTY keyboards.
 - **Contacts** as you enter either a phone number or email address, if the information matches a current contact's entry information, you will see a match. When you see a match, touch the associated name to complete the addressing.
 - **Mobile** to use the keypad to enter a wireless phone number directly.
 - **Email** to enter the recipient's email address.
4. Tap **Next** when you have finished entering recipients.




5. Touch the **Type to compose** field and enter your message. (See "Entering Text with Onscreen Keyboard" on page 41.)
6. Insert an Emoticon or a Smiley.
 - To enter an emoticon, touch and hold  from the onscreen keyboard.
 - To enter a smiley from the onscreen keyboard, press **MENU** and tap **Insert smiley** or press  and  from the QWERTY keyboard.
 - Make a selection from the onscreen list to then insert it into your current message.
7. Review your message and tap **Send**.

Accessing Text Messages

To read an SMS Text message:


- When you receive a text message, you will see it listed within the Messaging screen. Touch the message or use your Optical Joystick to open the message and then scroll down and view its entire content.

To reply to a text message:

1. While the message is open, tap the **Type to compose** field and then type your reply message.
2. Compose your reply or use the preset messages or icons.
 - To type a message, use your keypad to enter your message. (See “Entering Text with Onscreen Keyboard” on page 41.)
3. Insert an emoticon or a Smiley.
 - To enter an emoticon, touch and hold  from the onscreen keyboard.
 - To enter a smiley from the onscreen keyboard, press **MENU** and tap **Insert smiley** or press  and  from the QWERTY keyboard.
4. Review your reply and press **Send**. (You may select additional messaging options by pressing **MENU**.)
 - Options include: **Call**, **Add subject**, **Attach**, **Send**, **Insert Smiley** or **More** (**Delete thread**, **All threads** and **Add Contacts**).




Multimedia Messaging (MMS)

With multimedia messaging (MMS), you can send and receive instant text messages that contain text, pictures, audio, recorded voice or a picture slideshow.

Messaging is available via the Messaging application () in your Applications tab.

Note: See your service plan for applicable charges for text messaging and MMS voice messaging.


Composing MMS Messages

1. Press  and tap  > .
2. Press **MENU** and tap **Compose**.

Note: From the Messages screen, you can also touch **New message** to begin creating a new outgoing message.

3. Tap the **To:** field and enter the recipient's phone number or email information. As you enter the phone number or email address, matching contacts appear onscreen. Tap an available matching recipient or continue entering the phone number or email address.

4. Touch the **Type to compose** field and enter your message. (See “Entering Text with Onscreen Keyboard” on page 41.)
5. Press **MENU** and tap **Attach**.
6. Select a multimedia attachment type:
 - **Pictures:** Opens the Gallery application. Use the onscreen navigation to select the picture you wish to send with the outgoing message.
 - **Capture picture:** Opens the camera application. Take a picture, then tap **Attach** to use this image in your message. See “Taking Pictures” on page 107.
 - **Videos:** Opens the Gallery application. Use the onscreen navigation to select a video and attach it to your outgoing message.
 - **Capture Video:** Opens the camcorder application. Shoot a video, then tap **Attach** to use this video in your message. See “Recording Videos” on page 111.
 - **Audio:** Opens the Select audio menu. Use the onscreen navigation to select an audio file and tap **OK**.

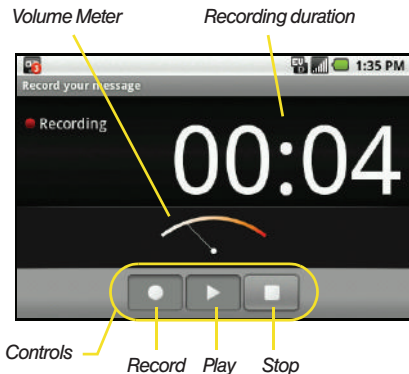

- **Record Audio:** Opens the message recorder (shown above).
 - **Record Duration:** length of the recorded voice message.
 - **Volume Meter:** displays the current recording's volume level.
 - **Record:** starts recording your message.
 - **Play:** plays back the current recording.

- **Stop**: stops the recording. Once stopped, tap either **Use this recording** (attach it to your message) or **Discard** (delete the current recording and re-record).
- **Slideshow**: Opens the **Edit slideshow** menu.
 - Touch **Add slide** to create a new slide (this is a placeholder for new images to be added, similar to a playlist).






- Touch the created slide (example, Slide 1), tap **Add picture**, then select the picture you want to add to the slide.
- Tap the text field below the image to enter a caption for the picture.
- Press **MENU** and tap **Preview** (to preview the slide), **Remove** (to delete the currently selected picture), **Add music**, **Add slide** or change the slide **Duration** or layout.
- When finished, touch **Done** to attach the slideshow to your message.

Note: To remove or replace a picture or an audio attachment, on the Compose screen, tap the **Remove** button next to the attachment.

7. When you are finished creating your new MMS message, touch **Send**.




To view and play a multimedia message:

1. Press  and tap  > .
2. From the message list, tap a multimedia message to open its contents.

3. While the message is open, tap **Play** (adjacent to the attachment).





Tip: The file attachment on the MMS message can be saved to the microSD card. To save the attachment, touch and hold the file and touch **Copy attached to SD card** from the options menu.

To reply to a multimedia message:




1. Press  and tap  > .
2. From the message list, tap a multimedia message to open its contents.
3. While the message is open, tap the **Type to compose** field and then type your reply message.
4. Once complete, tap **Send**.

Note: When replying to an SMS message with an MMS message, first open the text message, press **MENU** and tap **Add subject** or **Attach**. The original text message is then automatically converted into a multimedia message.

Deleting a Message or Message Thread

1. Press  and tap  > .
2. From the message list, use the Optical Joystick () to highlight a message.
3. Press **MENU** and tap **Delete threads**. Once prompted, tap **OK** to complete the process.





Adjusting Message Settings

1. Press  and tap  > .
2. From within the message list, press **MENU** and tap **Settings**.
3. Adjust the following fields according to your needs:
 - **Auto-retrieve:** Enable this option to automatically retrieve the entire content of your MMS message. When checked, the MMS message header, message body and any attachments will automatically download to your device. If you disable this option, only the MMS message header will be retrieved and shown in the message list.

- **Roaming auto-retrieve:** Disable this option if you only desire the MMS message headers to download while roaming. Enable this option to automatically download your complete multimedia messages even while roaming.
- **Notifications:** Enable this option if you wish to receive a notification in the status bar when a new text or multimedia message arrives.
- **Select ringtone:** Allows you to select a ringer to sound when a new message is received. Tap this option, then select a ring tone that is specific to new text and multimedia messages. A sample will briefly be played upon selection.
- **Vibrate:** Enable this option if you want the device to vibrate when a new text or multimedia message is received.

Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Press  and tap  to access the onscreen dialer.
2. Tap  **6** MNO **7** PQRS.
3. Use the onscreen dialpad to enter a phone number. (The phone number appears on your display.)
4. Tap .

To permanently block your number, call Sprint Customer Service.

Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).


To respond to an incoming call while you're on a call:

- ▶ Press **MENU** and tap a call option.
- **Answer Waiting Call** puts the first caller on hold and answers the second call.
- **Ignore Waiting Call** sends the incoming caller to your voicemail.

To switch back to the first caller:

- ▶ Press **MENU** and tap **Switch calls**.

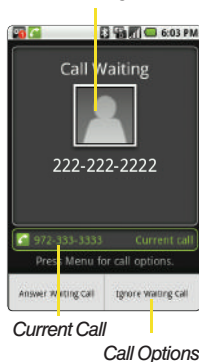

New Incoming Call




Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing ***7PQRS0+** before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a 3-Way Call

With 3-Way calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number and tap .
2. Once you have established the connection, press **MENU** and tap **Add call**.
3. Enter and tap  or select a number from your Contacts tab. (Your first call is automatically put on hold.)

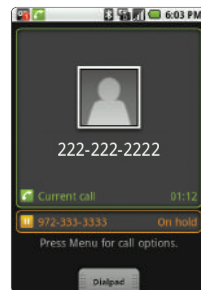




4. When you're connected to the second party, press **MENU** and tap **Merge Calls** to combine both calls into a single 3-way call.


If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

Call Forwarding





Call Forwarding lets you forward all your incoming calls to another phone number – even when your device is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.

To activate Call Forwarding:

1. Press  and tap  to access the onscreen dialer.
2. Tap  **7 PQRS** **2 ABC**.
3. Enter the area code and phone number to which you want your calls forwarded.

4. Tap . (You will see a message and hear a tone to confirm the activation of Call Forwarding.)


To deactivate Call Forwarding:

1. Press  and tap  to access the onscreen dialer.
2. Tap  **7 PQRS** **2 ABC** **0 +**.
3. Tap . (You will see a message and hear a tone to confirm the deactivation.)

Note: You are charged a higher rate for calls you have forwarded.

Roaming

Roaming Icon

Your display screen always lets you know when you're off the Nationwide Sprint Network. Anytime you are roaming, the phone displays the roaming icon (). If you are roaming on a digital system, you will see the roaming icon along with the text – **Digital Roam** –.

Tip: Remember, when you are using your phone off the Nationwide Sprint Network, always dial numbers using 11 digits (1 + area code + number).


Roaming on Other Digital Networks

When you're roaming on digital networks, your call quality and security is similar to the quality you receive when making calls on the Nationwide Sprint Network. However, you may not be able to access certain features, such as data services, depending on the available network.

Note: If you're on a call when you leave the Nationwide Sprint Network and your call is dropped in an area where you think Sprint service is available, turn your phone off and on again to reconnect to the network.

Checking for Voicemail Messages While Roaming

When you are roaming off the Nationwide Sprint Network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.


1. Dial 1 + area code + your phone number.
2. When you hear your voicemail greeting, tap .
3. Enter your password at the prompt and follow the voice prompts.

When you return to the Nationwide Sprint Network, voicemail notification will resume as normal.

Setting Roam Mode

Your device allows you to control your roaming capabilities. By using the Roaming menu option, you can determine which signals your device accepts.


Choose from three different settings on your dual-band device to control your roaming experience.

1. Press  > **MENU** and tap **Settings > Wireless & networks > Mobile networks**.
2. Tap **Data roaming** to connect to data service while roaming. Your phone displays a message, **Attention! Allow data roaming? You may incur significant roaming charges!**
3. Tap **OK** to change the CDMA roaming mode or tap **Cancel** to cancel.

Call Guard

Your device has two ways of alerting you when you are roaming off the Nationwide Sprint Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Nationwide Sprint Network.)


To turn Call Guard on or off:

1. Press  > **MENU** and tap **Settings > Wireless & networks > Mobile networks**.
2. Touch **Call Guard** to toggle the active state of this function. When active, an extra key press is required for dialing when in a roaming area.


Note: Call Guard is turned on by default on your device.

Voice dialing and speed dialing are not available when you are roaming with Call Guard enabled.

To place roaming calls with Call Guard on:

1. From standby mode, dial 1 + area code + the seven-digit number and tap .
2. Touch **OK**.

To answer incoming roaming calls with Call Guard on:

1. When a message displays notifying you that roaming charges apply, tap **OK** to accept the charges.
2. To answer the call, slide the answer icon on the touch screen
– or –
Press the  key.


Note: If the Call Guard feature is set to **On**, you need to take extra steps (such as dialing 1 + area code) to make and receive roaming calls.

Data Roaming Guard

Depending on service availability and roaming agreements, your device may be able to access data services while roaming on certain digital systems. You can set your device to alert you when you are roaming off the Nationwide Sprint Network and try to use data services such as messaging.

Note: Data Roaming Guard is turned on by default on your device.

To set your Data Roaming Guard notification:

1. Press  > **MENU** and tap **Settings > Wireless & networks > Mobile networks**.
2. Tap **Data Roaming Guard**.
3. Tap an onscreen option.
 - **Default** sets your device's Data Roaming Guard feature to its default state (Always Ask).
 - **Always Ask** sets your device's Data Roaming Guard feature on. You will see a prompt and are required to respond anytime you access data services while roaming.

- **Never Ask** turns your device's Data Roaming Guard feature off. You will not be notified of your roaming status when accessing data services.


To use data services when Data Roaming Guard is active:

- When a pop-up notification appears informing you that data roaming charges may apply, tap **Connect** or **Always Connect** to connect.

System Select

You can set your device to access only the Nationwide Sprint Network or to search for an alternate system when the Nationwide Sprint Network is unavailable.

To allow the system to select roaming mode:

1. Press  > **MENU** and tap **Settings > Wireless & networks > Mobile networks**.
2. Tap **System select**.
3. Tap an onscreen option.

- **Home Only** to access only the home area mobile network, which is the Nationwide Sprint Network. This option also prevents roaming on other networks.
- **Automatic** to seek service on the Nationwide Sprint Network. When Sprint service is unavailable, the device searches for an alternate system.

3B. Web and Data Services

- ◆ Getting Started With Data Services (page 141)
- ◆ Navigating the Web (page 143)
- ◆ Wi-Fi (page 149)
- ◆ Email (page 151)
- ◆ Instant Messaging (page 163)
- ◆ Using the Android Market (page 164)
- ◆ Applications (page 165)
- ◆ Data Services FAQs (page 169)

Getting Started With Data Services

With your Sprint service, you are ready to start enjoying the advantages of data services. This section will help you learn the basics of using your data services, including managing your user name, launching a data connection and navigating the Web with your device.

Important: Certain data services requests may require additional time to process. While your device is loading the requested service, the touchscreen or QWERTY keyboard may appear unresponsive when in fact they are functioning properly. Allow the device some time to process your data usage request.



Your User Name

When you buy your device and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com." (For example, the third John Smith to sign up for Sprint data services might have [jsmith003@sprintpcs.com](#) as his user name.)

When you use data services, your user name is submitted to identify you to the Nationwide Sprint Network. Your user name is automatically programmed into your device. You don't have to enter it.



Finding Your User Name

If you aren't sure what your user name is, you can easily find it on your device.




- ▶ Press  > **MENU** and tap  > **About phone** > **Status**. The **Phone number** and **User Name** fields display your information.

Updating Your User Name

If you choose to change your user name and select a new one online, you must then update the user name on your device.

- ▶ Press  > **MENU** and tap  > **About phone** > **System Updates**.
- ▶ Tap **Update Profile**.

Launching a Web Connection

- ▶ Press  and tap  >  (**Browser**). (Your data connection starts and you see the home page.)



Note: Connected to the Internet can be done via either your Mobile network or via Wi-Fi (configured via the **Settings** > **Wireless & networks** page).

While connecting, you may see an animation. Once complete, you are connected to the default Web page (Google).

Tip: To change the default launch page to a current page, press **MENU** and tap **More** > **Settings** > **Set home page**.

Note: The Browser automatically launches when a Web link is touching from within either an email or text message.

Data Connection Status and Indicators

Your device displays the current status of your data connection through indicators at the top of the screen. The following symbols are used:



Your device is connected to the high-speed Sprint Mobile Broadband Network (EVDO). When the arrows are animated, your device is transferring data (for example, when you are opening a Web page); when the triangles are gray, your device is connected to the network



but is not currently transferring data (for example, when you are viewing a Web page that is completely open). In either state, you can receive incoming calls.

Your device is on and is connected to the Sprint 1xRTT data network. When the arrows are animated, your device is transferring data (for example, when you are opening a Web page) and you cannot receive calls. When the arrows are gray, your device is connected to the network but is not currently transferring data (for example, when you are viewing a Web page that is completely open) and you can receive calls.

If you do not see an indicator, your phone does not have a current data connection. To launch a connection, see “Launching a Web Connection” on page 142.

Navigating the Web

Navigating through menus and websites during a data session is easy once you have learned a few basics.

Note: Prior to gaining access to Sprint's Powerdeck Web page, you must enter your 10-digit PCS phone number and tap **OK**. Entering your phone number is not required for access to other Web pages.

Scrolling

As with other parts of your device's menu, you'll have to drag up and down to see everything on some websites.

To scroll line by line through websites:

- Use the Optical Joystick to scroll over each available line within a Web page or to move the onscreen cursor around the page.

To scroll through a website's page:

- In a single motion, touch and drag across the page.

Selecting

Once you have learned how to use the Optical Joystick to scroll and drag around a page, you can start navigating the Web.


To select onscreen items or links:


- ▶ Drag across a page, then either touch an onscreen link or use your Optical Joystick to select the link and then press the joystick.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions or even place phone calls.

Going Back

To go back one page:

- ▶ Press  on your device. Repeat this process to keep going back through your Web page history of recently visited pages.

Note: You can use  for deleting text (like a BACKSPACE key) when you are entering text.

Going to a Web Page

1. Press **MENU** and tap **Go**.
2. Tap the **Address** field and enter a new Web address.
3. Tap **Go** to launch the new page.

Browser Menu

The browser menu offers additional options to expand your use of the Web on your device.


Opening the Browser Menu

The browser menu may be opened anytime you have an active data session, from any page you are viewing.

- ▶ From any open Web page, press **MENU**. (You will see the browser menu.)

Options available within the browser menu include:

- **Go.** Allows you to navigate directly to a website by entering its URL (website address).
- **Bookmarks.** Allows you to access and manage your bookmarks.
- **New window.** Launches a new Internet window while maintaining the current Web page active.
- **Refresh.** Reloads the current Web page.
- **Forward.** Returns you to a previously viewed page.
- **More.** Provide additional browser options:
 - **Find on page (Menu+f).** Searches the current Web page for a word.
 - **Select text.** Selects text from the current Web page.

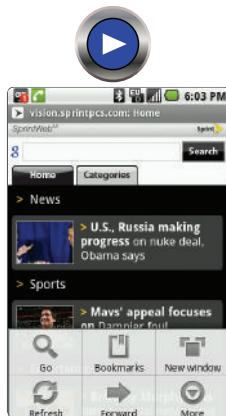

- **Page info (Menu+g).** Displays the Name and URL (website address) of the site you're currently viewing.
- **Share page.** Allows you to send a URL via Gmail, SMS or Work Email (Outlook).
- **Downloads (Menu+d).** Keeps a list of previously downloaded content.
- **Settings (Menu+p).** Lets you configure and manage your browser settings.


Note: These additional options can also be accessed via the QWERTY keyboard by using a combination of the Menu button (**Z**) and the specified key combination.

Selecting Text on a Web Page

1. While on an active Web page, press **MENU** to open the browser menu.
2. Scroll to the area of the webpage containing the desired text.

3. Tap **More > Select text**.

4. Touch and drag across the screen and highlight the desired text. Any selected text will appear highlighted and then be copied to the device's clipboard.

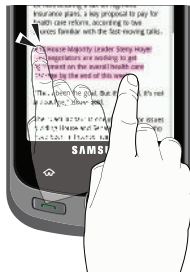

Going to a Specific Website

To go to a particular website by entering a URL (website address):

1. Press **MENU** to open the browser menu.
2. Tap **Go** and highlight the **URL** field.
3. Enter a website address and tap **Go**.

Note: Not all websites are viewable on your device.

Adjusting Browser Page Settings


1. Press **MENU** to open the browser menu.
2. Tap **More > Settings**.

3. Navigate to the **Page content settings** area and select from one of the following page settings:


- **Set text size.** Adjusts the current onscreen text size. Options include: **Tiny**, **Small**, **Normal**, **Large** or **Huge**.
- **Set text encoding.** Adjusts the current text encoding.
- **Block pop-up windows.** Prevents popup advertisement or windows from appearing onscreen. Remove the checkmark to disable this function.
- **Load images.** Allows web page images to be loaded along with the other text components of a loaded website.
- **Auto-fit pages.** Allows web pages to be resized to fit as much of the screen as possible.
- **Enable Javascript.** Enables javascript for the current Web page. Without this feature, some pages may not display properly. Remove the checkmark to disable this function.

- **Open in background.** New pages are launched in a separate page and displayed behind the current one. Remove the checkmark to disable this function.
- **Set home page.** Sets the current home page for the Web browser (page 148).

Adjusting Browser Privacy Settings

1. Press **MENU** to open the browser menu.
2. Tap **More > Settings**.
3. Navigate to the **Privacy settings** area and select from one of the following privacy settings:
 - **Clear cache.** Deletes all currently cached data. Tap **OK** to complete the process.
 - **Clear history.** Clears the browser navigation history. Tap **OK** to complete the process.
 - **Accept cookies.** Allows sites, that require cookies, to save and read cookies from your device.
 - **Clear all cookie data.** Clears all current browser cookie files.
 - **Remember form data.** Allows the device to store data from any previously filled out forms. Remove the checkmark to disable this function.
4. Press  to return to the browser.

Adjusting Browser Security Settings

1. Press **MENU** to open the browser menu.
2. Tap **More > Settings**.
3. Navigate to the **Security settings** area and select from one of the following privacy settings:
 - **Remember passwords.** Stores usernames and passwords for visited sites. Remove the checkmark to disable this function.
 - **Clear passwords.** Deletes any previously stored usernames or passwords. Tap **OK** to complete the process.
 - **Show security warnings.** Notifies you if there is a security issue with the current website. Remove the checkmark to disable this function.
4. Press  to return to the browser.

Setting the Browser Home Page

1. Press **MENU** to open the browser menu.
2. Tap **More > Settings > Set home page**.
3. Delete the current address and enter a new web page.
4. Tap **OK** to complete the process.

Resetting the Browser to Default


1. Press **MENU** to open the browser menu.
2. Tap **More > Settings > Reset to default**.
3. Tap **OK** to complete the process.

Creating Bookmarks

1. From any open Web page, press **MENU**. (You will see the browser menu.)
2. Tap **Bookmarks**. Three tabs are revealed:
 - **Bookmarks**: Displays a list of your current Web bookmarks.
 - **Most visited**: Displays a list of your most frequently visited websites. Tap an entry to launch the selected page.

- **History**: Displays a record of your browsing history. These records are organized into folders such as: **Today**, **Yesterday**, **5 days ago** and **1 month ago**.

3. Tap **Add bookmarks** (first entry in the Bookmarks tab).
4. Enter a descriptive name for the new bookmark and tap **OK** to store the new entry to your Bookmarks list.

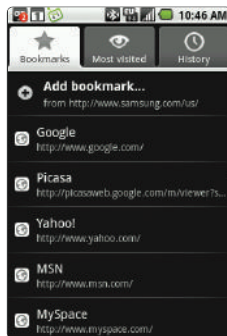


Creating Bookmarks from other Tabs

1. From any open Web page, press **MENU**.
2. Tap either **Most visited** or **History**.

3. Touch and hold an entry from the list to display an onscreen popup menu.
4. Tap **Bookmark** to add the selected entry to your current list of bookmarks.
 - or –Repeat steps 1 and 2.
5. Tap the star icon adjacent to a website address. The star now turns gold. This adds the “starred” website to your current Bookmarks list.

Adding Bookmarks to Your Home Screen

1. From any open Web page, press .
2. Tap any of the available tabs: **Bookmarks**, **Most visited** or **History**.
3. Touch and hold an entry from the list to display an onscreen popup menu.
4. Tap **Add shortcut to Home** to add the selected entry to your Home screen.

Wi-Fi

About Wi-Fi

Wi-Fi (short for "wireless fidelity") is a term used for certain types of wireless local area networks (WLAN). These device types use an 802.11 wireless specification to transmit and receive wireless data.

Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be Open (unsecured) as within most Hot Spots or Secured (requiring knowledge of the Router name and password).

Turning Wi-Fi On and Off

By default, your device's Wi-Fi feature is turned off. Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

Turn Wi-Fi on:

1. Press  >  and tap  > **Wireless & networks**.



2. Tap the **Wi-Fi** field to activate the feature (checkmark indicates active). The device will scan for available in-range wireless networks.

To turn Wi-Fi off:

1. Press  > **MENU** and tap  > **Wireless & networks > Wi-Fi**.
2. Tap to remove the green checkmark and deactivate Wi-Fi.

Note: Use of wireless data connections such as Wi-Fi and Bluetooth can cause an added drain to your battery and reduce your use times.

To connect to a Wi-Fi network:

1. Press  > **MENU** and tap  > **Wireless & networks > Wi-Fi settings**.
 - The network names and security settings (Open network or Secured with WEP) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.

Note: When you select an open network, you will be automatically connected to the network.

2. To manually add your new network connection:

- Touch **Add Wi-Fi network**.
- Enter the Network SSID. This is the name of your Wireless Access Point.
- Tap the **Security** field and select a security option. This must match the current security setting on your target WAP.
- If secured, you will also need to enter your WAP's password. The **show password option**, reveals the password as you type it vs only showing asterisks (****).
- Tap **Save** to store the new information and connect to your target WAP.

Note: The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the WAP key again, unless you reset your device back to its factory default settings.

To manually scan for a Wi-Fi network:

1. Press  > **MENU** and tap  > **Wireless & networks > Wi-Fi settings**.
2. Press **MENU** and tap **Scan**.

Wi-Fi Status Indicators

The following icons show your Wi-Fi connection status at a glance:



– Wi-Fi is connected and active.



– Wi-Fi active but there is a communication issue with the target Wireless Access Point (WAP).

Using the Wi-Fi Settings Menu

The **Wi-Fi settings - Advanced** menu allows you to set up many of your device's Wi-Fi service, including:

- Setting your Wi-Fi sleep policy
- Viewing your device's MAC Address
- Configuring use of either a DHCP or Static IP

To access the Bluetooth Settings menu:

1. Press  > **MENU** and tap  > **Wireless & networks > Wi-Fi settings**.
2. Press **MENU** and tap **Advanced**.

Email

Your device's Email applications let you access and manage multiple email accounts simultaneously in one convenient location.

Although the two main email applications are Google (Gmail™) and Work Email (Outlook®), the device can also be manually configured to connect to other email systems.

Note: If you have multiple email accounts, you must configure each account with its own settings.

If you want to send and receive email messages through an ISP (Internet Service Provider) account (such as Outlook), or if you wish to use your device to access your corporate email through a VPN (Virtual Private Network), you will first need to set up an IMAP or POP account.

- **IMAP** (Internet Message Access Protocol) - This mail retrieval protocol is frequently used in large networks and commercial and institutional settings. IMAP4 is the current standard.
- **POP** (Post Office Protocol) - This protocol is supported by most ISPs and is currently more common among consumer applications. POP3 is the current standard.

Note: For more information, review your email carrier's literature or contact your IT administrator.

Email Icons/Shortcuts



– IMAP/POP3 Internet Mail shortcut (such as Google, Yahoo, Gmail and AOL)



– Work Email (Outlook) shortcut



– Gmail shortcut



– Work Tasks (Outlook Tasks) shortcut

Status Bar - Notifications



– New Internet email message received



– New Work Email (Outlook) received

Google Mail (Gmail)

This email client is Google's web-based email service. A Gmail/Google Mail is created once you sign-up for a new Google account online. See "Creating a Google Account" on page 48.




- From a computer, launch your preferred Web browser and navigate to www.google.com.

Depending on your synchronization settings, Google Mail (along with calendar events, phone numbers and other contact information) on your device are automatically synchronized between your device and your Gmail/Google Mail account on the Web.

Note: You must have a valid and active Google account prior to using this email client.

Important: You must log into Google after every power cycle of your device. Logging into Gmail (via the device) does not sign you into your Google account. Gmail logging and access are separate from your main Google account.

Setting Up a Gmail Account via the Device




1. Press  and tap  >  (**Gmail**).
2. Follow the onscreen instructions to setup a Gmail account.
 - Tap **Manual** setup to configure your connection settings manually (POP3 or IMAP). Follow the onscreen prompts and enter the information specific to your carrier.
 - See “Adding Additional Internet Email Accounts” on page 157.

Note: You must have a valid and active Google account (xxxxxx@gmail.com) prior to Gmail email setup and configuration.

Your Gmail address is then used to log into your account via the device.

Note: Signal interruptions or incorrect username or password information can cause completion issues.



Opening Gmail

1. Press  and tap  > .
2. Log into your account via the device.
3. The first time you connect, you are asked to give this Internet mail account a unique onscreen name and enter From name (displayed in your outgoing emails within the **From** field).
 - The unique account name is used to differentiate this account from other email accounts accessed by your device.
4. Tap **Done** to store the new information and complete your connection.
 - Upon initial access, your Gmail Inbox categories are: **Inbox, Personal, Receipts, Travel, Work, [Gmail]/All Mail, [Gmail]/Drafts, [Gmail]/Sent Mail, [Gmail]/Spam, [Gmail]/Starred** and **[Gmail]/Trash**.

To refresh your Gmail messages:


- ▶ Press  and tap **Refresh**.



Create and Send Email

1. Press  and tap .
2. Tap **Inbox** to open the contents of your Gmail inbox.
3. Press **MENU** and tap **Compose**.
4. Enter the message recipient's email address in the **To** field.
 - If you are sending the email to several recipients, separate the email addresses with a comma.
 - You can add as many message recipients as you want.

Note: To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, press **MENU** and tap **Add Cc/Bcc**.

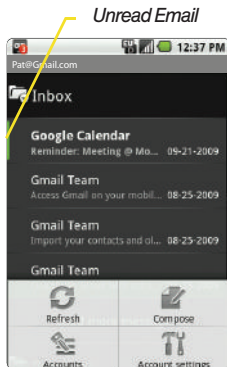5. Tap the **Subject** field and enter the email subject.



6. Tap the **Compose Mail** field and compose your email.
 - To add a picture attachment, press **MENU** and tap **Attach**.
 - Select the picture you want to attach.
 - Tap  to delete a selected attachment from your current email.
7. Once complete, tap **Send**.
 - Tap **Save as draft** or press  to save the current email as a draft. To later view your draft email messages, from the Inbox, tap the **Drafts** folder.
 - To delete the current email message, tap **Discard**.

Creating a Gmail Email Signature




1. From a computer, launch your preferred Web browser and navigate to www.google.com.
2. From within your Gmail Settings page, navigate to the **General** tab and enter your signature into the **Signature** field. By default, signature is turned off.


Accessing Email Messages

Depending on your email type, account settings, Email notifications, ringtone notification, etc, the device displays the email message briefly in the status bar when you receive a new email.

A new Internet email message (@) icon appears within the Notifications area of the Status bar to notify you of a new email.

To view a new email:

1. Press  > **MENU** and tap .
– or –
Touch and hold the Status bar, then slide your finger down the screen. See “Using the Notifications Panel” on page 33.
2. Tap the new email from the Notifications list.
3. Scroll up and down the email by either dragging your finger up and down the screen or rolling your Optical Joystick () up or down.

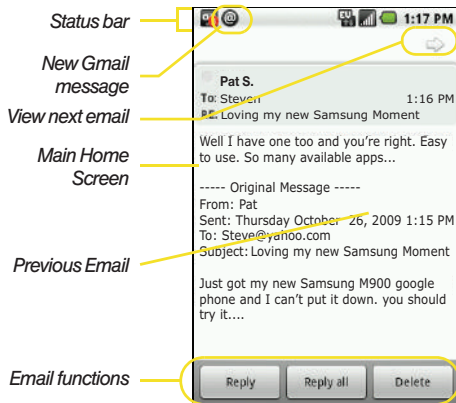

To reply to an email message:

1. With the email message displayed, tap either **Reply** or **Reply all**.
2. Enter a new message body and tap **Send**.

To delete an email message:

- ▶ With the email message displayed, tap **Delete**.

Configuring Gmail Settings


1. Press  and tap .

2. Tap **Inbox** to open the contents of your Gmail inbox.

3. Press **MENU** and tap **Account settings**.

4. This menu provides both field information and settings:

- **Account name:** displays your uniquely created account display name.
- **Your name:** displays the name used in the **From** field of your outgoing emails.
- **Email check frequency:** Tap to adjust the time interval used by your device to check your Gmail account for new emails.

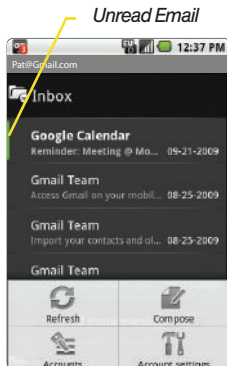







- Options include: **Every 5 minutes**, **Every 10 minutes**, **Every 15 minutes**, **Every 30 minutes** and **Every hour**.

- **Default account:** Assign this account as the default email used for outgoing messages.
- **Email notifications:** Activates the email notification icon to appear within the Notifications area of the Status bar when a new Internet mail (Gmail, etc..) is received.
- **Select ringtone:** Plays a selected ringtone once a new email message is received.
- **Vibrate:** Activates a vibration once a new email message is received.
- **Incoming settings:** Adjusts the incoming email parameters, such as username, password and other incoming connection parameters (ex: IMAP server).
- **Outgoing settings:** Adjusts the outgoing parameters, such as username, password and other incoming connection parameters (ex: SMTP server).

- **Add another account:** Allows you to add an additional Internet email account (such as Gmail or Yahoo, etc..)

Adding Additional Internet Email Accounts

Using  only reveals all currently added Email accounts. By default, Gmail is already added to this list of available Internet email providers. To view additional email accounts, they must first be added.







1. Press  and tap  >  .
– or –
Press  and tap  .
2. Press **MENU** and tap **Account settings > Add another account**.
3. Follow the onscreen prompts to add additional Internet-based email accounts such as Yahoo, Gmail, AOL, etc..



Work Email (Outlook)

The Moxier Work Email application provides access to your Outlook Exchange server via your device. If your company uses Microsoft Exchange Server 2003 and 2007 as the corporate email system, you can use the Work Email application to wirelessly synchronize your email, Contacts and Task information directly with your company's Exchange server.

Important: This Outlook application does not utilize Microsoft® ActiveSync to synchronize the device to your remote Exchange Server. This synchronization is done wirelessly over the air (OTA) and not via either a direct connection.

Setting Up a Work Email

1. Press  and tap  >  (**Work Email**).
– or –
Press  and tap  from the Home screen. See “Creating Shortcuts” on page 27.
2. Read the onscreen information and tap  to continue.

3. Enter your **Email address**, **User ID** and **Password** information, then tap . Consult your Network Administrator for further details.
 - **User ID**: typically your network access username.
 - **Password**: typically your network access password (Case-sensitive).
4. If prompted to provide additional detailed information, tap **OK**.
5. Enter a **Domain** and Exchange **Server** information and tap .
 - If your network requires SSL encryption, tap the **Use SSL** field to place a checkmark in the box and activate this additional level of security.
 - If your exchange server requires this feature, leaving this field unchecked, can prevent connection.






Note: Signal interruptions or incorrect username or password information can cause completion issues.

6. Read the onscreen activation disclaimer and tap **OK**. The first screen visible after activation is the Accounts & sync Settings menu.

Important: You can synchronize over the air (not directly) with an Exchange Server running Microsoft Exchange Server 2003 Service Pack 2 (SP2) or Microsoft Exchange Server 2007.

Note: You can only have one Work Email (Microsoft Outlook) account active on your device.

Opening Work Email

1. Press  and tap  > .
 - or –
 - Press  and tap .
2. Tap a message to read, manage and reply to your email messages.
 - Press **MENU** to select messaging options, such as **New Message**, **Change folder**, **Search**, **Sync messages**, **Edit or Account Settings**.

Create and Send Email


1. From the Inbox, press **MENU** and tap **New message**.

2. Enter the message recipient's email address in the **To** field.
 - If you are sending the email to several recipients, separate the email addresses with a comma.
 - You can add as many message recipients as you want.

Note: To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, press **MENU** and tap **Add Cc/Bcc**.

3. Tap the **Subject** field and enter the email subject.
4. Tap the **Body** field and compose your email.
 - To add a picture attachment, press **MENU** and tap **Add attachment**.
 - You have several options:
 - **Pictures:** Attach a stored picture from the Gallery.
 - **Select music track:** Adds an available music file. Tap **OK** to complete the attachment.
 - **Sound Recorder:** Opens the sound recorder from where you can record an audio message.

- **Record Duration:** Displays the length of the recorded voice message.
- **Volume Meter:** Displays the current recording's volume level.
- **Record:** Starts recording your message.
- **Play:** Plays back the current recording.

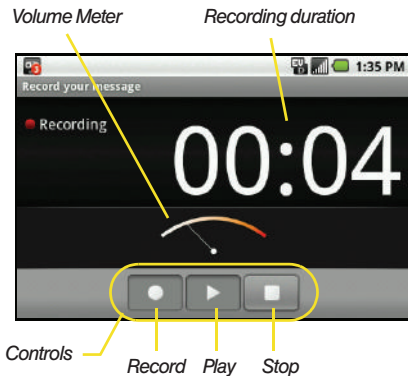

To reply to an email message:

1. From the Inbox, tap an email message.
2. With the email message displayed, press **MENU** and tap either **Reply** or **Reply all**.
3. If you select **Forward**, you must specify the message's recipients.
4. Enter a new message body and tap **Send**.

To delete an email message:

1. With the email message displayed, press **MENU** and tap **Delete**.
2. Tap **OK** to confirm the deletion.

Configuring Work Email Settings

After your initial setup, you are taken to the Settings menu for your new Work Email account.

Work Email contains two separate components:


ActiveSync: handles the synchronization parameters between your device and your exchange server.

Email Settings: configures send and receive settings, such as email signature, notifications, BCC rules, Deletion confirmation, etc.


- ActiveSync settings can be accessed from your Work Emails Settings menu by pressing **MENU** and tap **Settings**.

To configure ActiveSync:



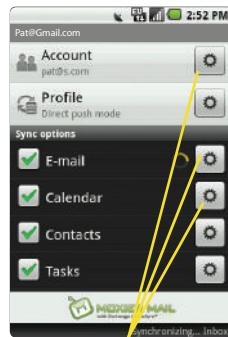



1. Press **MENU** and tap **WorkMail & sync**.
2. Configure any of the following parameters by tapping **(Settings)**.
 - **Account:** Change the current email connection settings.
 - **Profile:** Adjusts the synchronization profile. Default is Direct push (any changes on the remote exchange server are “pushed” to your device).



Setting Options

- Tap **Enable in roaming mode** to allow the current profile to remain active even while roaming.
 - **E-mail:** Access the Email settings menu where you can configure the send, receive and miscellaneous configuration settings (page 161).
 - **Calendar:** Configure the synchronization parameters of your Work Email calendar.
 - **Hide declined events:** When enabled, declined events are not shown within your synced calendar events.
 - **Appointment sync range:** Tap to assign the sync range for your calendar events. Any events in this range are added to your device's calendar. Options include: **All**, **2 weeks ago**, **1 month ago**, **3 months ago** or **6 months ago**.
 - **Set alerts & notifications:** Assign the alert method used for new or upcoming calendar events. options include: **Alert**, **Status bar notification** or **Off**.
 - **Select ringtone:** Assigns an audible ringtone when a new or upcoming event is pending.
 - **Vibrate:** Assigns a vibration when a new or upcoming event is pending.
 - **Set default reminder:** Alerts you of an upcoming event at a defined time before the event occurs. Options include intervals from **15 minutes** to **1 week** before the event.
 - **Contacts:** Determines how your Outlook contacts are displayed in the Contacts listing. Options include: **Last**, **First**, **Last First**, **LastFirst**, **First Last**, **Company**, etc.
 - **Tasks:** Sets how your Outlooks tasks are filtered and sorted.
 - **Filter Type:** **All**, **Complete** or **In progress**.
 - **Sort by:** **Subject** or **Date**.
3. Press  to store your changes and return to the Home screen.


To configure Email settings:

1. Press  and tap  >  (**Work Email**).
– or –
Press  and tap  from the Home screen.
2. From your Inbox, press  and tap **Settings**.

3. Tap any of the three available tabs and modify the desired settings:

■ **Receive tab:** Adjusts the parameters for incoming emails.

- Tap **New mail notification** to enable a visual notification of new incoming email within the Notification area of the Status bar.
- Tap **Select a ringtone** to assign an audible ringtone when an incoming email is received.
- Tap **Vibrate** to enable a vibration when a new email is received.
- Tap **Mail days to sync** to assign the sync range for your incoming and outgoing emails between your device and your external exchange server.

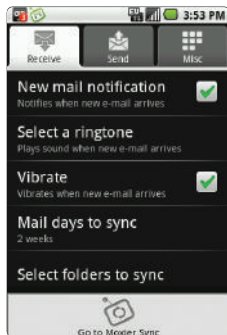


- Tap **Select folders to sync** to enable those folders you wish to sync between your device and your external exchange server. By default, the Inbox folder is the only automatically synced folder. Tap a folder field to enable the syncing of that folder.

■ **Send tab:** Adjusts outgoing email settings such as BCC, Out of office and email signature (see page 163).







■ **Misc tab:** Adjusts other remaining email settings such as delete confirmation and viewing scale.

- **Ask before deleting** requires an onscreen confirmation to be accepted prior to deletion of a current email. This prevents you from accidentally erasing any work email.
- **Viewer scale** allows you to set the default magnification used when viewing an email.

4. Press  to store your changes and return to the Home screen.

To create a Work Email Signature:

This signature can differ from any current Email signature on your local Outlook client. This signature is applied to any outgoing emails originating on your device.


1. Press  and tap  >  (**Work Email**).
– or –
Press  and tap  from the Home screen.
2. From your Inbox, press  and tap **Settings** > **Send tab** > **Signature**.
3. Delete the current default text and enter your new email signature.
4. Tap **OK** to store the new signature.

Configuring Data Synchronization Settings

This feature allows you to determine which current applications are synchronized with external server and at what intervals.

1. Press  >  and tap  > **Accounts & sync**. These settings can affect data

minute usage, please refer to your current data plan for more details.

2. Tap any of the following options:
 - **Background data**: Allows data synchronization to occur as a background function. It allows this to occur behind the scenes and does not affect any current use of the device.
 - **Auto-sync**: Requires the device to maintain synchronization with the remote server providing data to your selected applications.
3. Press  to store your changes and return to the Home screen.

Instant Messaging

Sprint provides you with access to popular mobile instant messaging (IM) clients, including AIM™, MSN® Messenger and Yahoo!® Messenger.

1. Press  and tap  >  (**Instant Messaging**).

2. Select an IM provider by touching an onscreen entry, such as **AIM**, **Windows Live Messenger** or **Yahoo! Messenger**.
3. Tap **OK** to continue.
4. Use your keyboard to enter the required sign-in information for the selected provider, such as user name or password and tap **Sign In**. (Your IM screen for the selected provider is displayed.)




Note: The information required to sign in will vary depending on the instant messaging provider you are accessing.

5. Follow the onscreen instructions to read, reply to, compose, send messages and manage your IM account.

Using the Android Market

The Android Market provides direct access to a large selection of applications which you can download and install on your device.

Accessing the Market

1. Press  and tap  > .
2. If not already logged in with your Google account, tap **Next**.
3. Tap **Sign in** and enter your Google account information.
4. Touch **Accept** to agree to the Android Market terms of service.

Selecting and Installing a Google Application






1. Tap the desired onscreen application.
2. Read the application descriptions.
3. Tap **Install**.

Note: Use caution with applications which request access to any personal data, functions or significant amounts of data usage times.

4. If prompted, follow the onscreen instructions to pay for the application.
5. Check the progress of the current download by opening the Notifications panel.

6. After the item is downloaded and installed on your device, the content download icon appears in the notification area of the status bar.
7. On the Android Market screen, tap **My downloads**, tap the installed application in the list, then tap **Open**.




Launching an Installed Google Application

1. Press  >  and tap the newly installed application.
2. Read the application descriptions.
 - or –Press  and tap  >  > **My downloads**.

Reinstalling a Google Application

If the Android operating system is ever updated, any data contained on the device will be erased. The only data stored on the device are Google applications available via the Android Market.

Note: Pictures and music are stored on the microSD card. Contacts and Calendars are stored remotely on with your remote Google or Outlook servers.






1. Log into your Google account via the device.
2. Press  and tap  >  > **My downloads**.
3. Scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
4. Follow the onscreen instructions.

Applications

You can access a wide variety of applications in many different categories with your phone and data service. Your phone comes preloaded with links to the following applications:

- **NASCAR Sprint Cup Mobile**
- **Sprint Football Live**




To get started with applications:

1. Press  >  and tap either  (**NASCAR Sprint Cup Mobile**) or  (**Sprint Football Live**). (The browser will start and take you to the download menu for the application.)
2. Follow the instruction to customize your application (such as selecting a favorite team or driver) and then use the navigation key or press  to explore your options.

Important Privacy Message – Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

NASCAR Sprint Cup Mobile

Now you have the ability to get every bit of NASCAR coverage, news and stats right on your device.




1. Press  and tap  >  (**NASCAR Sprint Cup Mobile**).
2. If prompted, read the permission check disclaimer, make a selection and tap **OK**. Follow the onscreen instructions until you reach the main NASCAR Sprint Cup Mobile page.
3. Navigate the main page by either scrolling around using your directional keys or using the Optical Joystick.
4. Tap an onscreen option to activate features that include:
 - **Home** is the main NASCAR homepage where you can view stats on a current race, choose to follow a specific driver, view special NASCAR promotions and other NASCAR-specific multimedia content.

- Press **MENU** and tap **Home** to return to the main NASCAR page. This applies to each of these options.
- **Leaderboard** launches an onscreen board showing the ranking of leaders in the competition.
- **Race Radio** launches a streaming NASCAR radio program when there is a live race event. Tap this button to toggle the feature on or off.
- **Race Recap** provides overviews of the current races, pictures, commentary, additional photos, and race stats.
- **Speed** displays a list of selectable multimedia video clips from the SPEED channel that are specific to NASCAR.
- **All-Star** displays race stats, driver info, news, photos, etc. for the All-Star race.
- **My Driver** to customize your NASCAR experience by following specific drivers. Information includes driver-specific stats and NASCAR RSS feeds. You can also get additional stats, review other driver info, or change drivers.
- **Stats/Sched** lets you track race information such as: **NSCS Recap**, **NNS Recap**, **Point Standings**, **Season Stats**, and **Schedule**.
- **Miss Sprint Cup** is your insider to NASCAR by providing news, information, blogs and twitter updates to the goings-on within NASCAR.
- **Video** displays a list of selectable multimedia content. Other features include streaming multimedia content from NASCAR radio stations or other racing radio shows.
- **News & Alerts** provides you with quick access to NASCAR-specific news, photos, and driver stats. You can also customize alerts for new information such as ALL NASCAR News, Sprint Cup News, etc.
- **Fantasy** lets you take part in online fantasy racing, access **Games**, **News**, **Videos**, take part in **Polls**, and access other **Special Promotions**.
- **FanZone** displays a list of selectable content available to Sprint subscribers such as Sweepstakes, Video clips (footage and music) and Screensavers.
- **Settings and Help** displays help information for usage of the NASCAR application and features.

- **Exit** to quit the NASCAR application.
 - Press **MENU** and tap **Exit**.

Sprint Football Live

Get the Football live on your phone. It lets you be right in the middle of your favorite game by being a part of previews, blogs, discussions groups, fantasy football, etc.

1. Press  and tap  >  (**Sprint Football Live**).
2. Tap **Continue** and follow the onscreen instructions to customize your football experience by choosing your favorite team.
3. Access any of the following features by pressing **MENU** (menu):

Note: Use the directional keys or Optical Joystick to move around the application's menu features.


- **2010 Draft** (default home page) displays a screen full of draft information such as Draft Insider,

Exclusive Blog, Draft Tracker, Pick'Em, Mock Draft, and Draft Prospects.

- **Favorite Team** launches a team-specific page with content such as top stories, RSS feeds, Rumor information, Schedules, Team Alerts, and the ability to change your favorite team selection.
- **News** provides AP league news, Rumor and News, PFTV, Injury Info, Transactions, Legal, and other football related information, photos and videos.
- **Tweets** launches an onscreen Twitter page specific to the NFL. Also included onscreen is a real-time RSS new feed.
- **Team Pages** allows you select from wither the AFC or NFC conferences, then display content such as top stories, RSS feeds, Rumor information, Schedules, Team Alerts, and the ability to change your favorite team selection.
- **Help/About** displays help information for Sprint Football Live topics such as: General, Home, News, Twitter, Team Page, About, or Alerts.
- **Exit** allows you to exit the Sprint Football Live application. Tap **YES** to exit.

Data Services FAQs



How will I know when my device is ready for data service?

Your user name (for example, bsmith01@sprintpcs.com) will be displayed when you access **MENU** >  > **About phone** > **Status** > **User Name**.

How do I sign in for the first time?

You are automatically signed in to access data services when you turn on your device.



How do I know when my device is connected to data services?

Your device automatically connects when you use data service or an incoming message arrives. You will also see the  or  indicator.

Can I make calls and use data services at the same time?

Yes you can use voice and data services simultaneously.

When is my data connection active?

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When active, the  or  indicator is animated on the display screen.

When is my data connection dormant?

If your device receives no data for 10 seconds, the connection goes dormant. When the connection is dormant, you can make and receive voice calls. (The connection may become active again quickly.) If your device receives no data for an extended period, the connection will terminate.

Can I re-download paid applications without being charged again?

Your Market applications are associated to your Google account login information. Even if your device is reset and reinstalled with an update to Android, you can log back into your Google account and reinstall these applications. See “Reinstalling a Google Application” on page 165.

3C. Entertainment: TV and Music

- ◆ TV (page 170)
- ◆ Music – Amazon MP3 (page 171)
- ◆ Streaming Music (page 173)
- ◆ YouTube (page 173)

SprintTV gives you the ability to listen to audio clips and to view video clips right from your device's display. Watch live TV and catch up on episodes of your favorite shows – anywhere on the Nationwide Sprint Network.*

Amazon MP3 lets you preview, purchase, download and listen to over a million songs right on your device. You can even add songs from your own library to round out your on-the-go playlist.

* Sprint TV coverage not available everywhere. Content and lineup subject to change. Select channels also available for casual usage. Visit www.sprint.com/tvguide for more information.

TV

Your Sprint TV Channel Options




The Sprint TV application offers a wide variety of accessible channels. Subscription options include comprehensive basic packages as well as a full menu of “a la carte” channels. Visit www.sprint.com/tvguide for more information on channels and pricing.

Some of the available categories may include:

- | | |
|-------------------|---------------------|
| ● Sprint Radio | ● Sprint Power View |
| ● Primetime TV | ● Music Videos |
| ● Sprint TV Live | ● Music & Radio |
| ● Sports | ● Entertainment |
| ● Cartoons | ● News & Weather |
| ● Movies & Shorts | ● Mobile Previews |

Note: Available categories and content are subject to change.

Watching TV

1. Press  and tap  >  (**SprintTV**). Depending on your settings, your device may prompt you to accept a data connection.
2. Select **TV**, **Radio**, **Favorites** or **More...** to display channel options.
3. Tap an entry to select a channel from the Sprint TV listings or to select an available category.

Note: The first time you access a channel, the system will prompt you to purchase access (unless the channel doesn't have a monthly fee). Tap **Subscribe** to purchase access, or tap **Preview** to view a preview of the selected channel.




4. Tap a desired clip to view the program. The clip will automatically load and begin playing.

Tip: Scroll through the channels to view more selections. Once you find a channel that you want to watch or listen to, simply touch it and wait approximately three seconds and the channel begins loading.

Music – Amazon MP3




The Amazon MP3 store lets you purchase and download digital music files to play on your device or computer. (You must have an amazon.com account to purchase and download music from Amazon MP3.)


Purchasing and Downloading Music

1. Press  and tap  > .
2. Select an onscreen category (**Bestselling Albums**, **Bestselling Songs**, **Browse by Genre** or **Search**).
3. Follow the onscreen instructions to locate the desired track or album.
4. Tap the title to listen to an audio preview of the song. Tap the song title again to stop playback.
 - **Preview** allows you to play an audio clip of the selected song.
5. Once you have located a desired song title or album, tap **[price]** > **Buy**.
 - Pressing **BUY** allows you to purchase the song and download it to your device's microSD card.




- When you select **Buy**, you will need to log into your Amazon account. (If there is no microSD card installed or if there is not enough free memory space on the card, you will see an alert.)
- Once the song has been downloaded to your microSD card, you can use the Music application to playback the file.

Accessing the Music Player






1. Press  and tap  >  (**Music**).
2. From the Music display, select an option:
 - **Artists** to display your current local music files sorted by artist.
 - **Albums** to display your current local music files sorted by album.
 - **Songs** to browse through all of your downloaded music and any additional songs you have loaded onto your microSD card from your computer.
 - **Playlist** to select a customized playlist you've created to organize your music.

3. Once you've displayed a list of songs, you can browse through your available titles.
 - To play a song, tap it to display the title and track information.
 - To listen to a song or playlist, tap it to begin playing from the selected song. (You can also highlight the playlist to begin listening.)
 -  is displayed within the Notifications area of your Status bar.

Creating a Playlist




1. Press  and tap  >  > **Songs**. Your device searches through your device and microSD card for compatible music files and then displays them onscreen.
2. Touch and hold a song you'd like to add to a playlist. This action reveals an onscreen popup menu.
3. Tap **Add to playlist** and select either a **Current playlist** or select **New** (to create a new playlist).
 - If you select **New**, delete the current default name, enter a name for your new playlist, then tap **Save**.

Assigning a Song as a Ringtone

1. Press  and tap  >  > **Songs**.
2. Touch and hold a song you'd like to use as your new ringtone. This action reveals an onscreen popup menu.
3. Tap **Use as phone ringtone** to store the selected song as your new default ringtone.
4. Confirm the song has been successfully assigned by navigating to your Phone ringtone menu.
 - Press  > **MENU** and tap  > **Sound & display** > **Phone ringtone**.
5. Confirm the new song is selected.

Streaming Music

Sprint offers a variety of musical options through the Radio category in the Sprint TV menu, including SIRIUS Music, Music Choice, VH1 and many others. Choose from rock, pop, hip-hop and R&B and access exclusive video clips, music industry news, performances and interviews with your favorite artists.





1. Press  and tap  >  > **Radio** > **[selection]**.
2. Select **Preview** to see and hear a preview of your selected channel (if available).
 - or –
 - Select **Subscribe** to purchase a monthly subscription to your selected channel.

Once you have purchased access to a music or radio channel, you can select from a variety of stations to listen to your favorite music or get caught up on what's new in music.

YouTube

YouTube™ is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips and music videos, as well as video content such as video blogging, informational shorts and other original videos.

Note: YouTube is a data-intensive feature. Sprint recommends that you upgrade to an unlimited data plan to avoid additional data charges.

1. Press  and tap  >  .
2. Read the disclaimer regarding data usage and touch **Continue**.
3. Press **MENU** and tap **Search** field to search for specific videos, scroll down to browse through the main page thumbnails, or scroll to the bottom to explore additional options.
4. To view a video, touch an available preview thumbnail or touch the title link.
5. Press  to return to the previous page.

Note: It is not necessary to sign in to the YouTube site to view content. However, if you wish to sign in to access additional options, access the page via the Web browser and tap **Sign in** at the top right corner, enter your YouTube or Google username and password, then tap **Sign in**.

3D. GPS Navigation

- ◆ GPS Services (page 175)
- ◆ Google Maps (page 175)
- ◆ Sprint Navigation (page 177)
- ◆ Getting Driving Directions (page 178)

GPS Services

Your device's built-in GPS capability gives you access to a number of location-based services, including **Google Maps** and **Sprint Navigation**.

Activating Location Mode


Before using any of the location-based services, you must turn on your device's location mode.

- ▶ Press  > **MENU** and tap **Settings** > **Location & security** > **Use GPS satellites**.

Note: Enabling the GPS hardware can drain your battery faster.

Activating Using Wireless Networks

This additional location feature uses open Wi-Fi and mobile network connections to assist in providing additional location accuracy.





1. Press  > **MENU** and tap **Settings** > **Location & security** > **Use wireless networks**.
 - Since this feature is based on Google's location service, you will need to agree to allow Google to collect anonymous information.
2. Tap **Agree** to accept the terms of service.

Google Maps




Use this application to find directions, location information, business addresses, etc., all right from your Samsung Moment™. Determine your current location with or without GPS, get driving and transit directions, get phone numbers and addresses for local businesses.

Before you begin using this feature you must activate your GPS hardware and agree to share location information with Google.



To enable your device's GPS Location feature:

1. Press  > **MENU** and tap  > **Location & security**.
2. Tap **Use GPS satellites**. A checkmark indicates the GPS location feature is enabled. For additional location information, see "Location Settings" on page 55.
 -  appears in the Notification area when the GPS is active.
 -  appears in the Notification area when the GPS is communicating.





To launch the Google Maps application:


- Press  and tap  > .


To utilize Google Maps:

1. Press  and tap  > .
2. Tap the magnification icons to zoom in or out of the current map view.
 - or –Press **MENU** to utilize other Google Map features.

To search for a keyword:

1. Press  and tap  > .
2. Press **MENU** and tap **Search**.
3. Tap the example field (at the top of the screen), enter a keyword, then tap .
 - This keyword can be a category name (such as pizza, steak, burger), a business name (Samsung, Sprint) or a Google friend who is sharing their location.

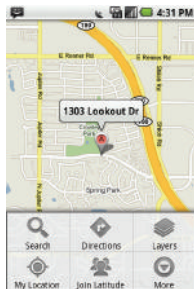

4. Tap  to reveal a detailed list of information corresponding to those matches now displayed on your screen with lettered pins.




Sprint Navigation

Sprint Navigation gives you turn-by-turn directions onscreen and over speakerphone.

Note: Depending on your service plan, Sprint Navigation may require a monthly subscription. Contact Sprint for information and pricing. Some features may be available only with a subscription to Sprint Navigation Premium.




Registering Sprint Navigation

Before you can use Sprint Navigation, your device and service must be registered.

1. Press  and tap  >  (**Sprint Navigation**).
2. Read the disclaimer and touch **Accept** to acknowledge the terms of use.

3. Tap each of the onscreen registration fields and enter the required information.
 - **First Name, Last Name** and **Email**.
 - If using the onscreen keyboard, tap **Next** to store your information.
4. Tap **Continue** to register your information.
5. Tap **Yes** to take a brief tour of the Navigation features and functionality, or **No, Skip Tour** to continue to the main navigation screen.

Using Sprint Navigation

1. Press  and tap  > .
2. Select an option and follow the onscreen instructions to take advantage of Sprint Navigation's full suite of features.
 - **Drive To** lets you get driving directions from wherever you are to wherever you're going. Choices include:
 - **My Favorites:** user-defined favorite locations.
 - **Recent Places:** recently entered locations.
 - **Address:** manually entered street addresses.




- **Intersection:** map based on manually a entered street intersection.
 - **City:** display a city map based on selected city.
 - **Business:** locations based on business categories.
 - **Airport:** local airports based on current GPS location.
 - **Contacts:** those local addresses assigned to previously entered Contacts.
- **Search** lets you search for locations from dozens of options such as Food/Coffee, Gas Stations, Gas by Price, Banks/ATMs, WiFi Spots, Parking Lots, Hotels & motels, Movie Theaters, etc..
 - **Maps & Traffic** provides access to 2D and 3D maps for your current location and for several categories of locations such as Airports and Contacts.
 - **Share & More** offers additional options, such as sharing your location with contacts, creating and storing My Favorites locations, accessing the product tour and setting detailed application preferences.

Note: For more information about Sprint Navigation, visit www.sprint.com/navigation.

Getting Driving Directions

The built-in GPS hardware (when enabled) allows you to get driving directions to selected locations or establishments based on your current location.

Using a Physical Address




1. Press  and tap  > .
2. Tap **Type It** to manually enter the new address and receive driving directions from the GPS network.
– or –
Tap **Speak It In** to place a call to the TeleNav™ operator where you will speak the desired address. This is similar to calling 411 for directory assistance. (A fee may be incurred.)
3. Tap **Address** then tap any of the address fields to then enter respective information (Address, City, State/ZIP and Country).
4. Tap **Done** to initiate your search.

5. Follow both the onscreen and audio directions.

After you enter the location and receive driving directions, you can alter the information being displayed by using one of three other driving options: **Traffic**, **Summary** and **Search**.




To review real-time traffic information along your route:




1. Press  and tap  >  > **Drive To** > **Address**.
2. Tap **Type It**, enter the physical address information, then tap **Done**.

Your device displays and announces real-time traffic alerts along your route. Alerts are automatically displayed at the bottom-right of your screen.

– or –

- Press  and tap  >  > **Maps & Traffic**.

To receive turn by turn directions (2D):




1. Press  and tap  >  > **Drive To** > **Address**.

Note: A 2D map is a flat representation of your projected driving directions. A 3D map (shown here) represents the driving directions with a representation of depth.

2. Tap **Type It**, enter the physical address information, then tap **Done**.

3. Press **MENU** and tap **Summary** to receive both an outlined map view and a detailed turn by turn description for navigating to your desired location.

To search nearby locations based on type:

1. Press  and tap  >  > **Drive To > Address.**
2. Tap **Type It**, enter the physical address information, then tap **Done.**
3. Press **MENU** and tap **Search** to search for a location based on a category such as Food/Coffee, etc.

Using a Local Business Category

The Moment™ can also cross-reference your current location with local business and points of interest, such as Grocery Stores, Gas Stations, Wi-Fi Spots, Malls, Hospitals, etc.

1. Press  and tap  >  > **Drive To > Businesses.**

2. Enter a keyword into the **What** field to begin retrieving matches. Once you see a matching business name, touch the entry.




– or –

Tap the **Category** field and then choose from one of the available category entries by touching an onscreen entry such as: **Food/Coffee, Gas Stations, Gas by Price, Banks/ATMs, WiFi Spots, Hospitals,** etc..

- Entries with more than one available category (a subcategory) appear with an adjacent gray arrow. These entries can be expanded and then closed.

3. Tap **Search** to store your information and begin the search.

To search for the lowest gas price in your area:

1. Press  and tap  >  > **Drive To > Businesses > Category > Gas By Price.**
2. Touch a selected grade of gasoline: **Any, Regular, Plus 89, Premium or Diesel.**
 - By default the Search Results page lists the Best Price at the top of the list.

3. Touch **Search** to begin the search.
4. Touch an entry from the list to display a new route to the selected gas station.




Creating a My Favorites Location

Once you have begun using Sprint Navigation to find your destination, you can then either recall those locations and add them to your list of favorite destinations or create a new entry from one of the available location categories (Address, Business, Airport or Contacts).

To create a My Favorites location from your Current Location:

1. Press  and tap  >  > **Share & More** > **Record Location**.
2. Tap **Done** to complete the process.




To create a My Favorites location from a Recent Place:

1. Press  and tap  >  > **Share & More** > **My Stuff** > **Recent Places**.
2. Tap a previous destination location from the list and tap **Save to Favorites**.




- **Save to Favorites:** to save the current location to your My Favorites list.

Sharing a Recent Location with Others

Recently queried locations can be saved to your My Favorites list and also shared with other cellular devices.




1. Press  and tap  >  > **Drive To** > **Recent Places**.
2. Tap a previous destination from the list and tap **Share Address**.
3. Touch the **Send To:** field and then enter a mobile number or email address:
4. Touch **Send Now** to complete the delivery process.

Configuring Your Navigation Preferences

1. Press  and tap  >  > **Share & More** > **Preferences**.
2. Touch an entry to change its current setting:
 - **General:** allows change general settings, including:

- **My Name:** allows you to alter the current first and last name registered with the service, as well as email address.
- **Distance Units:** allows you to alter the descriptions used for distances: **Mi/Ft** or **Km/Meters**.
- **Tips:** allows you to display onscreen tips: **Always On** or **Always Off**.
- **Initial Volume:** allows you to alter the initial volume level for the readouts: **Very Soft**, **Soft**, **Normal**, **Loud** or **Very Loud**.
- **Map Colors:** allows you to change the display colors of the onscreen map: **Daytime**, **Nighttime** or **Auto**.
- **Navigation:** lets you change navigation settings, including:
 - **Route Style:** allows you to choose the method which is used to provide you directions from Point A to Point B. The default is **Always use fastest**.
 - **Avoid:** allows you to specify which obstacles should be avoided when mapping a route: **HOV Lanes**, **Tools** or **Traffic Delays**.
 - **Moving Maps:** allows you to select the default map type displayed for your navigation: **3D** or **2D**.
 - **Backlight:** allows you to configure the Backlight setting between **Always On** or **Power Save** (times out after a few seconds).
 - **Traffic Alerts:** allows you to either enable (**On**) or disable (**Off**) real-time traffic alerts along your current route.
- **Navigation Audio:** allows you to choose whether the street names are announced during your navigation.
 - **Settings:** allows you to change the audio readouts. Options include: **Full Audio**, **Instructions Only** or **No Audio**.
 - **Guide Tones:** allows you to change the language currently used for announcements between either **English Female(US)** or **Spanish**.

Launching the Product Tour

- Press  and tap  >  > **Share & More > Product Tour.**

Section 4

***Safety and Warranty
Information***



4A. Important Safety Information

- ◆ General Precautions (page 184)
- ◆ Maintaining Safe Use of and Access to Your Phone (page 185)
- ◆ Using Your Phone With a Hearing Aid Device (page 186)
- ◆ Caring for the Battery (page 188)
- ◆ Radio Frequency (RF) Energy (page 189)
- ◆ Owner's Record (page 191)
- ◆ User Guide Proprietary Notice (page 191)

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Note: For the best care of your phone, only Sprint-authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Tip: Purchase an optional hands-free accessory at your local Sprint Store, or call Sprint at 1-866-866-7509. You can also dial # 2 2 2 on your phone.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint invoice.

Please Note the Following Information When Using Your Handset

1. WARNING REGARDING DISPLAY

- The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

2. WARRANTY DISCLAIMER: PROPER USE OF A TOUCH SCREEN HANDSET

- If your handset has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. For more information, please refer to the "4B. Manufacturer's Warranty" on page 192.

Using Your Phone With a Hearing Aid Device

A number of Sprint phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your SPH-M900 has an M4 rating.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the

better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

Note: New Technologies, Including Wi-Fi

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be newer wireless technologies (including Wi-Fi) used in this phone that have not been tested for use with hearing aids.

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.


Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "excellent use." This is synonymous for T ratings.

Sprint further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store within 30 days of purchase. (A restocking

fee may be applied to exchanges. Visit www.sprint.com/returns for details.) More information about hearing aid compatibility may be found at: www.fcc.gov, www.fda.gov, and www.accesswireless.org.

Getting the Best Hearing Device Experience With Your Phone

To further minimize interference:

- Set the phone's display and keypad backlight settings to ensure the minimum time intervals.
 1. Press  > **MENU** and touch **Settings > Sound & display > Brightness**, or **Screen timeout**.
 2. Touch the minimum time interval setting.
- Position the phone so the internal antenna is farthest from your hearing aid.
- Move the phone around to find the point with least interference.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It

appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Sprint is not aware of similar problems with Sprint phones resulting from the proper use of batteries and accessories approved by Sprint or the manufacturer of your phone. Use only Sprint-approved or manufacturer-approved batteries and accessories found at Sprint Stores or through your phone's manufacturer, or call 1-866-866-7509 to order. They're also available at www.sprint.com — click **Accessories**. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.

- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
 - Less than one month:
-4° F to 140° F (-20° C to 60° C)
 - More than one month:
-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest Sprint authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radio Frequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this

updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use a Sprint-supplied or Sprint-approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least **7/16 inch (1.5 centimeters)** from your body when transmitting. Use of non-Sprint-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR value corresponds to the relative amount of RF energy absorbed into the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than

the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SPH-M900 are:

Cellular CDMA mode (Part 22):

Head: 0.68 W/kg; Body-worn: 1.16 W/kg

PCS mode (Part 24):

Head: 0.61 W/kg; Body-worn: 0.88 W/kg

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: A3LSPHM900.

More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/ea/>.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Owner's Record

The model, regulatory and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This is helpful if you need to contact us about your phone in the future.

Model: Samsung Moment™

Serial No.:

User Guide Proprietary Notice

T9 Text Input is licensed by Nuance Communications, Inc. and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

User Guide template version 9a_FM (April 2009)

4B. Manufacturer's Warranty

◆ Manufacturer's Warranty (page 192)

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit www.sprint.com or call Sprint Customer Service at **1-888-211-4727**.

Note: In addition to the warranty provided by your phone's manufacturer, which is detailed on the following pages, Sprint offers a number of optional plans to cover your equipment for non-warranty claims. **Sprint Total Equipment Protection** provides the combined coverage of the **Sprint Equipment Replacement Program** and the **Sprint Equipment Service and Repair Program**, both of which are available separately. Each of these programs may be signed up for within 30 days of activating your phone. For more details, please visit your nearest Sprint Store or call Sprint at **1-800-584-3666**.

Manufacturer's Warranty

STANDARD LIMITED WARRANTY

What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case	90 Days
Other Phone Accessories	1 Year

What is Not Covered?

This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, neglect, unusual physical, electrical or electromechanical stress, or defects in appearance, cosmetic, decorative or structural items, including framing and any non-operative parts unless caused by SAMSUNG; (b) defects or damage resulting from excessive

force or use of a metallic object when pressing on a touch screen; (c) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (d) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (e) malfunctions resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (f) defects or damage from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (g) defects or damage from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake, or from exposure to weather conditions, or battery leakage, theft, blown fuse, or improper use of any electrical source; (h) defects or damage caused by cellular signal reception or transmission, or viruses or other software problems introduced into the Product; (i) any other acts which are not the fault of SAMSUNG; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations?

During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the original date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are The Limits On Samsung's Warranty/liability?

SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED

WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED

WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional

statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, LLC

1301 E. Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2010 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [021710]

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE

THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, DISCONTINUE USE OF THE SOFTWARE.

1. GRANT OF LICENSE. Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

2. RESERVATION OF RIGHTS AND OWNERSHIP. Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. LIMITATIONS ON END USER RIGHTS. You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works

based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.

4. CONSENT TO USE OF DATA. You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. UPGRADES. This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. SOFTWARE TRANSFER. You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the

transfer, the end user receiving the Software must agree to all the EULA terms.

7. EXPORT RESTRICTIONS. You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. TERMINATION. This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you shall cease all use of the Software and destroy all copies, full or partial, of the Software.

9. DISCLAIMER OF WARRANTIES. You expressly acknowledge and agree that use of the Software is at your sole risk and that the entire risk as to satisfactory quality, performance, accuracy and effort is with you. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE SOFTWARE IS PROVIDED "AS IS" AND WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND SAMSUNG AND ITS LICENSORS (COLLECTIVELY REFERRED TO AS "SAMSUNG" FOR THE PURPOSES OF SECTIONS 9, 10 and 11) HEREBY DISCLAIM ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE SOFTWARE, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, OF

FITNESS FOR A PARTICULAR PURPOSE, OF RELIABILITY OR AVAILABILITY, OF ACCURACY, OF LACK OF VIRUSES, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE, THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY SAMSUNG OR A SAMSUNG AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY. SHOULD THE SOFTWARE PROVE DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER, SO THESE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

10. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL SAMSUNG BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, OR FOR LOSS OF PROFITS, LOSS OF DATA, BUSINESS INTERRUPTION, OR FOR ANY PECUNIARY DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE SOFTWARE, THE

PROVISION OF OR FAILURE TO PROVIDE SUPPORT OR OTHER SERVICES, INFORMATION, SOFTWARE, AND RELATED CONTENT THROUGH THE SOFTWARE OR OTHERWISE ARISING OUT OF THE USE OF THE SOFTWARE, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS EULA, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY FOR PERSONAL INJURY, OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU.

11. LIMITATION OF LIABILITY. Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract or anything else), the entire liability of Samsung under any provision of this EULA and your exclusive remedy hereunder shall be limited to the greater of the actual damages you incur in reasonable reliance on the Software up to the amount actually paid by you for the Software or US\$5.00. The foregoing limitations, exclusions and disclaimers (including Sections 9, 10 and 11) shall apply to the maximum extent permitted by applicable law, even if any remedy fails its essential purpose.

12. U.S. GOVERNMENT END USERS. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important: Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

Phone: 1-888-987-HELP (4357)

Important: If you are using a handset other than a standard numeric dialpad, dial the numbers listed in brackets.

©2010 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Index

Numerics

3-Way Call 37, 135

A

Activation 4

ActiveSync

Configuring 160

Adapter

microSD Card 104

Add another account 157

Airplane Mode 58

Activating 58

Deactivating 58

Alarm

Customizing the Onscreen
Clock 86

Delete an Existing Alarm 86

Hiding the Onscreen Clock
86

Alarm Clock 85

Creating a New Alarm 85

Amazon MP3 171

Android Market 164

Accessing 164

Installing a Google

Application 164

Launching a Google

Application 165

My Downloads 90, 165

Redownloading a Paid

Application 169

Reinstalling a Google

Application 165

Selecting a Google

Application 164

Animation 53

Answering Calls 35

Applications 24, 165

Applications Tab

Using 24

ASR

Activation 94

Confirmation 100

Email Messaging 98

Expert Mode 101

Number Dialing 96

Picture Messaging 97

Prompt Mode 101

Readout Mode 101

Settings 100

Speech to Action button 94

Text Messaging 97

Video Messaging 98

Voice Control 94

Voice Dialing 95

Assigning Pictures 111

Audible Touch Notifications 51

Audible selection 51

Audible touch tones 51

SD card notifications 51

Automatic Speech Recognition
(ASR) 94

B

Backing Up Text Messages 90

- Backlight 53
- Backup Your Data 89
- Battery 18–20
 - Capacity 18
 - Charging 20
 - Disposal 189
 - Extending Battery Life 20
 - Installing 19
- Bluetooth 114–120
 - Accessing the Paired Device's Settings 118
 - Changing Your Bluetooth Name 116
 - Deleting Paired Devices 118
 - Disconnecting Paired Devices 117
 - Discoverable 116
 - Making Your Device Visible 116
 - Pairing 117
 - Scanning for Bluetooth Devices 116

- Sending Items 118
- Settings 115
- Browser
 - Adding Bookmarks to Home Screen 149
 - Clear cache 147
 - Clear history 147
 - Cookies 147
 - Creating Bookmarks 148
 - Creating Bookmarks from other Tabs 148
 - Enable Javascript 146
 - Home Page 148
 - Navigation 146
 - Page Settings 146
 - Passwords 147
 - Pop-up Windows 146
 - Privacy Settings 147
 - Resetting to Default 148
 - Security Settings 147
 - Select Text 145
 - Selecting Onscreen Text 145

- Text Size 146
- Browser Menu 144–149

C

- Calculator 87
 - Advanced panel 87
- Calendar 80–84
 - Adding Events 80
 - Event Reminders 82
- Call
 - Add call 37
 - Conference 37
 - Join 37
 - Three-way call 37
- Call Forwarding 136
- Call Guard 138
- Call Log 66–71
 - Altering a Number 70
 - Checking a Missed Call 69
 - Erasing 71
 - Making a Call 69
 - Options 67
 - Saving a Number 69

- Call Waiting 135
- Caller ID 134
- Calling in Lock Mode 62
- Camcorder
 - Gallery 112
 - Gallery Options 112
 - Photo & Video Places 113
 - Settings 112
 - Share 113
 - YouTube 113
- Camcorder Gallery
 - Capture Picture 113
 - Capture Video 113
 - Options 112
- Camera 107–113
 - see also Pictures
 - Gallery 108
 - Gallery Options 109
 - Image Settings 110
 - Settings 108
 - Share 110
 - Store location in pictures 108

- Taking Pictures 107
- Camera Gallery
 - Capture Picture 109
 - Capture Video 109
 - Confirm deletions 109
 - Display size 109, 113
 - Options 109
 - Repeat slideshow 109
 - Settings 109
 - Shuffle slides 109
 - Slideshow 109
 - Slideshow interval 109
 - Slideshow transition 109
 - Sort order 109
- Contacts 72–79
 - Adding a Number 77
 - Adding an Entry 72
 - Adding Entries to Your Favorites 79
 - Assigning a Picture 78
 - Assigning a Picture from Device 78

- Assigning a Picture from online Gmail 79
- Contact Menu Options 75
- Deleting Entries 79
- Dialing From 40
- Editing 77
- Editing a Number 78
- Entry Options 76
- Saving a Phone Number 73
- Sending Via Bluetooth 118

D

- Data Roaming Guard 139
- Data Services 141–169
 - see also Web
 - FAQs 169
 - Launching the Web 142
 - Password 6
 - User Name 141
- Data Synchronization
 - Configuring 163
- Delete Thread 57
- Device (illus.) 11

- Device Settings 50–65
 - Airplane Mode 58
 - Display Settings 53–55
 - Location Settings 55
 - Messaging Settings 56–57
 - Sound Settings 50–52
 - TTY Use 59

- Device Updates 87, 93
- Dialing Options 35
- Disconnecting a Bluetooth Device 117
- Display Screen 14, 54

E

- Edit Sync Groups
 - Assigning a Picture to Device 79
- Edit text menu 78
- Editing Sync Groups 74
 - Gmail 74
 - Sync all contacts 74
- Email 151
 - Icons/Shortcuts 152

- Notifications 152
- Emergency call 63
- Emergency Numbers 36
- Emoticons 14, 45, 129, 130
- End-of-Call Options 38
- Enhanced 911 (E911) 37
- Entering Text 41–48

- ABC Mode 43
- Emoticons 48
- Numbers 44, 47
- Onscreen Keyboard 41
- QWERTY Keyboard 44
- Selecting Mode 41
- Smileys 47, 48
- Suggested Word 43
- Symbols 44, 47
- Erasing Device Content 64
- Event Reminders 82
 - Settings 83
- Exchange Mail
 - Backup 89

F

- Factory data reset 64
- Favorites 40, 79
- FCC Notice 190
- File Viewer 85
 - Accessing 85
- Folders
 - Creating and Managing 29
- Forgot My Unlock Pattern 62

G

- Gmail 74
 - Accessing Email Messages 155
 - Account Settings 156
 - Assigning a Contacts Image 79
 - Backup 89
 - Create and Send 154
 - Creation 153
 - Deleting 155
 - Email Signature 154
 - Opening 153

- Refresh 153
- Replying 155
- Viewing a New Email 155

- Google
 - Account Signin 49
 - Creating an Account 48
- Google Applications
 - Backup 90
- Google Maps 175
 - Enabling the GPS 176
 - Launching 176
 - Searching 176
- GPS Navigation 177
- GPS satellites 56, 176
- GPS Services 175

H

- Haptic feedback 52
- History 66
- Home Screen
 - Adding Web Bookmarks 149
 - Customizing 27

- Extended Screens 22
- Overview 21

I

- In-Call Options 37
- Instant Messaging 163
- International Dialing Code
 - Changing 57
- Internet
 - see Web
- Internet Email
 - Adding Additional Accounts 157

K

- Key Functions 11

L

- Language Settings 55
- Location Mode
 - Activating 175
- Location Settings 55
- Lock Mode
 - Calling 62
- Locking Your Device 60

M

- Making Calls 34
- Media volume 51
- Memory
 - Clearing Application Cache 64
 - Internal phone storage 63
 - Management 63
 - SD card 63
 - Uninstalling Third-Party Applications 64
- Menu i
 - Navigation 21
- Menu Navigation 30
 - Using Your Fingers 31
 - Using your Keyboard 33
 - Using your Optical Joystick 32
- Message
 - Settings 133
- Message Threads
 - Deleting 133

- Messages
 - Threads 57
- Messaging
 - Deleting Old Text Messages 57
 - Email 151
 - Instant Messaging 163
 - Multimedia Messaging 130
 - Notification 56
 - Text Messaging 128
 - Visual Voicemail 122
- microSD 102, 103
 - Before You Begin 105
- microSD Card 102–106
 - Adapter 104
 - File Viewer 85
 - Formatting 106
 - Re-insertion 103
 - Removal 102
 - SDHC 102
 - Write Protection 104
- Missed Calls 36

- MMS Text Messaging 130
- Multimedia Messaging 130
 - Composing 130
 - Opening 132
 - Replying to 133
 - Settings 133
- Music 171–173
 - Assigning a New Ringtone 173
 - Creating a Playlist 172
 - Player 172
 - Playlist 172
 - Purchasing and
 - Downloading 171
 - Streaming Music 173
 - Using a Song as a Ringtone 173
- My Downloads 165
- My Driver 167
- My Favorites
 - Creating from a Category 181

- Creating from a Recent Place 181

N

- NASCAR 166
 - All-Star 167
 - Exit 168
 - Fantasy 167
 - FanZone 167
 - Leaderboard 167
 - Miss Sprint 167
 - News & Alerts 167
 - Race Radio 167
 - Race Recap 167
 - Settings and Help 167
 - Speed 167
 - Stats/Sched 167
 - Video 167
- Navigating the Menus 21
- Navigating the Web 143
- Navigation
 - Business 180

Finding the Lowest Gas Price
180

Navigation Preferences 181

Navigation, GPS 177

NFL Mobile Live 168

North american dialing 57

O

Orientation 32, 53

OTA (Over the Air) 87

Outlook Email 157

Owner's Record 191

P

Pairing Bluetooth Devices 117

PCStudio

Removing 90

Phone Book

see Contacts

Phone Number

Displaying 34

Finding 39

Saving 39, 73

Phone vibrate 52

Photo & Video Places 110, 113

Picasa 110

Picture ID 111

Pictures 54

Sending Via Bluetooth 118

Taking Pictures 107

Predictive Text 43

PRL Updates

Downloading 93

Product Tour 182

Profile Updates

Downloading 93

R

Recent Location

Adding to My Favorites 181

Sharing 181

Recently-Used Applications

Accessing 30

Resetting Your Device 64

Ringer volume 51

Ringers

S

Setting Audible Touch Tones
50

Setting for Messages 51

Setting for Notifications 51

Setting for Voice Calls 50

Silence All 52

Types 50

Vibrate 52

Roaming 136–??

Call Guard 138

Data Roaming Guard 139

Roam Mode 137

Safety Information 184–191

Samsung Drivers

Removing 90

Saving a Phone Number 39, 73

Screen Orientation 53

Screen timeout 53

Security 60–63

Menu 60

Set Wallpaper 54

- Settings 50–65
- Share
 - Photo & Video Places 110
- Shortcuts
 - Creating 27
 - Deleting 28
 - Via Add to Home screen 28
 - Via Applications Tab 27
- Silence All 52
- Silent mode 52
- Slideshow
 - Interval 109
 - Repeat 109
 - Transition 109
- Smiley 14, 129, 130
- Smileys 45
- SMS Text Messaging 128
- Software Updates
 - Downloading 87
 - Firmware 87
- Software Upgrade Tool
 - Installation 91

- Speech to Action
 - see ASR and Voice Control 94
- Speed Dialing
 - Favorites 40
- Sprint Football Live
 - Draft 168
 - Exit 168
 - Favorite Team 168
 - Help/About 168
 - News 168
 - Team Pages 168
 - Tweets 168
- Sprint Navigation 177
- Sprint Service
 - Account Passwords 5
 - Activation 4
 - Operator Services 7
 - Sprint 411 7
- Sprint TV 170
- SprintTV 170
- Streaming Music 173

- Suggested Word Choices 42

T

- Taking Pictures 107
- Text
 - Selecting on Web Page 145
- Text Entry
 - see Entering Text 44
- Text Input 43
- Text Message
 - Backup 90
- Text Messaging 128
 - Settings 133
- Third-Party Applications
 - Uninstalling 64
- Three-Way Calling 135
- TRS 59
- TTY Use 59
- Turning Your Device On and Off 17
- TV 170

U

- Unlock Pattern 60

- Changing the Pattern 62
- Configuring Settings 62
- Creating 61
- Forgotten Your Pattern 62
- Require pattern 62
- Use visible pattern 62
- Unlocking Your Device 60
- Unpairing a Bluetooth Device 118
- Update Android 93
- Update Firmware 87
- Updating Firmware
 - OTA 87
 - Software 88
- Updating Your Device
 - Firmware 87
- Updating Your PRL 93
- Updating Your Profile 93
- Use Wireless Networks
 - Activating 175
- User Name 141
 - Finding 142

V

- Updating 142
- Vibrate 52
 - Haptic feedback 52
- Videos
 - Recording 111
 - Settings 113
- Visual Voicemail
 - Changing your Main Greeting 126
 - Configuring Notifications 125
 - Configuring Pictures 126
 - Editing the From Name 127
 - Enabling the Speakerphone 126
 - Options 124
 - Setting Up 122
 - Settings 125
- Voice Control 94
 - see ASR and Speech to Action 94
- Voice Dialing 95

W

- Voicemail
 - Notification 127
 - Retrieving 128
 - Setting Up 5
- Volume
 - Media 51
 - Ringer 51
- Wallpaper 54
 - Home screen 111
- Wallpaper Gallery 54
- Warranty 192
- Web 141–149
 - see also Data Services
 - Browser Menu 144–149
 - Email 151
 - Going to a Web page 144
 - Instant Messaging 163
 - Launching 142
 - Navigating 143
 - User Name 141
 - Web Bookmarks 148

- Wi-Fi
 - Connecting to a Network 150
 - Manually Scanning 151
 - Settings 151
 - Status Indicators 151
 - Turning Off 150
 - Turning On 149
- Window Animation 53
- Wireless Networks 56
- Work Email 110, 157
 - ActiveSync 160
 - ActiveSync Settings 160
 - Backup 89
 - Configuration 160
 - Configuring Settings 161
 - Create and Send 158
 - Creating a Signature 163
 - Creation 157
 - Deleting 160
 - Email Settings 160
 - Misc tab 162
 - Opening 158
 - Receive tab 162
 - Replying 160
 - Send tab 162
 - Viewer scale 162
 - Write Protection 104

Y

- YouTube 173